

WIRELESS PAGER/  
CHIME USER MANUAL

To Customers:

Thank you for purchasing our night light receiver series. This product has many useful functions, such as night light, memory function, wireless, long range, no wifi, no subscription fee, an expandable wireless system.  
Note: This is a general manual, so you will see other different accessories, such as call button/wrist button/magnet sensor/dog touch button,do not be surprised, their operating instructions are almost the same, we believe that this should help you better use our products.  
Any questions you can contact us through the Amazon!


Features:

- 1.Night Light : you can open the night light function in the night. (Press and hold the middle button(Backward) for 5 seconds to turn on/off).
- 2.55 Ringtones: you can choose your favorite ringtone among 55 ringtones, and you can also set different ringtone for different transmitter for better differentiation.
- 3.Expandable System: you can flexibly add or decrease receivers or transmitters according to your needs, and the pairing method is simple and easy to operate.
- 4.Memory function: the set ringtone can be locked by memory after the power is off, and the set ringtone can still be the same after the power is on.

5.5Level Volume: 0-110DB, 0DB, 30DB, 60DB, 90DB, 110DB, independent mute mode gives you a better experience.  
6.Long Range: The wireless range can be up to 100 meters (328ft) in the open air, the range signal is stable and does not interfere with each other, but when there is many barriers, the range will be weaken, you need to test the range before use.


Product Diagram:

1.Receiver

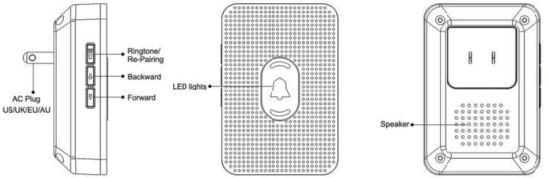


2.Transmitter--(Call Button/Wrist Button/Magnet Sensor/Dog Touch Button)

 2.1 Call Button

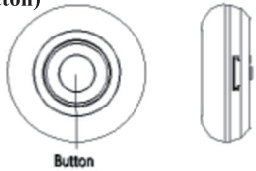

 2.2 Door Magnet Sensor

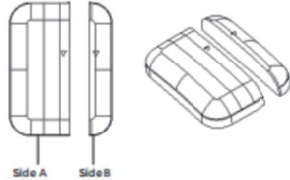

2.3 Wrist Button



2.4 Dog Touch Button



First Use Guide:

We have finished pairing before shipping, you don't need to re-pair again (unless you want to change the ringtone), you just need to plug into the socket, install the transmitter and it will work fine.

Call button Installation Guide

There are two ways to install the call button, you can use double-sided tape to stick it or fix it by screws (screws and double-side tape are included)

Door Sensor Installation Guide

- 1.Door contact sensor can adapt to many different types of door/window frames. Please ensure that the horizontal installation gap between them is less than or equal to 0.6 inches. Please do not install the door sensor on the iron door.(It will weak the range)
- 2.Fixing with double-side adhesive The surface of the door or window must be clean and dry to ensure the double-side adhesive properly.

Dog Touch Button Installation Guide

Use the Velcro in the box to install the dog touch button, determine the location of the installation, wipe clean and ensure dry, peel off the Velcro stickers, stick one side on the selected location, the other side on the bottom of the dog button.

Change The Ringtone/Re-Pairing:

- Step1: Press the receiver's music key to select the ringtone.
- Step2: Press and hold the volume button of the receiver until the LED light flashes and emits a “ding” sound to enter the pairing mode(that means the receiver entered into the pairing mode,the pairing mode only last 8 seconds,it will automatically exit).
- Step3: Press the button or separate the door sensor over 1.5cm (0.6inch) to send a signal,then the receiver will makes a ”ding-ding” sound and flashes.
- Step4: Press the button or separate the door sensor again to confirm the pairing.

Clearing The Setting:

Press and hold the receiver forward key until the receiver’s LED light flashes and emits a “ding” sound,wait about 10 seconds,the receiver emits a”ding”, it means that the pairing has been reset.



Trouble Shooting

Not working after receive the package or not working after a period of use?

Maybe the reason below:

- 1. The distance between the receiver and the transmitter is too far or there are other obstacles affecting the signal distance, try to shorten the distance between the transmitter and the receiver.
- 2. The receiver and the transmitter are not paired successfully resulting in not working, need to re-pair (according to Change The Ringtone/Re-Pairing )
- 3. The pairing information between the receiver and transmitter was cleared accidentally and needs to be re-paired (according to Change The Ringtone/Re-Pairing)
- 4. The battery of the transmitter is too low to transmit the signal properly, and needs to be replaced with a new battery.

If the above methods still can not solve your problem, please contact us via Amazon and we will provide a solution.

Cautions:


- \* Please test the working distance between the receiver and the transmitter before install it!

- \* Do not install the transmitter on the security door, the metal will weaken the signal and affect working range!
- \* Do not install the receiver next to TV sets, induction cookers, microwave ovens and other appliances with electromagnetic waves!
- \* Do not set fire to receivers and transmitters to avoid unnecessary accidents!

Specifications:

|                       |                                 |
|-----------------------|---------------------------------|
| Operating Temperature | -30℃ to +70℃                    |
| Working Frequency     | 433.92MHz±280KHz                |
| Transmitter Battery   | 23A 12V alkaline battery/CR2032 |
| Receiver Voltage      | AC 110-260V (Wide Voltage)      |

Change the Battery of the Call Button

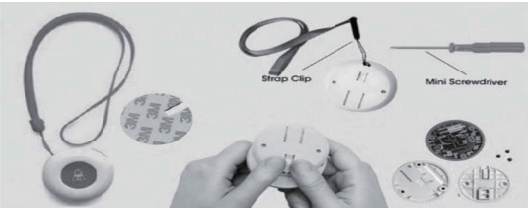

Ringtone List

- |                               |                                |
|-------------------------------|--------------------------------|
| 1 Dingdong+Dingdong           | 23 Matador B                   |
| 2 Ringtones                   | 24 Merry Christmas             |
| 3 Ding Ding Dong              | 25 Classic Ringtones           |
| 4 Ding Dong Twice             | 26 classic sound effects       |
| 5 Ding Dong Once              | 27 ringtones                   |
| 6 Westminster Abbey           | 28 yessenia                    |
| 7 Ding Dong x2 + Ding Dong x2 | 29 Wilson March                |
| 8 sound effects i35i          | 30 Nutcracker                  |
| 9 sound effects i531          | 31 The Golden Wedding Ceremony |
| 10 birdsong                   | 32 Victory March               |
| 11 Barking Dog                | 33 Sound Effect i35i           |
| 12 Cuckoo Waltz               | 34 Toast Song                  |
| 13 The Spanish Girl           | 35 HAPPY BIRTHDAY              |
| 14 Haydn for piano            | 36 Four Little Swans           |
| 15 Slow Ding Dong + Ding Dong | 37 Sound effects i531          |
| 16 Letter to Mother           | 38 The Little Mermaid          |
| 17 NOCK                       | 39 Seine River                 |
| 18 Cuckoo                     | 40 Scarborough Fair            |
| 19 Green sleeves              | 41 McDull                      |
| 20 Radesky March              | 42 A Romantic Story            |
| 21 Turkish March              | 43 Alice                       |
| 22 Matador A                  | 44 double ding dong            |

- |                         |                                     |
|-------------------------|-------------------------------------|
| 45 ah friends           | 50 Paganini                         |
| 46 susanna              | 51 Jingle Bells                     |
| 47 Adilina by the River | 52 Happy Sunday                     |
| 48 Red River Valley     | 54 Polka                            |
| 49 Blue Love            | 55 Night in the outskirts of Moscow |

For any product quality and after-sales warranty issues, you can contact us via Amazon messages or through the following:  
Brand:DAYTECH  
Manufacturer: Quanzhou Daytech Electronics Co., Ltd.  
Address:4/f, Building 5, Hengdali Shoes Factory, Chidian Town, Quanzhou, Fujian, China  
Website: www.daytech-security.com  
After-sale service: <support@daytech-security.com>