



TCL电子控股有限公司
TCL Electronics Holdings Ltd.
PRODUCTION FORM

品牌/区域(Brand/Region): TCL / NA
BOM编号(BOM No.): _____

版本号(Version) : V0.2
物料编码 : _____
(Part No.)
物料名称 : QSG
(Part Name)
型 号 : Q95K
(Model No.)
日 期 : 2026-06-26
(D a t e)

比例(Scale) : 1:1
尺寸(Size) : 210*140 mm
材料(Material) : _____
颜色(Colour) : 白底黑字

制作人
PREPARED BY: _____

平面审核
CHECKED BY: _____

美工/质量/产品
项目审核
CHECKED BY: _____

规划/市场审批
APPROVED BY: _____

TCL

Q95K

11.1.4 Channel Dolby Atmos Sound Bar with Wireless Subwoofer
and Satellite Speakers

 
Quick Start Guide



1

Register Your Product

Register your TCL Sound Bar to receive the latest news on product releases, promotional offers, and more!*

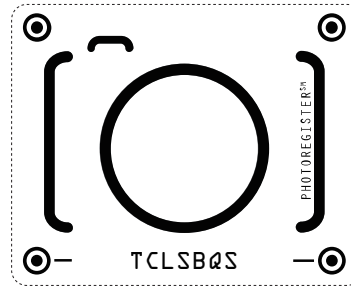

TEXT TO REGISTER

Text a photo of the camera icon to 71403

Or register online at register.tcl.com

Need help? Visit photoregister.com/help or text HELP to 71403

Enjoy exclusive benefits with registration:



Expedited support and service



Insider tips on your Sound Bar



Exclusive offers and promotions



Verification of ownership

*Only Available to North America Customers

2

What's in the box

Make sure you read all the safety information before you use this product.

User Manual can be found at www.tcl.com on the specific product page in the "Download" section.



Warning:

 
To avoid the danger of suffocation, keep plastic packaging away from pets, babies, and children. Do not use packaging bags in cribs, beds, carriages, or playpens.

Note:


Figures and illustrations in this QSG are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.



Sound Bar

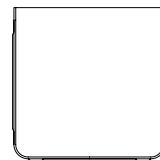

Subwoofer

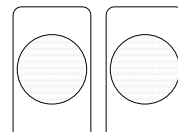 

Satellite Speaker x 2



Power Cord x 4



HDMI Cable
(For reference only)



 
Remote Control




Wall Mount Bracket x 2



Wall Anchor x 2



Wall Mounting Screw x 2
M5*40 mm

 

Spacer Pads



Quick Start Guide



 
Warranty Card



Wall Mount Template

Sound Bar

- ❶ Volume buttons:
Press to increase or decrease the volume level
- ❷ Power button:
Short press: power on/power off
Long press: power off
- ❸ Source button:
Short press: Switch input sources
(HDMI eARC/OPT/USB/Bluetooth/HDMI IN 1/
HDMI IN 2)
Long press: Press and hold for 10 seconds to
enter pairing mode for the subwoofer or
satellite speakers (if disconnected).
- ❹ Bluetooth button:
Short press: Switch to Bluetooth mode.
Long press: Enter Bluetooth pairing mode.
- ❺ LED display:
Displays the Sound Bar source or control status
Receive signal from the remote control
- ❻ AC input power connector
- ❼ HDMI eARC connector
- ❽ HDMI IN 1 connector
- ❾ HDMI IN 2 connector
- ❿ Optical input connector
- ⓫ USB Type A connector

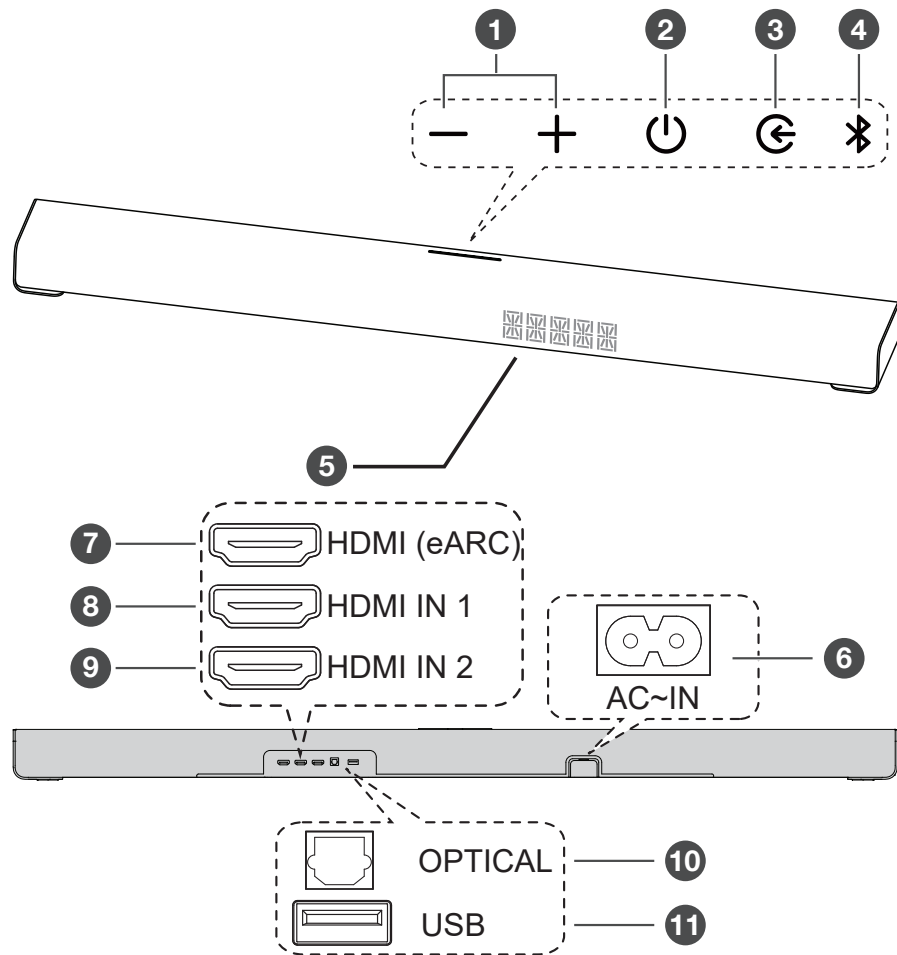


3b Overview

Wireless Subwoofer

The subwoofer powers on automatically when connected to power. When the Sound Bar enters standby mode, the subwoofer will enter standby mode immediately.

The subwoofer automatically pairs with the Sound Bar upon first use. If connection issues occur, follow these steps to pair manually:

 1. Press and hold the "PAIR" button on the subwoofer for 3 seconds until the indicator light next to the "PAIR" button starts flashing quickly to enter pairing mode.
2. At this time, press and hold the  button on the Sound Bar panel for 10 seconds until the Sound Bar LED display shows "SETUP PAIRING".
3. When paired successfully, the indicator light on the subwoofer will stay solid, and the Sound Bar LED display will show "SUB CONNECTED".

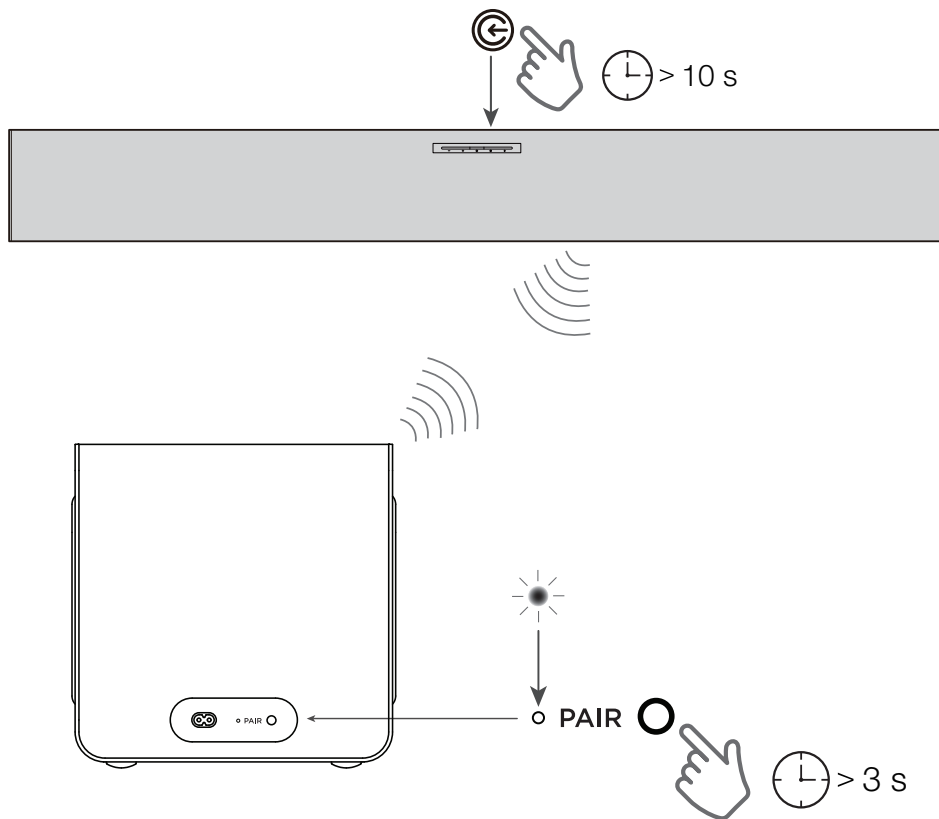


Satellite Speaker


The satellite speakers power on automatically when connected to power. When the Sound Bar enters standby mode, the satellite speakers will enter standby mode immediately.

The satellite speakers automatically pair with the Sound Bar upon first use. If connection issues occur, follow these steps to pair manually:

 1. Press and hold the "PAIR" button on the satellite speaker for 3 seconds until the indicator light above the "PAIR" button flashes quickly, entering pairing mode.
2. At this time, press and hold the  button on the Sound Bar panel for 10 seconds until the Sound Bar LED display shows "SETUP PAIRING".
3. When paired successfully, the indicator light on the satellite speaker will stay solid, and the Sound Bar LED display will show "SURR CONNECTED".

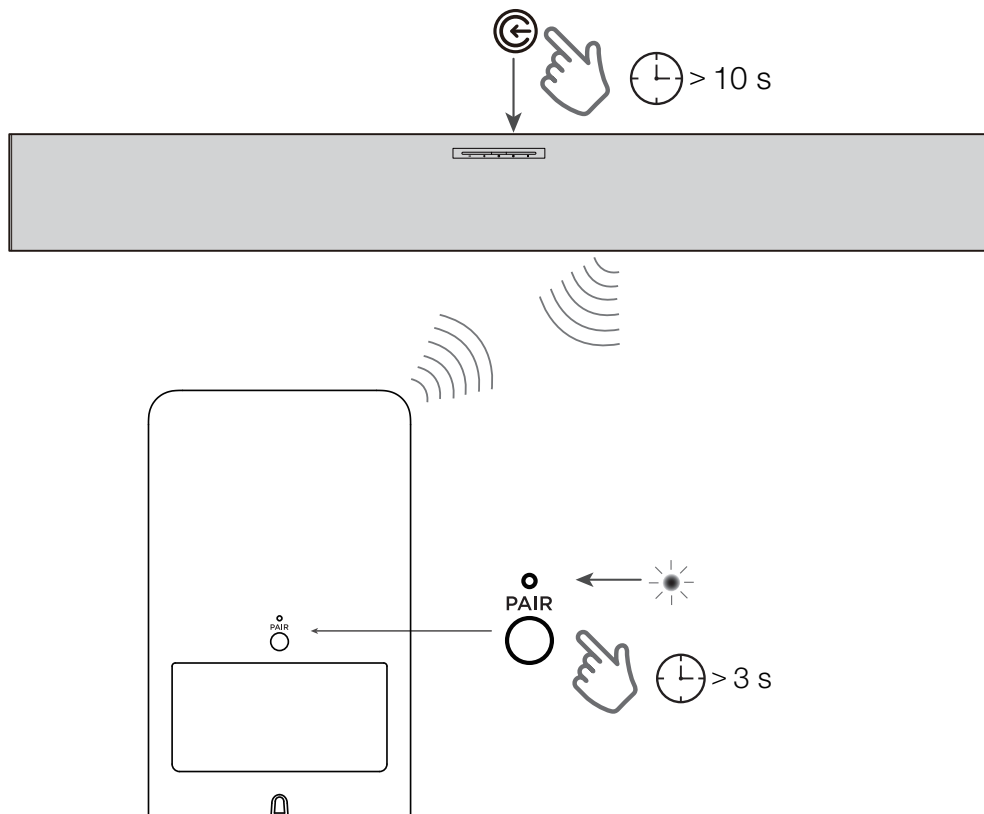

 The Sound Bar LED display indicates various Sound Bar functions.



Note:

• **Factory reset:** Press and hold **⏻**, **+**, and **-** on the Sound Bar panel simultaneously for 10 seconds until the LED display shows "FACTORY RESET", then the device will automatically restart.

• **View version:** While the device is powered on or in standby mode, press and hold **+** and **-** on the Sound Bar panel for 10 seconds, or press **▶**, **◀**, and **+** on the remote control (please follow the sequence and keep the interval within 2 seconds).

• **Automatic standby switch:** In the powered-on state, press and hold the **⏻** and **⏸** on the remote control simultaneously for 10 seconds. If this function is enabled, the Sound Bar will enter an automatic standby state after 20 minutes without signal input.

• **WIFI Factory Reset and Network Configuration:** While the device is powered on, press and hold the **⏻** and **+** buttons on the Sound Bar panel for 10 seconds. The Sound Bar's WIFI will be restored to factory settings and enter network configuration pairing mode.

	Sound Bar Status	LED Display Status
Power	Power on	HELLO
	Power off	STDBY / SLEEP
Source	HDMI eARC (TV Disconnected)	HDMI EARC
	HDMI eARC (TV Connected)	HDMI EARC
	USB	USB
	Bluetooth	BT
	HDMI IN	HDMI IN 1/HDMI IN 2
	OPT	OPT
Bluetooth	Bluetooth mode	BT
	Pairing mode	PAIRING
Volume control	Volume level	V30
	Mute	MUTE
Audio setting	Bass (+/-)	BAS-6~+6
	Treble (+/-)	TRE-6~+6
	AI SONIC	POSITION 1 / POSITION 2 / POSITION 3 / OFF
	Surround Enhance	SURR OFF / SURR LOW / SURR MEDIUM / SURR HIGH
	Voice Enhance	VOICE OFF / VOICE LOW / VOICE MEDIUM / VOICE HIGH
Sound modes	Standard/Movie/Music/Voice/ Game/Night/Sports/Custom	STANDARD / MOVIE / MUSIC / VOICE / GAME / NIGHT / SPORTS / CUSTOM
Casting	Airplay	AIRPLAY
	Google Cast	GOOGLE CAST
	Spotify Connect	SPOTIFY

5a

Speaker Placement

 
The ideal location for the Sound Bar is centered beneath the TV.

The ideal location for the Subwoofer is on the floor, adjacent to the TV.



Note: Do not place your Sound Bar in a location exposed to direct sunlight, heat, fire, or moisture.


Top View

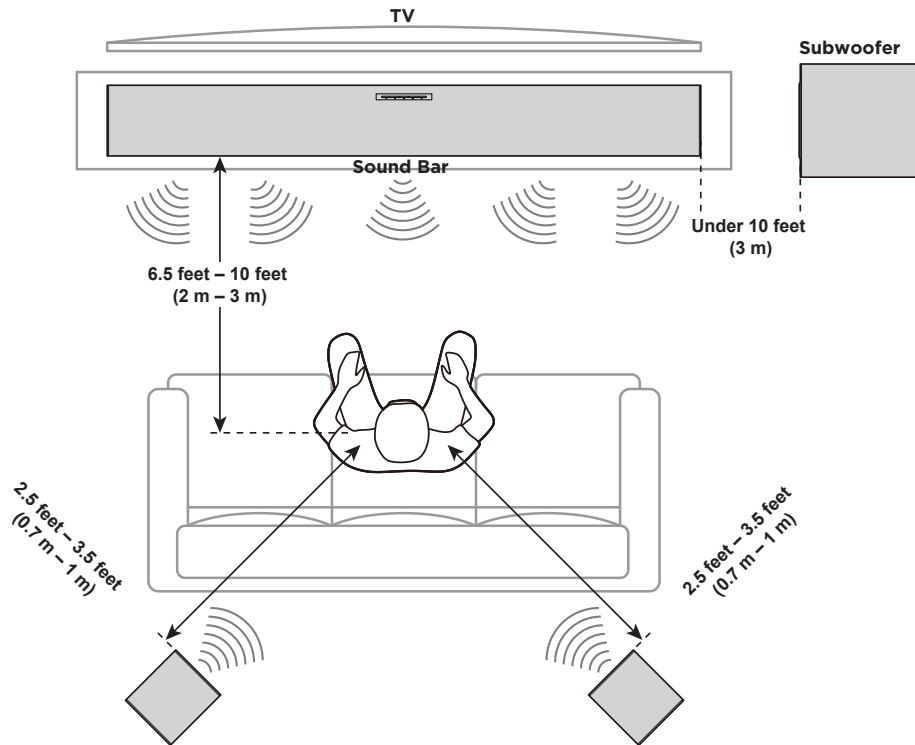



5b

Wall Mount Installation

 Required tools:



1. Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches/5 cm below the center of the TV.
2. Use a level to make sure the wall mount template is positioned accurately.
3. Use the tape to stick the wall mount template firmly on the wall.
4. Mark the screw hole positions on the wall through the template.
5. Take away the wall mount template.
6. Drill holes at the markings.
7. Insert the wall anchors into the holes in the wall.
8. Insert the included screws through the wall mount brackets and into the wall anchors.
9. Tighten the screws to secure the wall mount brackets to the wall.

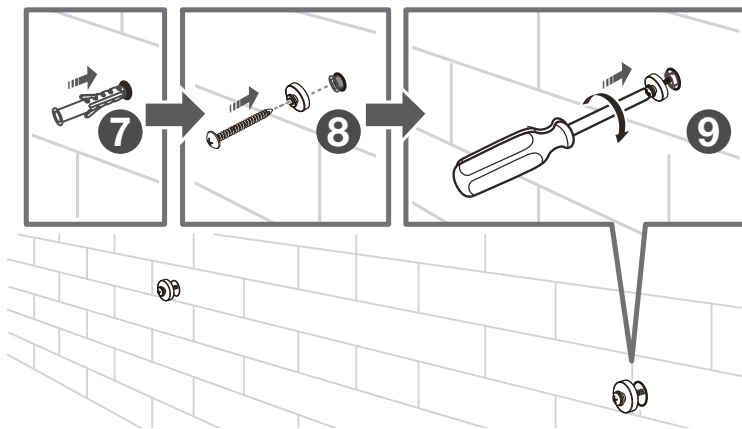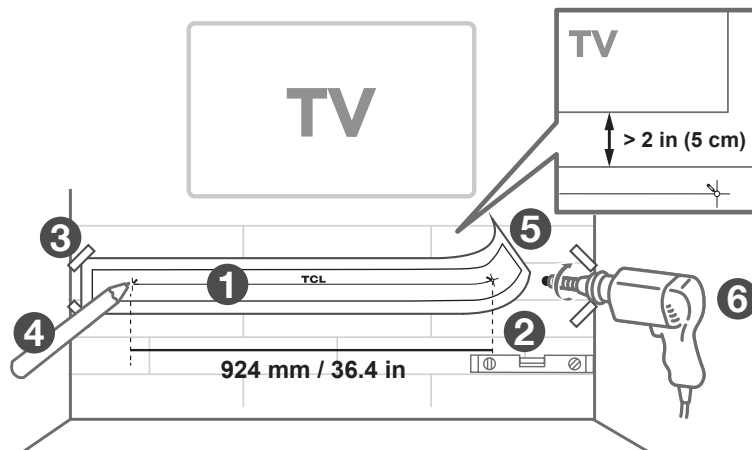  

5c

Wall Mount Installation


10. Attach the included Spacer Pads to the bottom case of the Sound Bar.

11. Pick up the Sound Bar (with the display facing up, plug in the power cord and any necessary HDMI or optical cables), align the mounting holes on both ends of the Sound Bar with the wall mount brackets, and snap it downwards to securely lock the Sound Bar onto the wall.



Note:

- Do not place the Sound Bar in direct sunlight, high temperatures, open flames, or humid environments. Suitable mounting height: < 78.74 inches/2 meters.

 10

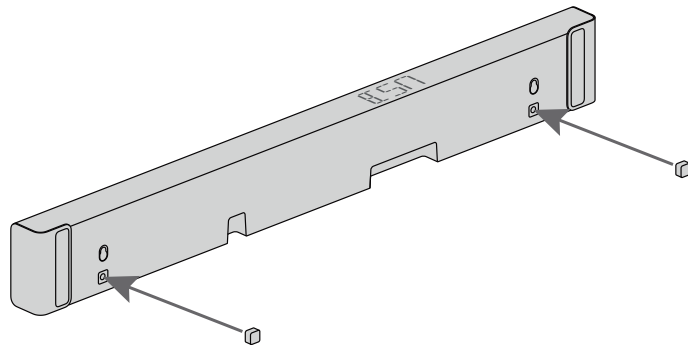


11

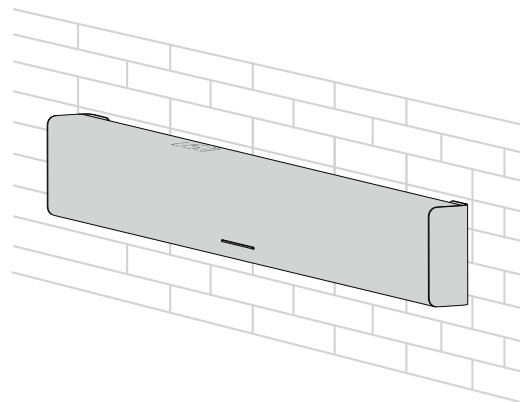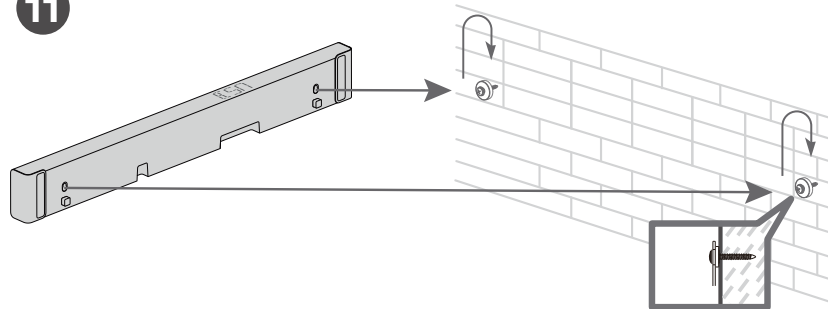  

6a

Install or replace the remote batteries

 Battery type: 1.5V AAA battery x 2

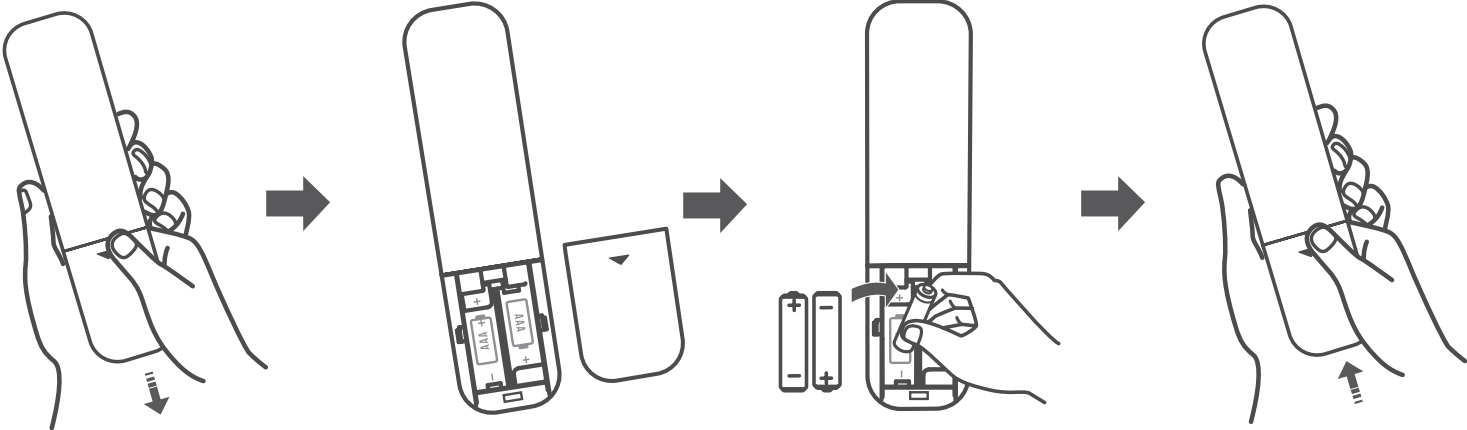


6b

Use the Remote

Note:

 - ① Source: HDMI eARC/OPTICAL/USB/BT/HDMI IN 1/HDMI IN 2
- ② Audio Format: PCM AUDIO/DOLBY SURROUND/DOLBY ATMOS/DTS/DTS HD/DTS:X, etc.

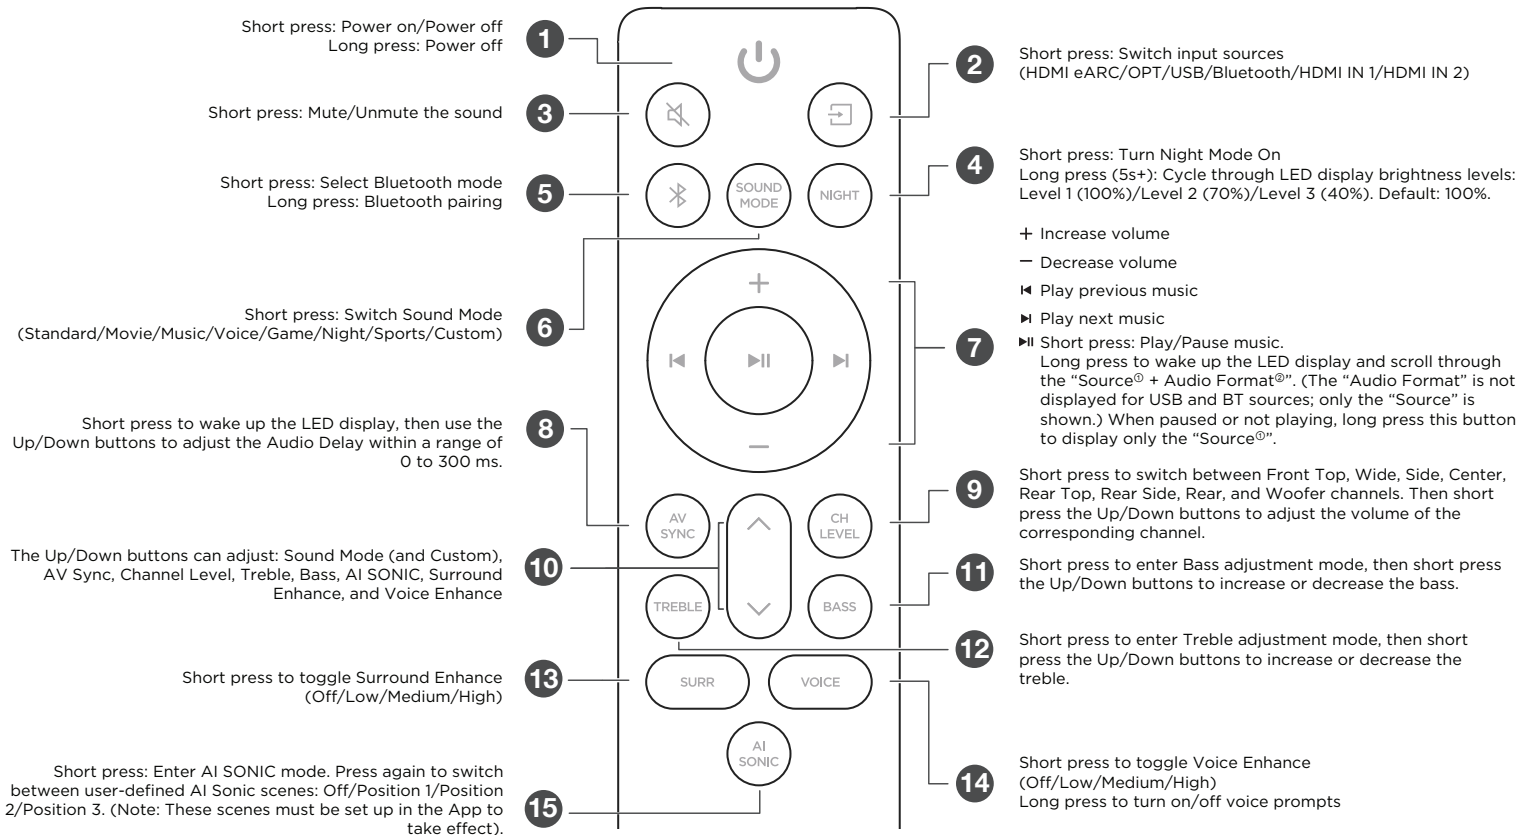

7

TV Connection

 
There are 2 ways to connect your Sound Bar to the TV (listed in order that we recommend):
HDMI eARC (refer to 7a),
and Optical (refer to 7c).

If you have a TCL TV, simply plug in the HDMI cable to the eARC/ARC ports and follow the TCL TV Ready on-screen instructions.




TCL TV Ready

This function is available in some TCL TVs and some TCL models.

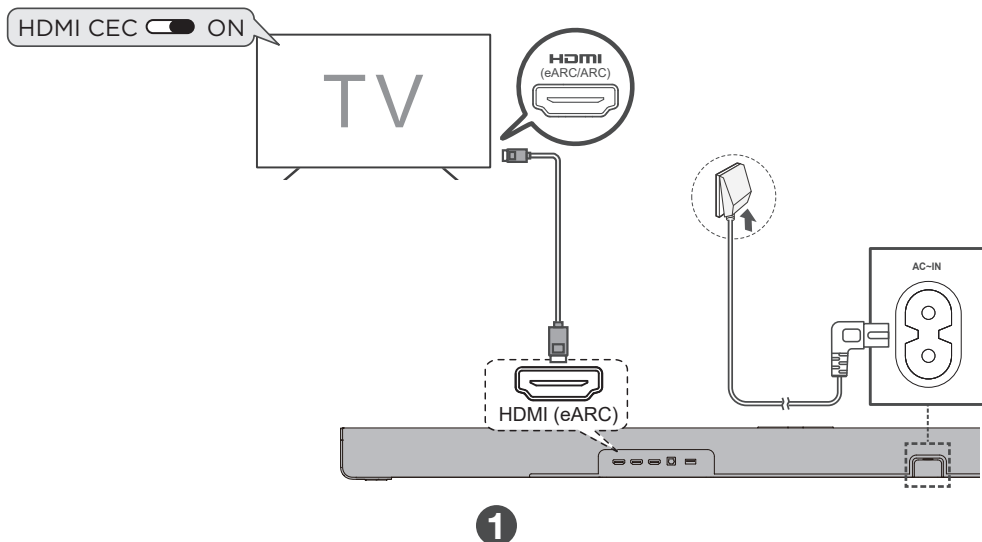

2

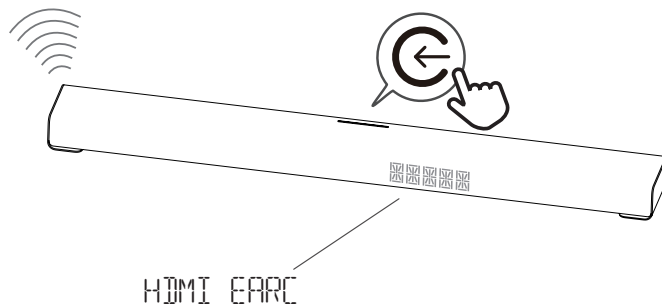 


Connect the Sound Bar to your TV with the included HDMI cable.

Connect the Sound Bar to the power outlet with the included power cord.


Enable CEC function on TCL TV.

 - 1 Connect HDMI cable from the HDMI (eARC) interface on the Sound Bar to the HDMI (eARC/ARC) interface on the TV.
- 2 Enable the CEC function in the settings of the TCL TV.
(See TV User Manual for instructions)

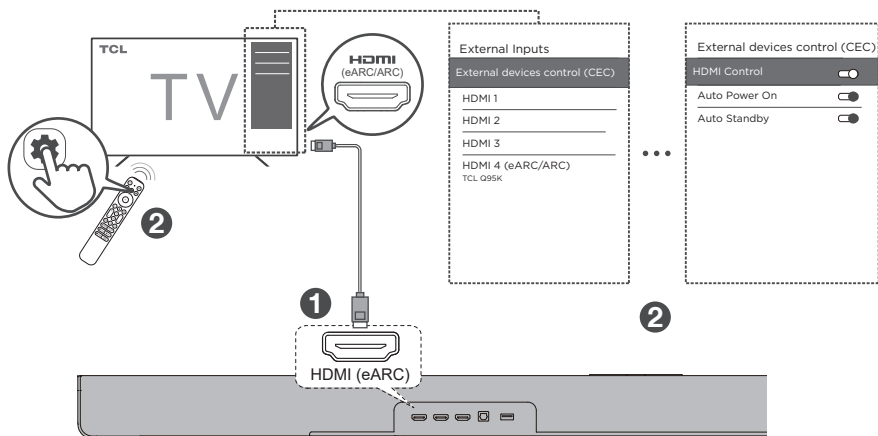

Enable CEC function on other brand TV.

 - 1 Connect HDMI cable from the HDMI (eARC) interface on the Sound Bar to the HDMI (eARC/ARC) interface on the TV.
- 2 Enable the CEC function in the settings of the TV.

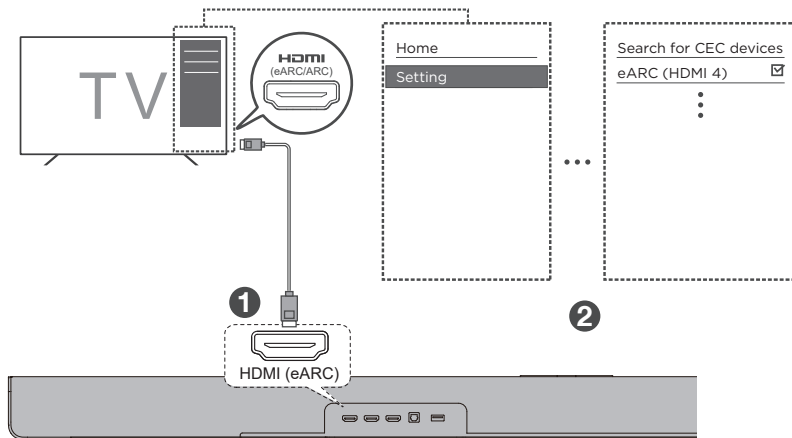


Note:
CEC (Consumer Electronic Control) function naming may differ by TV manufacturer.
This feature may be called CEC, Anynet+, SimpLink, BRAVIA Link, EasyLink or VIERA Link. Please see your TV's user manual for more information.

1. Connect one end of the HDMI cable to the HDMI eARC input on the Sound Bar, and the other end to the HDMI (eARC/ARC) output on the TV.
2. Connect one end of another HDMI cable to the HDMI IN 1 or HDMI IN 2 on the Sound Bar, and the other end to the HDMI output on the external device (e.g., Blu-ray player).
3. Switch the Sound Bar source to "HDMI IN 1" or "HDMI IN 2".



Note:

 
Make sure to use high-speed HDMI cables that support the required audio/video formats.

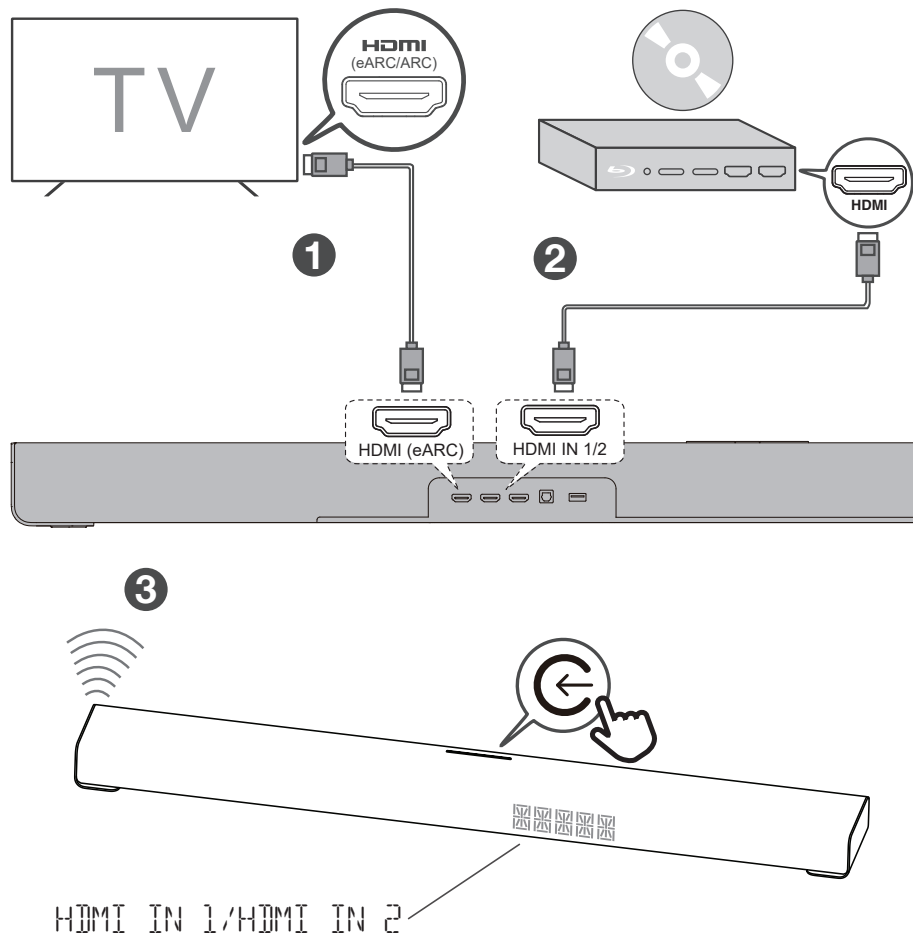

Connect the Sound Bar to the TV with an Optical cable.



 
Warning:
Do not bend or kink the optical cable as it is fragile and can easily get damaged and broken.

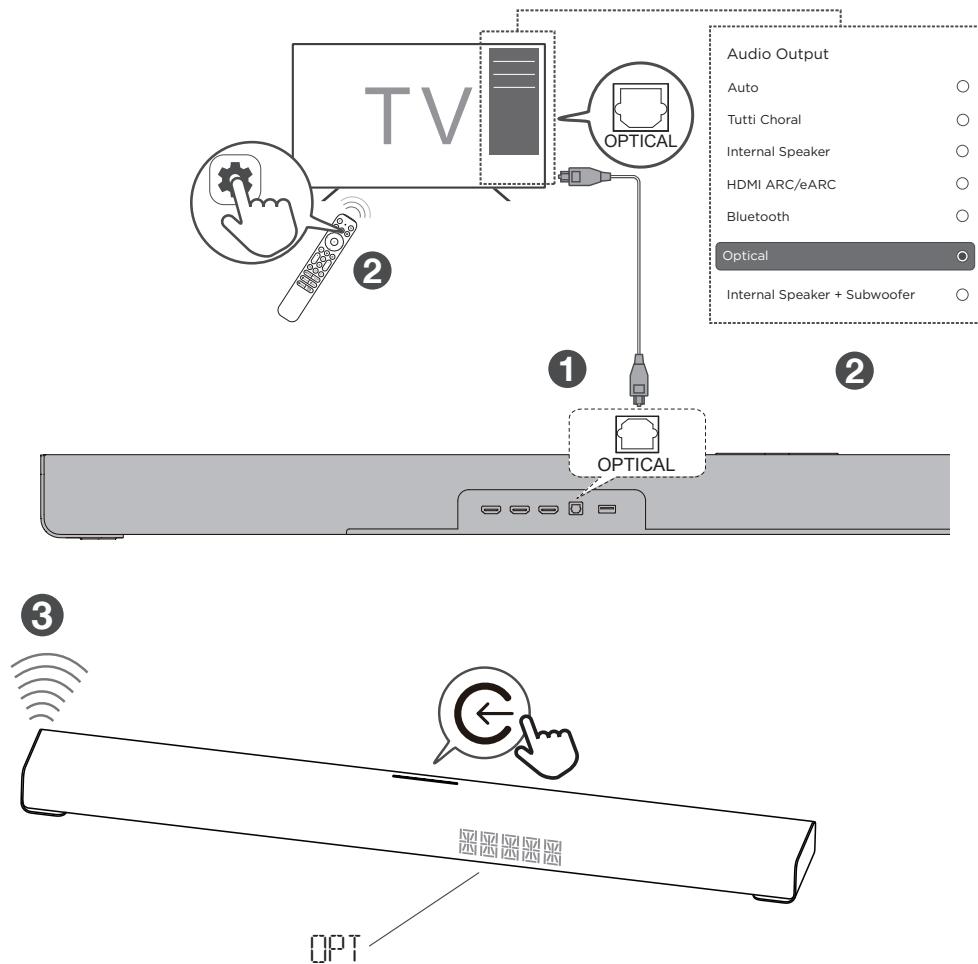

8

Bluetooth Pairing

 1. Press the  button.
2. Press and hold the  button on the Sound Bar.
→ The LED display shows "PAIRING". The Sound Bar is ready to pair.
- 3 Turn on your Bluetooth device and ensure it is in pairing mode.
- 4 Select TCL Q95K.
→ The LED display shows "BT CONNECTED".
Pairing is successful.
- 5 Repeat the steps above to pair with other Bluetooth devices.

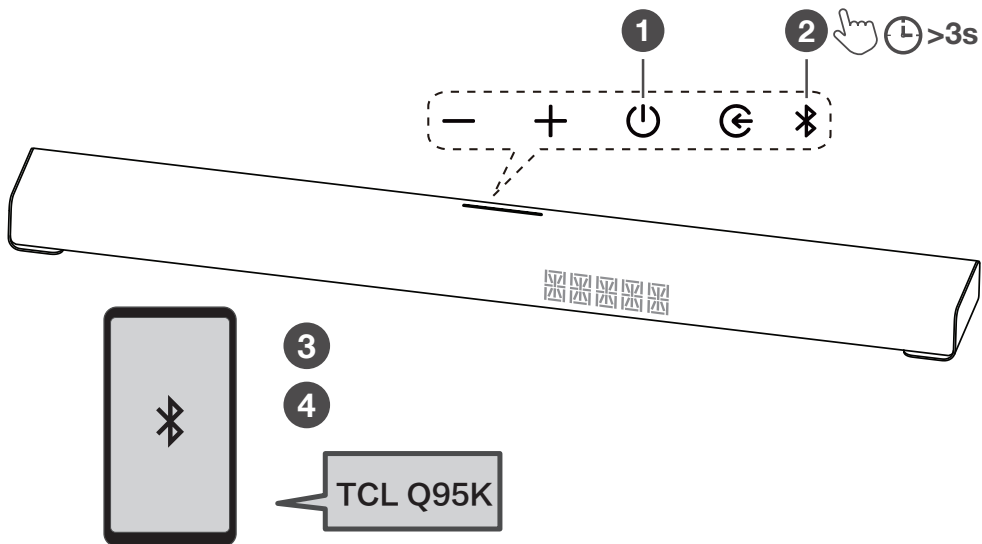


9

Other connections - USB

Supported audio files: MP3, WMA, WAV, FLAC.

USB format: FAT 16/FAT 32, exFat.

 Max USB capacity: 128 GB.

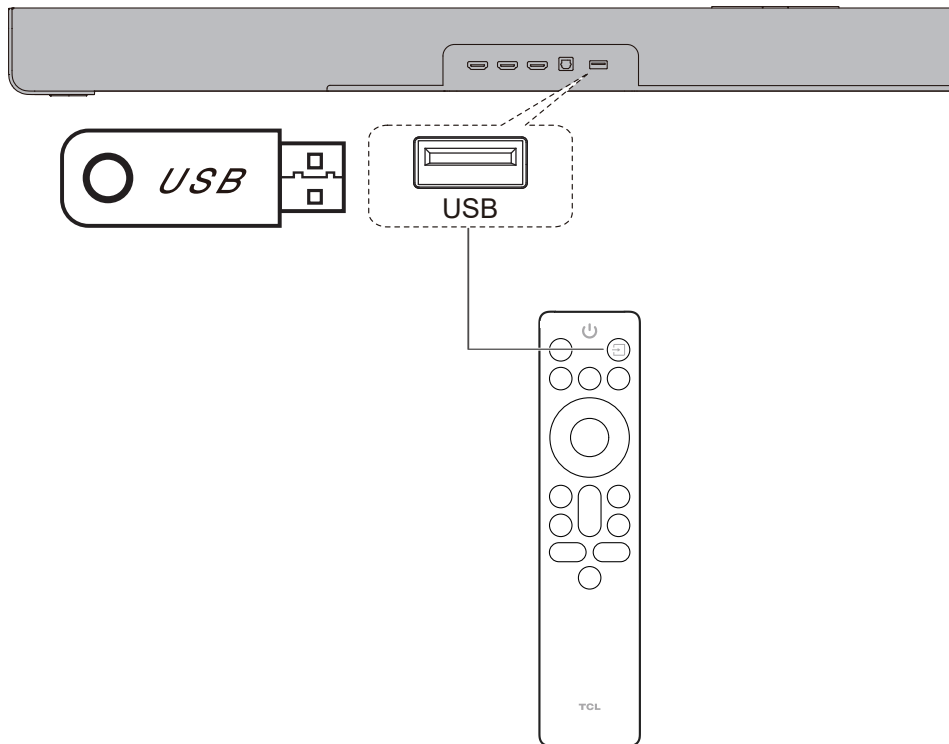

When the Sound Bar is connected, "Tutti Choral" menu appears on the TV.

All settings → **Display and sound** →
Audio Output Settings → **Audio Output**
 → **Tutti Choral**

 


Note:

The message displayed may differ with the TV model.

This function is compatible with some TCL TVs.


The operation methods for different televisions may vary.

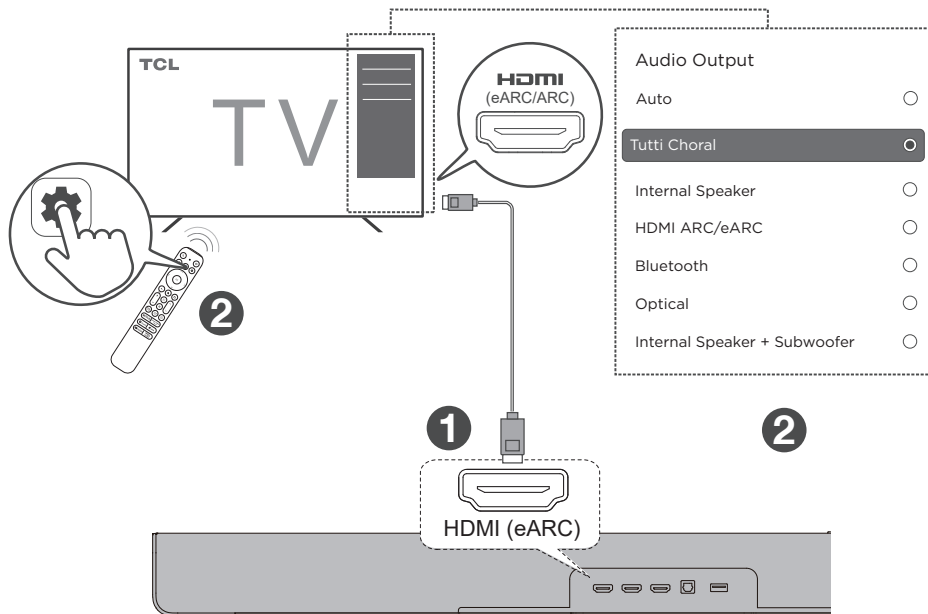

For the TCL App to work properly, a specific or newer version of the operating system is required. The app supports Android and iOS systems.

For more information about the operating system versions, please refer to the TCL App description in the app store.

 Please follow the steps below to configure the network:

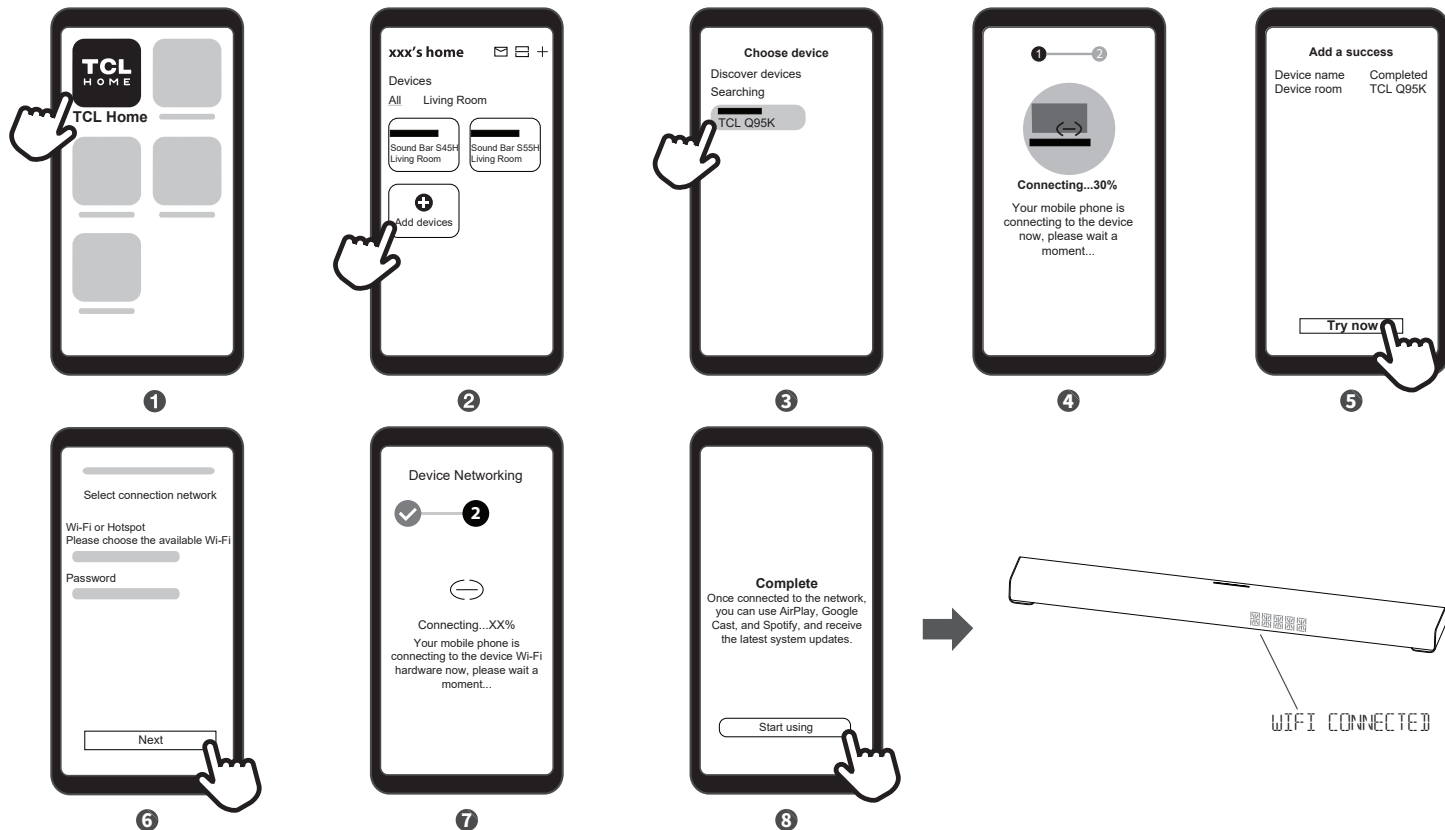

12

AI Sonic-Adaptation

13

Download TCL HOME App

Control this Sound Bar using the TCL Home App. Functions include power control, volume adjustment, source switching, sound modes, AI Sonic-Adaptation, Beosonic, etc. Explore more smart features within the TCL Home App.

Please download the latest version from the app stores.



TCL Home App
Your TCL Smart Hub.
Download Now!

What is AI Sonic-Adaptation? (Auto Room Calibration)

AI Sonic-Adaptation is a Room Calibration Technology developed by TCL Audio Lab. To use this function, you need to download TCL Home App and follow the instructions.

 
Before AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response may be uneven based on your seating position and environment.

After AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response are all optimized based on your seating position and environment.


How Does It Work?

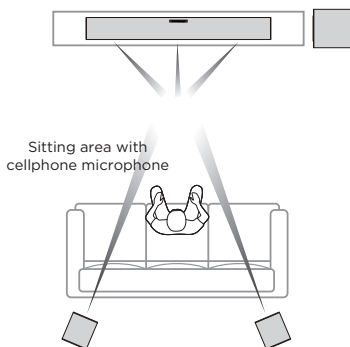

The cellphone's microphone will measure the test signals

Calibration

 Follow the on-screen instructions in the TCL Home App.

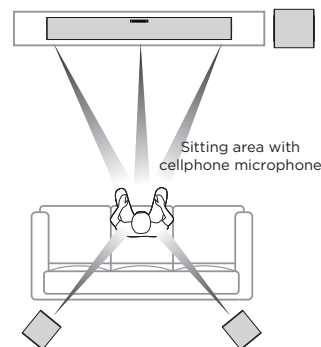


14a

Online Firmware Update


Follow the instructions on the right side to update the software on TCL HOME App.



 
Note:
The message displayed may differ.
Do not exit the TCL HOME App during the update process.

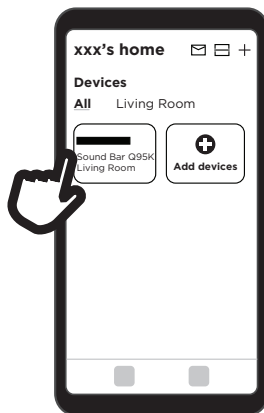


1

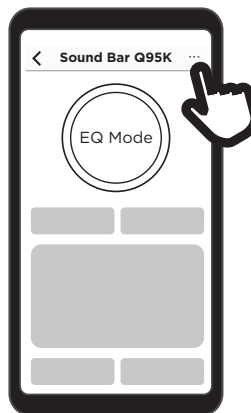 


2

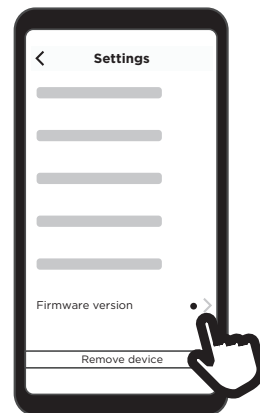 


3

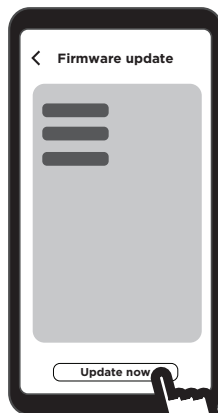 

4

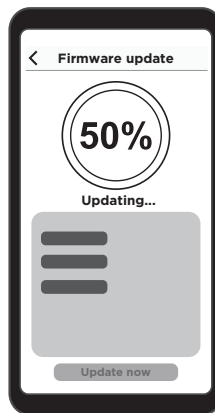 


5

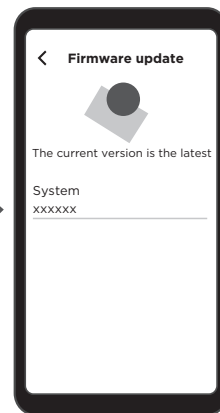 

14b

USB Drive Update

 Please visit the official TCL support website, go to the corresponding product page, follow the online instructions to download the latest software, and use a USB drive to upgrade the Sound Bar.

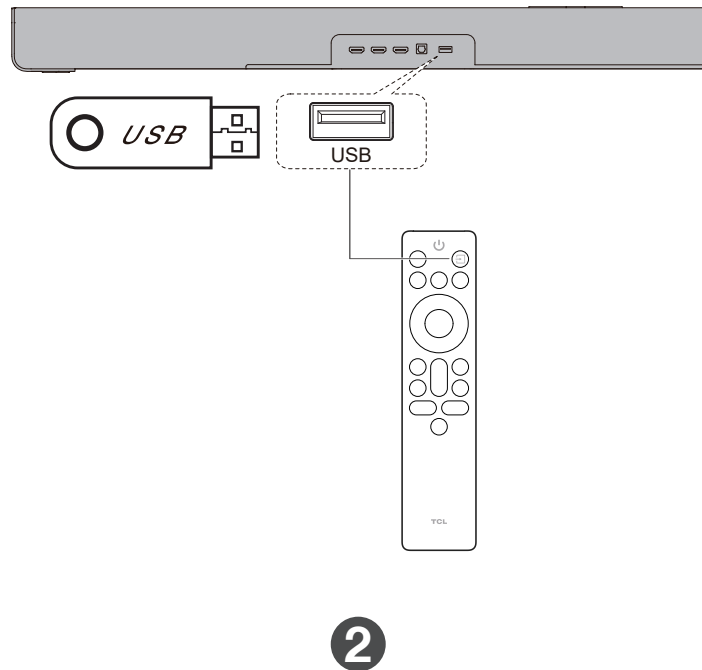

Trademarks

COMPATIBLE WITH



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, and the DTS:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Trademarks



The Wi-Fi CERTIFIED Logo is a trademark of Wi-Fi Alliance®.



Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how. The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>.



 
Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple, AirPlay, Apple Home, and Apple TV are trademarks of Apple Inc., registered in the U.S. and other countries and regions.



Google, Google Home and Google Cast are trademarks of Google LLC.

Important Safety Instructions

Make sure you read all the safety information before you use this product. TCL North America bears no responsibility for accidents or damages caused by unauthorized changes, modifications or improper use of the product.




The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts. When servicing, use only identical replacement parts.

This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to deenergize the phase conductors.

 Warnings



DOUBLE POLE/NEUTRAL FUSING !

- Touching dangerous live parts on the power board may result in electric shock.
- During maintenance, it is necessary to disconnect from mains (such as unplugging the power plug) and confirm that there is no dangerous voltage on the power supply board.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on or near the product.
- The product is unstable if it is not properly placed or mounted to the wall. Be sure to follow the wall mounting instructions provided in the user manual to ensure your safety.
- Do not expose batteries to excessive heat such as sunshine, fire, and so forth.
- To avoid danger of suffocation, keep this plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Safety

- **Read these instructions** - Read all the safety and operating instructions before operating the product.
- **Retain these instructions** - Retain the safety and operating instructions for future reference.
- **Heed all warnings** - Adhere to all warnings on the product and in the operating instructions.
- **Follow all instructions** - Follow all operating and use instructions.
- **Do not use this apparatus near water** - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool and the like.
- **Clean only with a dry cloth.**
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- **Do not defeat the safety purpose** of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord** from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the product. If the cord set is damaged, it must be replaced by a special cord set available from the manufacturer or its service agent.
- **Use only attachments/accessories** specified by the manufacturer.
- **Use only with the cart, stand, tripod, bracket, or table** specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- **Unplug this apparatus** during lightning storms or when unused for long periods of time.
- **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **The user must maintain a minimum distance of 8 inches (20 cm) from the device** at all time.
- **This appliance is not intended** for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Cautions

- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Do not place any sources of danger on the product (for example: liquid filled objects, lighted candles).
- Disconnect the power cord to shut off when find trouble or not in use. The power cord shall be readily operable.
- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- The power cord/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- The rating label is located at the bottom or back of the product.
- The use of apparatus in tropical and moderate climates. Operating temperature: 32°F - 113°F (0°C - 45°C)

Battery CAUTION and Disposal Information

- Only use the battery types specified.
- Risk of fire or explosion if the battery is replaced by an incorrect type.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure can result in an explosion or the leakage of flammable liquid or gas.
- Remove the batteries from the remote control if you are not using it for a long period of time.
- Attention should be drawn to the environmental aspects of battery disposal.

Disposal of Your Old Product

Recycle Your Device Properly. In accordance with state and local laws, this product may be classified as a covered electronic device and must not be disposed of with household trash. TCL encourages consumers to always look for a recycling or reuse alternative to discarding electronic products through drop-off and mail-back options. Visit tcl.com/us/en/sustainability/electronics-recycling for instructions and authorized collection sites. Click on our convenient interactive map to quickly locate a solution in your community. For the US ONLY, for mail-back option,

visit www.mrmrecycling.com/recycle-now.php and follow the instructions.

Compliance notice

Notice for US

FCC Information

Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 8 inches (20 cm) between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Notice for Canada

Class B Clause

This Class B digital apparatus complies with Canadian ICES-003

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warning: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Consignes de sécurité importantes

Assurez-vous de lire toutes les informations de sécurité avant d'utiliser ce produit.

TCL North America décline toute responsabilité en cas d'accidents ou de dommages causés par des changements non autorisés, des modifications ou une utilisation incorrecte du produit.



 
Le symbole de l'éclair en forme de flèche, situé dans un triangle équilatéral, a pour but d'alerter l'utilisateur de la présence d'une tension dangereuse non isolée à l'intérieur du boîtier du produit pouvant être suffisamment importante pour constituer un risque d'électrocution.

Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence de consignes importantes d'utilisation et de maintenance (entretien) dans la documentation accompagnant le produit.

Ce symbole indique que ce produit comporte une double isolation entre la tension principale dangereuse et les pièces accessibles à l'utilisateur. Lors de l'entretien, utilisez uniquement des pièces de rechange identiques.

Ce symbole indique que le fusible peut être au neutre et que le secteur doit être déconnecté pour mettre hors tension les conducteurs de phase.

Avertissements



FUSIBLE DOUBLE PÔLE/NEUTRE !

- Le contact avec des pièces sous tension dangereuses sur le panneau électrique peut entraîner une électrocution.
- Pendant la maintenance, il est nécessaire de débrancher l'appareil du secteur (par exemple en débranchant la fiche d'alimentation) et de vérifier qu'il n'y a pas de tension dangereuse sur le panneau d'alimentation.
- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas ce produit à la pluie ou à l'humidité. Ce produit ne doit pas être exposé à des gouttes ou des éclaboussures. Aucun objet rempli de liquide, tel qu'un vase, ne doit être placé au-dessus ou à proximité du produit.
- Le produit est instable s'il n'est pas correctement placé ou fixé au mur. Veuillez suivre les instructions de montage fournies dans ce manuel d'utilisation pour assurer votre sécurité.
- N'exposez pas les piles à une source de chaleur excessive telle que le soleil, le feu, etc.
- Pour éviter tout risque de suffocation, gardez ce sac en plastique hors de portée des bébés et des enfants. N'utilisez pas ce sac dans un berceau, un lit, une poussette ou un parc. Ce sac n'est pas un jouet.
- Des câbles blindés doivent être utilisés avec cet appareil pour garantir la conformité aux limites de la classe B de la FCC.

Sécurité

- **Lisez ces consignes** - Lisez toutes les consignes de sécurité et d'utilisation avant d'utiliser le produit.
- **Conservez ces consignes** - Conservez les consignes de sécurité et d'utilisation pour une consultation ultérieure.
- **Respectez tous les avertissements** - Respectez tous les avertissements sur le produit et dans le manuel d'emploi.
- **Observez toutes les consignes** - Observez le mode d'emploi et toutes les consignes d'utilisation.
- **N'utilisez pas cet appareil à proximité d'eau** - Cet appareil ne doit pas être utilisé à proximité d'eau ou d'humidité - par exemple, dans un sous-sol humide ou près d'une piscine, etc.
- **Nettoyez uniquement avec un chiffon sec.**
- **Ne bloquez aucune bouche d'aération.** Installez conformément aux instructions du fabricant.
- **Ne l'installez pas près de sources de chaleur** telles que les radiateurs, les bouches de chaleur, les poêles ou autres appareils (y compris les

appareils électro-ménagers) produisant de la chaleur.

- **Ne détruisez pas l'objectif de sécurité** de la fiche polarisée ou mise à la terre. Une fiche polarisée a deux lames avec une plus large que l'autre. Une fiche de type mise à la terre a deux broches et une troisième broche de mise à la terre. La lame large ou la troisième broche sont fournies pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.
- **Protégez le cordon d'alimentation** des piétinements et des pincements, en particulier au niveau des fiches, des prises de courant et du point de sortie du produit. Si l'ensemble de câble est endommagé, il faut le remplacer par un câble spécial disponible auprès du fabricant ou de son agent de service.
- **N'utilisez que les pièces jointes / accessoires** spécifiés par le fabricant.
- **N'utilisez que le chariot**, le support, le trépied, la console ou la table spécifiés par le fabricant ou vendus avec l'appareil. En cas d'utilisation d'un chariot, soyez prudent lorsque vous déplacez l'ensemble chariot-appareil afin d'éviter tout risque de basculement ou de blessures.
- **Débranchez cet appareil** en cas d'orage ou lorsqu'il n'est pas utilisé pendant de longues périodes.
- **Confiez l'entretien de l'appareil** à un personnel qualifié. Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque manière que ce soit, par exemple si le cordon d'alimentation ou la fiche sont endommagés, si un liquide a été renversé ou si des objets sont tombés dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.
- **L'utilisateur doit se tenir** à une distance minimale de 20 cm de l'appareil à tout moment.
- **Cet appareil n'est pas destiné** à être utilisé par de jeunes enfants ou des personnes infirmes sans surveillance. Il faut surveiller les jeunes enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

Mises en garde

- Pour éviter les électrocutions, faites correspondre la lame large de la fiche à la fente large et insérez-la complètement.
- Ne placez aucune source de danger sur le produit (par exemple, objets remplis de liquide, bougies allumées).
- Débranchez le cordon d'alimentation pour l'éteindre en cas de problème ou si vous ne l'utilisez pas. Le cordon d'alimentation doit être facilement utilisable.
- L'utilisation de commandes ou de réglages ou l'exécution de procédures autres que celles décrites dans le présent document peuvent entraîner une exposition à des radiations dangereuses ou d'autres opérations dangereuses.
- Si le raccord d'alimentation avec l'appareil est utilisé pour le débranchement, celui doit rester facilement utilisable.
- L'étiquette d'identification se trouve au bas ou à l'arrière du produit.
- L'appareil peut être utilisé dans des climats tropicaux et modérés. Température de fonctionnement : 0 à 45 °C.

Informations relatives à la pile et à son élimination

- Utilisez uniquement les types de piles spécifiés.
- Le remplacement de la pile par un type incorrect peut entraîner un risque d'incendie ou d'explosion.
- Veillez à respecter la polarité.
- Ne mélangez pas des piles neuves et usagées.
- N'utilisez pas de piles rechargeables.
- Jeter une pile dans un feu ou un four chaud, ou écraser ou couper mécaniquement une pile peut entraîner une explosion.
- Laisser une pile dans un environnement à température extrêmement élevée, tel que la lumière du soleil, un feu ou une surface chaude, peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable.
- Une pile soumise à une pression atmosphérique extrêmement basse peut provoquer une explosion ou une fuite de liquide ou de gaz inflammable.
- Retirez les piles de la télécommande si vous ne l'utilisez pas pendant une longue période.
- Il convient de prêter attention aux aspects environnementaux liés à la mise au rebut des piles.

Mise au rebut de votre ancien produit

Recyclez votre appareil de manière appropriée. Conformément aux lois nationales et locales, ce produit peut être classé comme un appareil électronique couvert et ne doit pas être jeté avec les ordures ménagères. TCL encourage les consommateurs à toujours rechercher une alternative de recyclage ou de réutilisation plutôt que de jeter les produits électroniques, en utilisant les options de dépôt et de retour à la poste. Rendez-vous sur tcl.com/us/en/sustainability/electronics-recycling pour obtenir des instructions et connaître les sites de collecte agréés. Cliquez sur notre carte

interactive pour trouver exactement une solution dans votre communauté. Uniquement pour les États-Unis, pour les options de retour par courrier, rendez-vous sur www.mrmrecycling.com/recycle-now.php et suivez les instructions.

Avis de conformité

Avis pour les États-Unis

Informations sur la FCC

Avertissement

Les changements ou les modifications sur cet appareil non expressément approuvés par la partie responsable de la conformité pourraient invalider l'autorité de l'utilisateur pour manipuler l'équipement.

Remarque

Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la section 15 du règlement de la FCC. Ces limites sont conçues pour fournir une protection suffisante contre les interférences préjudiciables dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé et utilisé conformément aux instructions fournies, peut produire des interférences affectant les communications radio. Cependant, rien ne garantit que des interférences ne se produiront pas dans certaines installations.

Si cet équipement génère des interférences préjudiciables à la réception de signaux radio ou de télévision (ce qui peut être constaté en éteignant puis rallumant l'appareil), nous conseillons à l'utilisateur d'essayer une ou plusieurs mesures suivantes pour tenter de corriger le problème :

- Réorienter ou déplacer l'antenne de réception.
- Eloigner davantage le récepteur de l'équipement.
- Brancher l'équipement sur une prise de circuit différente de celle sur laquelle le récepteur est branché.
- Consulter le revendeur ou un technicien qualifié spécialisé en équipements radio/de télévision.

Cet appareil est conforme à la section 15 de la réglementation de la FCC. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles de provoquer un fonctionnement indésirable.

Déclaration de la FCC sur l'exposition aux rayonnements : Cet appareil est conforme aux limites de la FCC sur l'exposition aux rayonnements électromagnétiques définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou un autre émetteur.

Avis pour le Canada

Clause de classe B

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Déclaration d'exposition aux rayonnements

Cet équipement est conforme aux limites d'exposition au rayonnement IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Avertissement : L'utilisateur est averti que les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

Le matériel fonctionnant dans la bande 5150-5250 MHz ne doit être utilisé qu'à l'intérieur des bâtiments afin de réduire les risques d'interférences nuisibles avec les systèmes mobiles par satellite à canaux communs.

DO NOT RETURN TO STORE

**WE ARE
READY TO
HELP** **contact us first
with any questions**



TCL SUPPORT:

US: support.tcl.com

CA: www.tcl.com/ca/en
www.tcl.com/ca/fr

1-877-300-9223

MX: www.tcl.com/mx/es
800-112-4656



**TAKE CARE WHEN
REMOVING THE SOUND BAR**

Nominal electrical characteristics		
Model	Electrical requirements	Power consumption
Q95K	100-240 V~ 50/60 Hz	80 W
SW9	100-240 V~ 50/60 Hz	50 W
Q95K-RS	100-240 V~ 50/60 Hz	25 W

Copyright © 2026 TCL.

All rights reserved.

Q95K-NA_EN&FR&ES_QSG_V0.2

