




Cordless Vacuum Cleaner

Instruction Manual

please read the manual carefully before using
and keep it properly for future use

A13

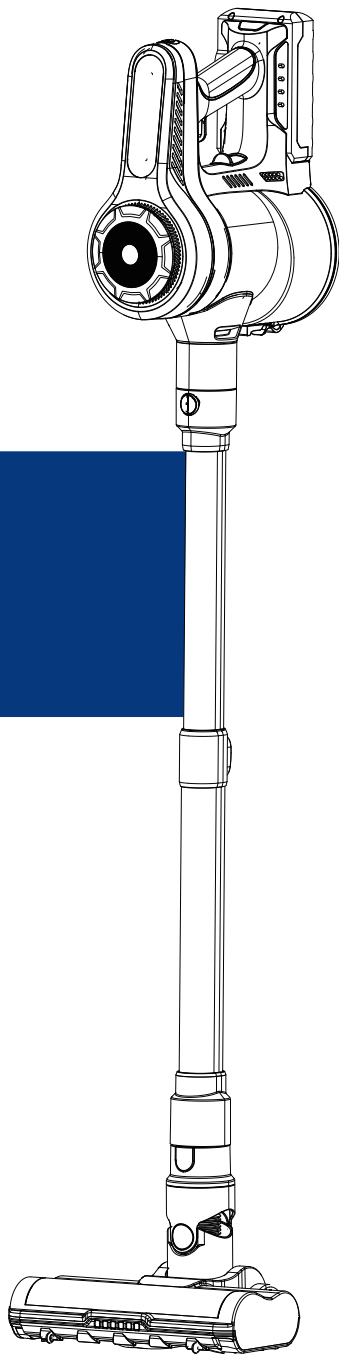

If you have any questions,
please email to support@nadaly.cn

CONTENTS

1	IMPORTANT SAFETY INSTRUCTIONS	01
2	PERSONAL SAFETY	01
3	ELECTRICAL SAFETY	02
4	BATTERY SAFETY	02
5	SERVICE	03
6	INTENDED USE	03
7	WARNING	04
8	INTRODUCTION OF COMPONENTS	05
9	PRODUCT INSTALLMENT	06
10	PRODUCT OPERATION	09
11	TROUBLESHOOTING	12
12	PRODUCT SPECIFICATION	12

Important Safety Instructions

WARNING:

Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety

- 1.Store it indoors in a dry place and out of the reach of children;
- 2.Always use responsibly. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved;
- 3.Do not let children play with the appliance; supervise children using or maintaining the appliance;
- 4.Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended, may present a risk of personal injury;
- 5.Take extra care when cleaning stairs;
- 6.Keep the appliance and accessories away from hot surface;
- 7.Do not block the appliances openings or hinder air flow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body);
- 8.Particularly keep hair away from openings and moving parts;

Electrical Safety

1. Only use batteries and chargers supplied by the manufacturer;
2. Never modify the charger in any way;
3. The charger has been designed for a specific voltage. Always check that the voltage is the same as that stated on the rating plate;
4. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack;
5. Before using, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock;
6. Do not abuse the charger cord;
7. Never carry the charger by the cord;
8. Do not pull the cord to disconnect it from a socket, grasp the plug and pull to disconnect it;
9. Don't wrap the cord around the charger when storing;
10. Keep the charger cord away from hot surfaces and sharp edges;
11. The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
12. Do not handle the charger or the appliance with wet hands;
13. Do not store or charge the appliance outdoors;
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery Safety

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures, as they may explode;
2. Liquid ejected from the battery may cause irritation or burns;
3. In an emergency situation contact professional help immediately;

4. Leaks from the battery cells can occur under extreme conditions.
Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations;
5. Shorting the battery terminals may cause burns or fire;
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.
7. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

Service

1. Before using the appliance and after any impact, check for signs of wear or damage and repair as necessary;
2. Do not use the appliance if any part is damaged or defective;
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations.
Repairs by unqualified persons could be dangerous;
4. Never modify the appliance in any way as this may increase the risk of personal injury;
5. Only use replacement parts or accessories provided or recommended by manufacturer.

Intended Use



1. This appliance has been designed for home dry vacuum cleaning only;
2. Do not pick up liquids or use on wet surfaces;
3. Do not pick up anything that is flammable, burning or smoking;

4. Use only as described in this manual;
5. Don't use on concrete, tarmacadam or other rough surfaces.

Warning

1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth;
2. Never immerse the unit in water and do not clean in a dish washer.

Introduction of Components

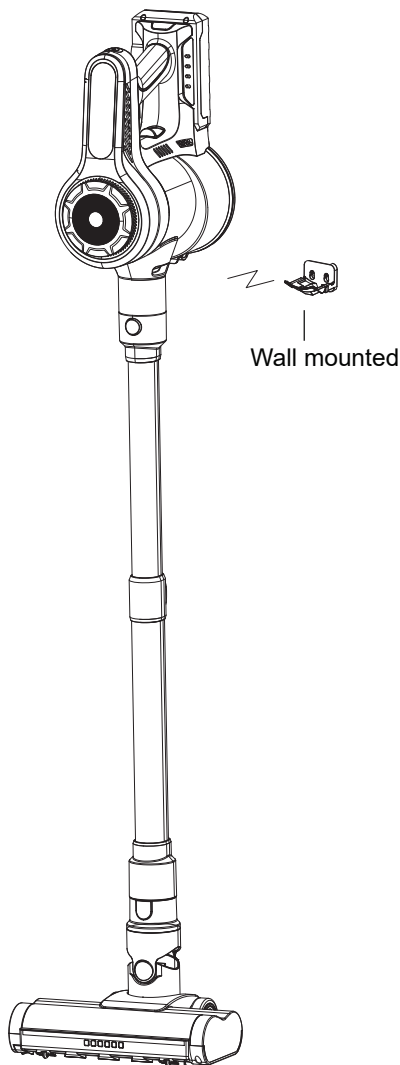
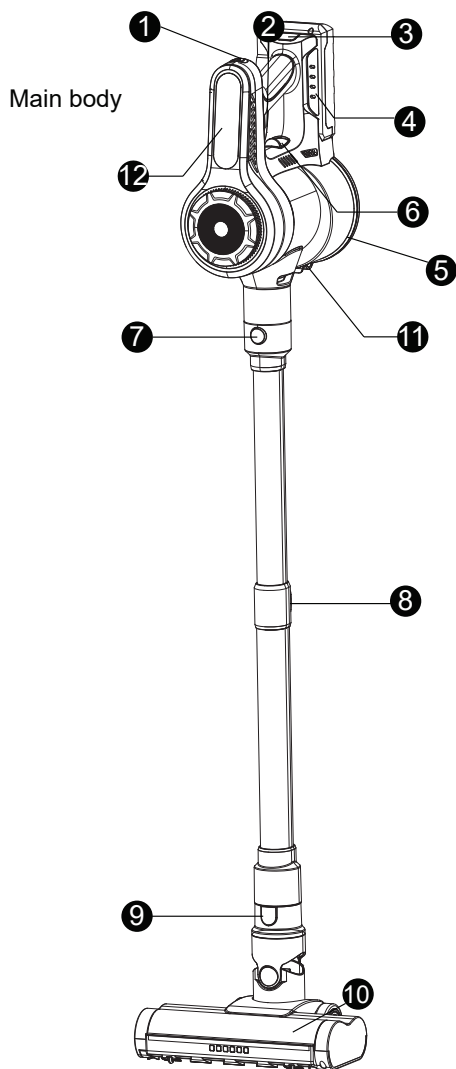


- 1 Speed control
- 2 Switch
- 3 Battery pack release button
- 4 Battery indicator
- 5 Dust cup
- 6 Dust cup release button
- 7 Metal tube locker
- 8 Telescopic rod adjustment locker
- 9 Power brush locker
- 10 Power brush
- 11 One-click Clear button
- 12 Suction power indicator

Product Installment


I. Use as a hand vacuum

Insert the accessory (bristle brush or long crevice) to body as below showed

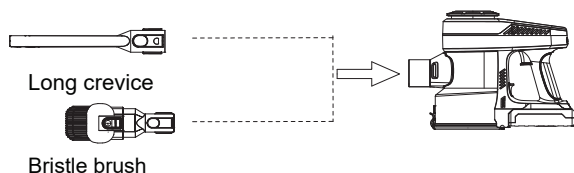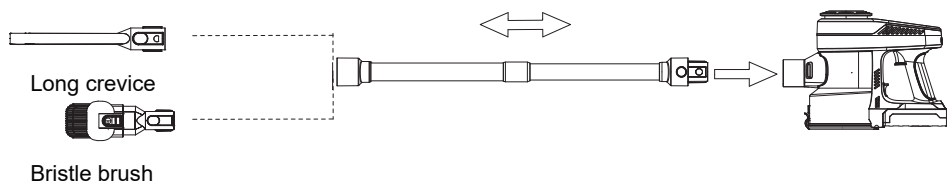


II. Use as the stick vacuum cleaner

a) Assemble the battery into the dust cup, make sure the battery bolt head is inserted into the dust cup slot rightly as below.

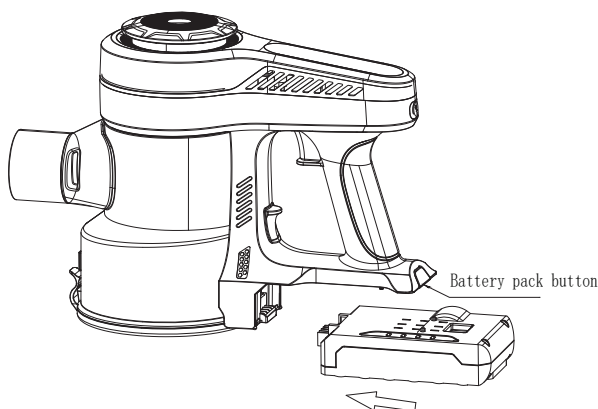


b) Attach the brush to another head of the tube as showed.

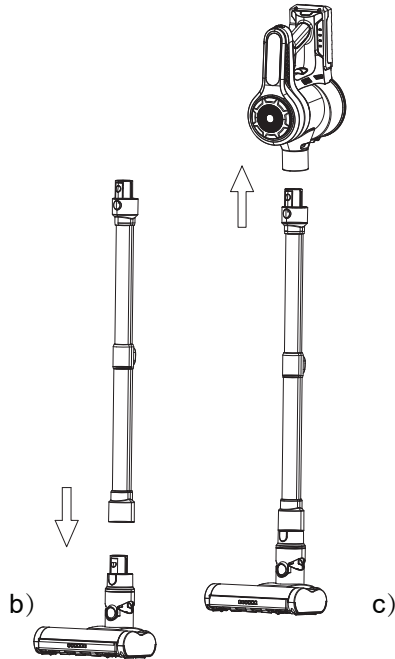

c) Attach the metal tube to the body as below until hear click sound.


d) Press the switch to work two speed control for choice

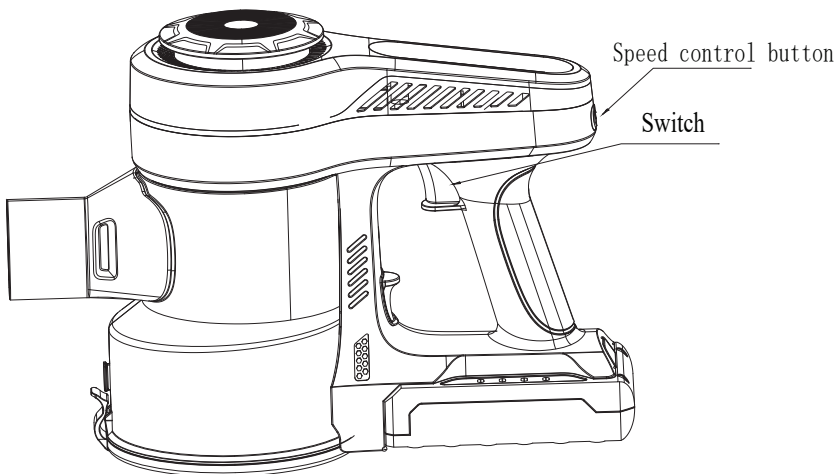

e) Vertical Function Diagram

Floor brush lock: Hold the handle, keep the floor brush still, gently push the main unit forward and the floor brush locks into place.

Cancel locking: Step on the side of the brush with your foot and gently pull the main unit back to sweep.

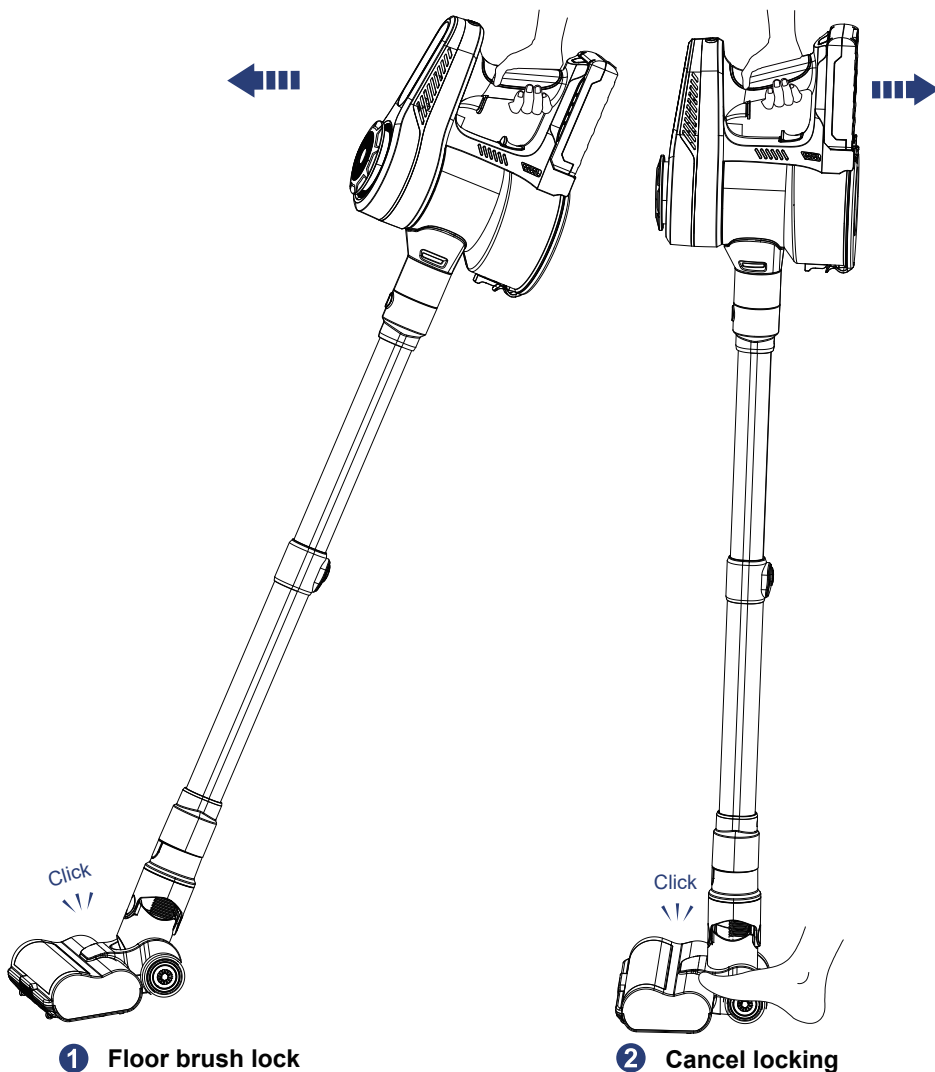

Product Operation

III. Battery charging

Charging time: 4-5H


1. When the battery indicator is blinking blue, please turn off the appliance, and charge it.
2. When charging, 3 blue lights are illuminated one by one.
3. When fully charged, 3 blue lights are steady on.

During operation, round indicator show:


Light Blue – On / low speed

Bright Blue – High speed

Indicator light blinking - Rolling brush are entangled, please deal with the entanglement and restart the machine to recover.

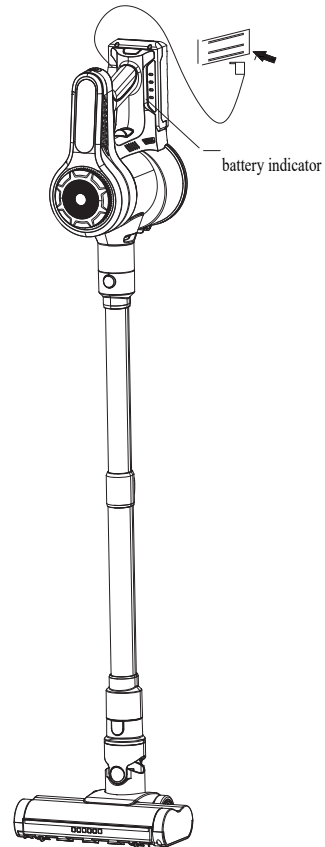


IV. How to empty the dust cup

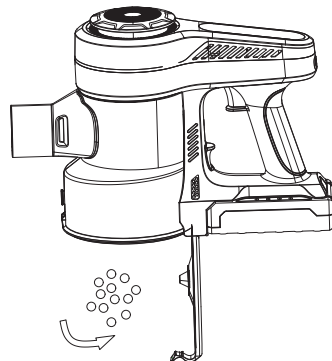


V. Maintain the filter


1. Press the battery pack button to remove the battery

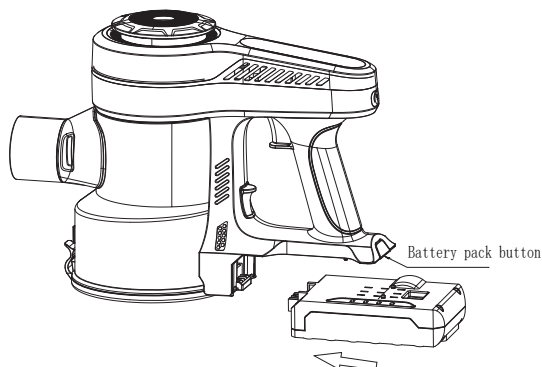


2. Remove the dust collection cup as shown below

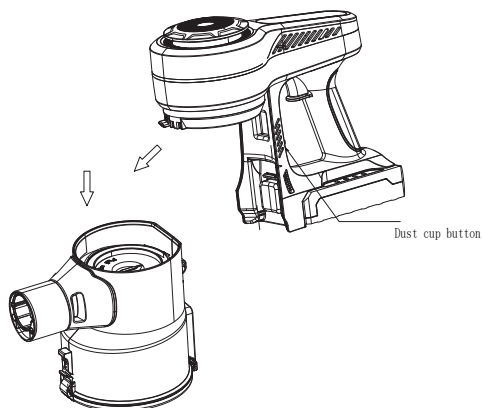

3. Open the bottom cover, rotate and unscrew the filter

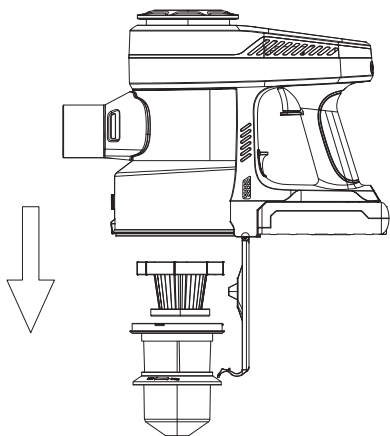


4. Wash the filter and let it dry

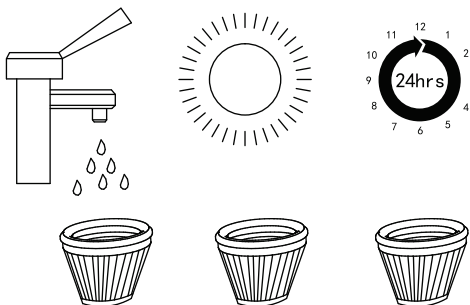


5. How to use the cleaning brush?

A. The brush side used to clean metal filter, HEPA filter;

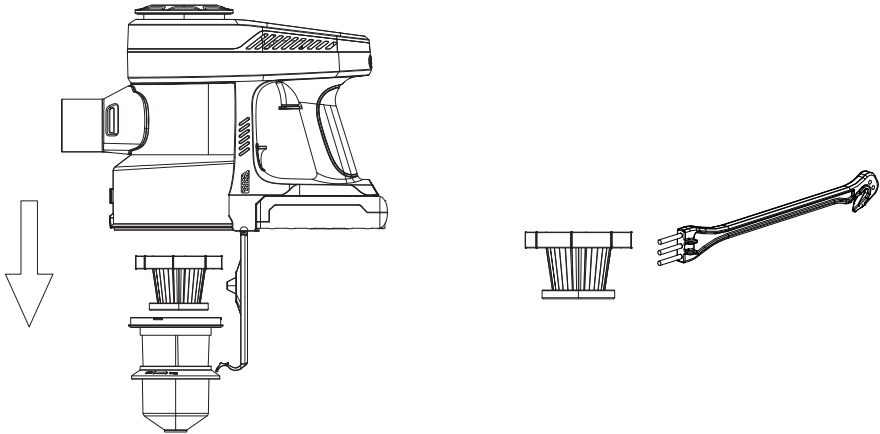

B. The knife side used to remove the tangled hairs from brush roller.

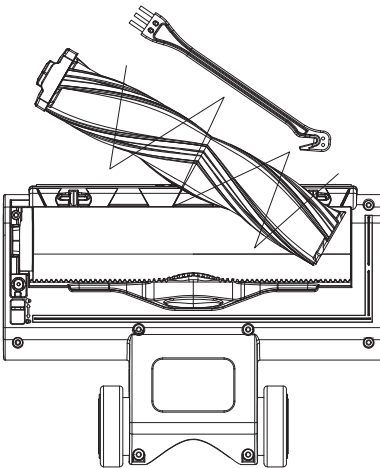

Troubleshooting

Suction gets weak	1.Empty the dirt cup 2.Clean the HEPA filter 3.Check if the dirt cup is installed correctly
Roller brush stops spinning & has strange noise	1.Check if the brush (especially the bearing part) is stuck by hair 2.Check if the filter cup is installed correctly in the right place 3.Detach the tube, use the handheld part only. If not work, contact the seller for help
Battery doesn't hold a charge	1.Check if the vacuum cleaner is fully charged with 3 lights on 2.Check if the charger & charging base is connected correctly 3.If there is no light on when charging, contact the seller for help

Product Specification

Battery	22.2V/2200mAh
Charging time	4-5 hours
Charger output	26.5V/500mA
Net Weight	2.3kg

Manufacturer: Suzhou AZA Clean Electric Technology Co.,Ltd.

Address: No.3999, Puzhuang Avenue, Xukou Town, Wuzhong District, 215105 Suzhou,China



MADE IN CHINA

