



#### OPERATION INSTRUCTIONS

Bluetooth Name: V3 Pro MAX

1. Power On/Off: Long press for 3 seconds to power on/off. Powering on enters Bluetooth pairing mode. Single click to switch modes (TF mode/Bluetooth mode). Double click to play/pause.
2. Click the key to enter white noise mode, double-click to go to the previous track, and long press for three seconds to decrease the volume.
3. Click the key to enter timer mode; click the mode to switch between 30 minutes, 60 minutes, 90 minutes, and cancel the timer function. Double-click to skip to the next track; long press for 3 seconds to increase the volume.

#### HIDDEN FEATURE

Voice Announcement/Low Battery Alert/Bluetooth Disconnection & Out-of-Range Alert (Shut down after 5 minutes of disconnection)/Fast Charging t/Work while Charging/Pairing Memory, Auto Reconnect on Power On/Pause when Phone is Off Phone Speaker Playback/Do Not Disturb

#### FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Part 15 Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### Note on Interference (Class B Digital Device – Residential Use)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### RF Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device is intended for portable use and can be operated without maintaining a minimum distance between the antenna and the human body during normal use.

