

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

Specifications:

GM Part Number: 15042968

FCC ID: KOBLEAR1XT

Numbers on the back of this remote:

FCC ID: 2AOKM-GV3

IC: 24223-GV3

Model: RT-G33B

Frequency: 315 MHz

Battery: CR2032

Reusable: Yes

On Board Programming: Yes

3 Buttons: Lock, Unlock, Panic alarm

Compatible with:

2002-2002 Cadillac Escalade

2002-2002 Chevrolet Avalanche

2001-2004 Chevrolet S10

2001-2002 Chevrolet Silverado 1500 2500 3500

2001-2002 Chevrolet Suburban

2000-2001 Chevrolet Tahoe

2001-2002 GMC Sierra 1500 2500 3500

2001-2002 GMC Yukon

2001-2004 GMC Sonoma

About Program and Compatibility:

1. Self-programmable with 1 working original master keys

2. Note: Certain 2001 model years can use an alternate 15732803 remote, But it needs to be confirmed that his compatible FCCID is KOBLEAR1T, not KOBUT1BT.

Step by Step How to Configure Instructions:

Note: All existing transmitters will need to be reprogrammed during this procedure

1. Close all vehicle doors.
2. Then insert key into the ignition.
3. Hold down the UNLOCK button on the driver side door panel. Continue to hold down until instructed to release in step 9.
4. Perform steps 5 through 8 in fairly rapid succession.
5. Turn the ignition switch to the ON position (do not crank the engine)
6. Turn the ignition switch to the OFF position.
7. Turn the ignition switch to the ON position (do not crank the engine).
8. Turn the ignition switch to the OFF position.
9. Release the unlock button on the door panel. The vehicle should lock and unlock the doors automatically.
10. Hold down the LOCK and UNLOCK buttons on the transmitter simultaneously until the doors lock and unlock to confirm programming. – (You may need to hold LOCK & UNLOCK for up to 30 seconds.)
11. Repeat step 10 for each additional transmitter (including any existing transmitters).
12. Turn the ignition switch to the ON position to exit the programming mode.

Still need help?

Please Contact our Technical Support team for assistance.

Vurkcy-Service@outlook.com

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.