



● Mounting

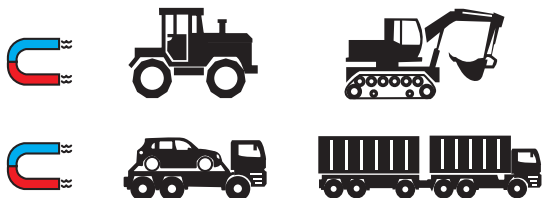

● Battery Life

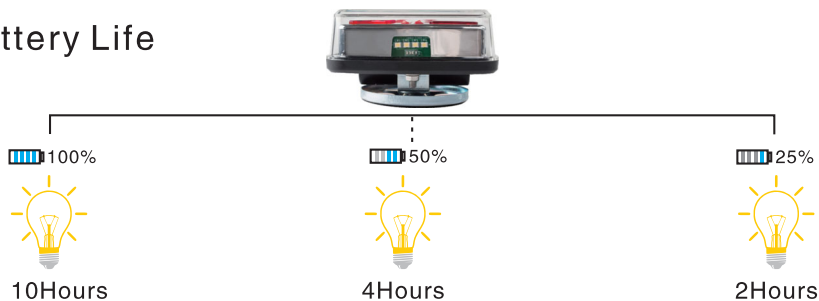


The data of endurance of battery is for your reference,the it depends on the road condition and driving habit

● Specification

Input voltage	DC5V
Working Frequency	2.4G
Radio communication range	30Meters
Battery capacity	2000MAH
Charging time	2~2.5hours
Waterproof leve	IP65
Operating temperature	-25℃+50℃



- 1.Fully charge battery before use
- 2.Check the battery life before use
- 3.Check light if working correctly before use
- 4.Charge the battery every 6months if not in use
- 5.Replacement light & additional light must be paired before use
- 6.Check light regularly when use for long hours

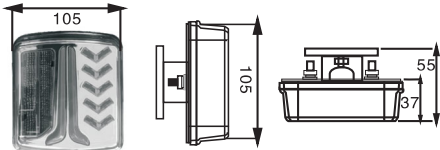

Wireless Trailer Light kit

100% Cable-free Solution



[Normal Use Process]

Step 1: Insert the vehicle plug

● Firmly insert the trailer light plug into the vehicle's trailer socket (ensure the plug matches the socket).

Step 2: Start the power supply

● Press the power button on the back of the trailer light (only need to press once). At this time, the white power light is always on, indicating that the device has been started.

Step 3: Verify successful connection

- Press and hold the brake pedal, and observe the trailer light:
- The red turn signal lights up: indicating that the connection is successful and it can be used normally.
- The brake light does not light up: please refer to the "Troubleshooting" below.

[Troubleshooting: What to do if the connection fails?]

Method: Quick re - pairing

- Keep the plug connected, no need to pull it out.
- Press and hold the brake pedal, and quickly press the power button 3 times continuously (short interval). At this time, the red turn signal starts to flash, indicating that it enters the pairing mode.
- The red brake light lights up: pairing is successful, and it returns to normal use.
- The red light keeps flashing: please repeat the above steps, or check whether the vehicle socket is powered.

[License Plate Light Activation]

- (To save electricity) The license plate light needs to be long - pressed for 3 seconds to start.

[Shutdown]

- Press once to shut down after use.
- It will automatically shut down after 1 hour of standby.

Contents




Installation



Charging

5V2.5Hours

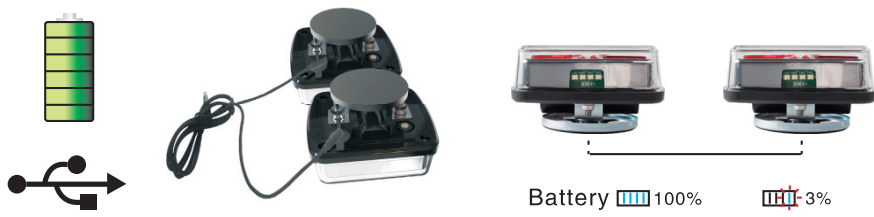

NPL



PRESS THE SWITCH ONCE AND THE POWER INDICATOR WILL FLASH. THEN PRESS AND HOLD THE SWITCH FOR 5 SECONDS, AND THE LICENSE PLATE LAMP STARTS TO OPERATE

Pairing



Testing



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.