



PMPVBTRC30RD - PMPVBTRC30BK - PMPVBTRC30BL - PMPVBTRC30PK

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference.

- Ensure it is available to all persons using this device.

Unique Elements:

- Long-Range Sound: Projects Sound Up to 600 Yards for Clear Communication at Outdoor Events, Rallies, and Sports
- Built-in Rechargeable Battery with Power Display
- Lightweight and Ergonomic Design Weighing Only 1 lb, Perfect for Extended Use
- Built-in Siren and Music Modes for Crowd Control and Entertainment
- Durable Construction: Weather-resistant Design for Reliable Use in Both Indoor and Outdoor Settings

Features:

- 30W Sound Output Delivers Loud, Clear Audio for Announcements and Events
- Voice Changer Effects for Fun and Engaging Audio
- Record and Playback Function to Capture and Replay Messages
- Bluetooth Connectivity to Play Music from Compatible Devices
- Siren and Whistle Sounds for Crowd Control, along with 'Ole Ole' Music for Added Entertainment
- Convenient USB-C Rechargeable Battery for Fast and Easy Charging
- Adjustable Volume Control for Optimal Sound Levels
- Ergonomic, Lightweight Handheld Design
- Adjustable Strap for Carrying or Hands-free Use
- Ideal for Sports Events, Schools, Public Announcements, and Emergency Situations

What's in the Box:

- Rechargeable Megaphone
- USB-C Charging Cable
- Attached Shoulder/Hand Strap
- Built-in Battery

Technical Specs:

- Construction Materials: Durable ABS or High-impact Plastic Housing for Rugged Use and Long Life
- Speaker with Audio Output: 30 Watt
- Battery: Built-in Rechargeable Lithium Battery
- Charging Type: USB-C
- Multiple Modes: Talk, Siren, Whistle, Record and Voice Effects
- Voice Changer Mode: Multiple Fun Voice Effects such as Donald Duck, Monster, Enchanting Female, Reverb, Goddess and Mature Guy for Fun and Engaging Audio
- Control: Volume Control, Mode Buttons, Playback/Record Button
- Range: Effective Acoustic Range Up to 600 Yard
- Item Weight: 1.37 lbs
- Product Dimensions (L x W x H): 9.17 x 5.59 x 5.59 Inches

WARNING

- Do not place the unit in direct sunlight or in a high-temperature environment for extended periods.
- Avoid exposure to rain, water, or high humidity.
- When cleaning the megaphone body, use only a neutral detergent. Never use thinner or benzene.
- Never point the megaphone directly at people or animals. To avoid hearing damage, keep a safe distance and use a reasonable volume level.
- Keep the device away from children and unauthorized users.
- If the device will not be used for a long period, remove the batteries and store them separately to prevent leakage and internal circuit damage.
- Damage caused by failure to follow the instructions in this manual is not covered by the warranty. The dealer accepts no responsibility for resulting defects or problems.
- Unauthorized conversion or modification of the product is prohibited for safety and certification (CE) reasons.
- Do not leave packaging materials unattended. Plastic bags and foils may pose a danger to children.

ATTENTION

- Use caution near people and animals.
- This device can cause hearing damage if used improperly.

NOTE

- For normal operation, use the product in environments with temperatures between 41°F (5°C) and 95°F (35°C).
- Electrical products must not be disposed of with household waste. Please take them to a recycling center. Contact local authorities or your dealer for proper disposal instructions.
- Specifications are typical; actual performance may vary slightly between units. Specifications are subject to change without notice.



California Prop 65 Warning

⚠️ WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

PyleUSA.com/ContactUs

PARTS AND FUNCTIONS



- 1-6. **Voice Effects (1-6):** Press to change sound effects
7. **ON/OFF:** Press to turn the power on or off
8. **Music/Alarm:** Press to activate or deactivate music or siren
9. **REC:** Press to start or stop recording
10. **Play / BT:** Press to play recordings
Press and hold to enable Bluetooth function
11. **Volume - :** Press to decrease volume in speaking mode
12. **Charging Port:** Used for charging the device
13. **Volume + :** Press to increase volume in speaking mode
14. **LED Indicator:** Displays operating status
15. **Power Display:** Shows battery level
16. **Built-in Microphone:** Captures voice input

OPERATIONAL INSTRUCTIONS



Charging

- Use the included USB-C cable to connect the charging port to a power supply.
- Full charging time is approximately 5 hours.

Speaking Mode

- Press [ON/OFF] to activate the microphone.
- Point the horn toward the audience and speak normally into the microphone.
- Keep the microphone close to your lips for best amplification.
- Press [Vol-] or [Vol+] to adjust the volume to an optimal level without causing feedback or howling.
- The closer the sound source is to the microphone, the better the amplification.

Music and Siren

- Press [Music/Alarm] to activate music.
- Press and hold [Music/Alarm] to activate the siren.
- Press [Music/Alarm] again to deactivate.

Battery Notice

- If the megaphone is on but sound output is weak, the battery may be low. Recharge the battery as described above.
- A low battery will reduce sound volume. Recharge regularly for optimal performance.

VOICE CHANGER INSTRUCTIONS

1. Press buttons [1]–[6] to select a sound effect, then speak into the microphone.
 - [1] Echo (No echo effect during recording)
 - [2] Donald Duck
 - [3] Magic
 - [4] Monster
 - [5] Goddess
 - [6] Uncle
2. To return to normal sound, press the selected sound effect button again.
3. To record voice effects, refer to the Record Instructions section.

RECORD INSTRUCTIONS

- Press [REC] to start recording. The LED indicator will light up.
- Speak into the microphone.
- Maximum recording time is approximately 260 seconds.
- Press [REC] again to stop recording.
- Press [PLAY] to play the recording in a continuous loop. The LED will flash during playback.
- Press [PLAY] again to stop playback.
- Press sound effect buttons [1]–[6] before or during playback to apply effects.
- To return to normal sound, press the selected effect button again.

BLUETOOTH (BT) INSTRUCTIONS

- Press and hold [PLAY/BT] to enable Bluetooth mode. The LED indicator will light up.
- Bluetooth device name: Megaphone Bluetooth
- On your mobile device, search for this name and select it to pair.
- Once connected, music from your mobile device will play through the megaphone.
- Press and hold [Vol-] or [Vol+] to adjust Bluetooth volume.
- Press [Vol-] to play the previous track.
- Press [Vol+] to play the next track.
- To pause Bluetooth music, quickly double-press [PLAY/BT].
- You may also press [Music/Alarm] or [REC] at any time to stop Bluetooth playback and activate those functions.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

Start Here



PyleUSA.com/pages/register

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.