


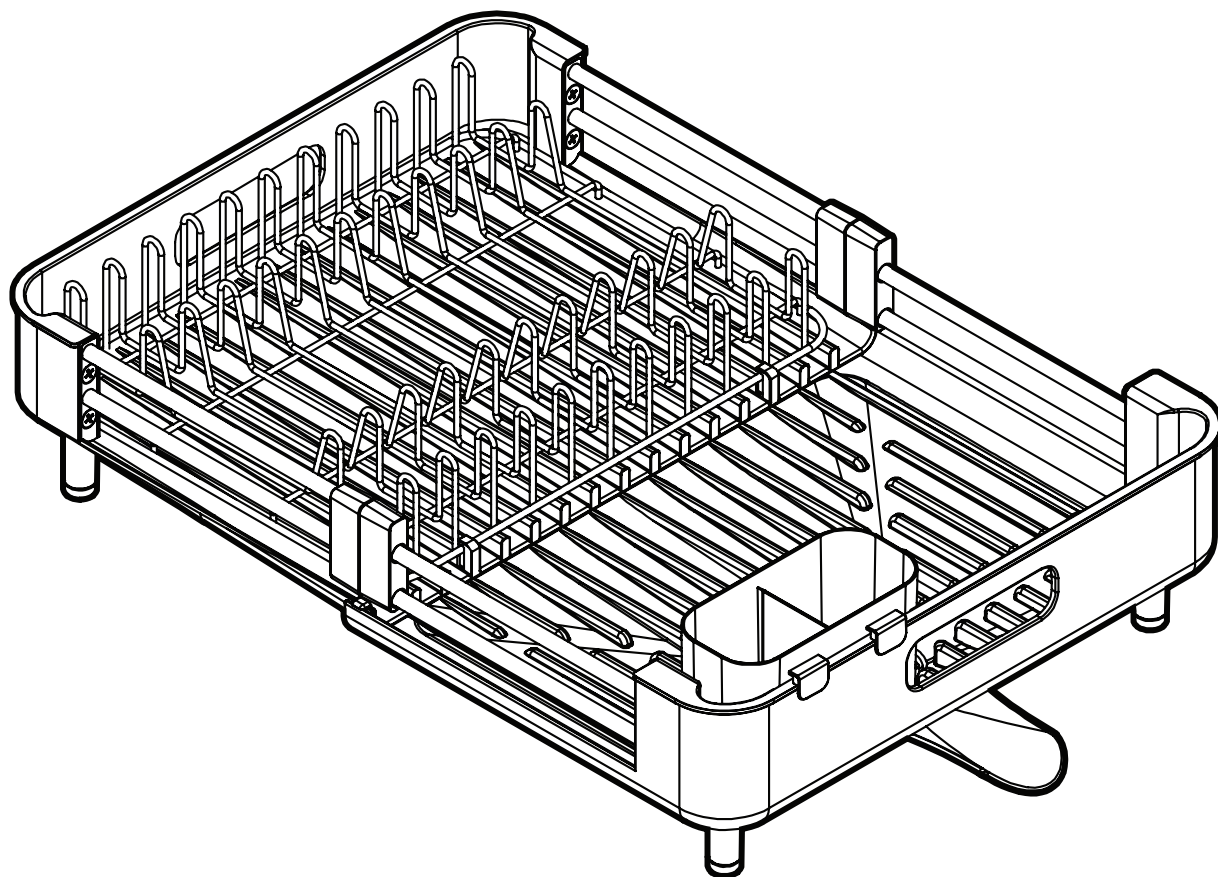

EXTENDABLE STAINLESS STEEL DISHRACK

Product Instructions

Product No. 1013247

vonshef




Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME



Components

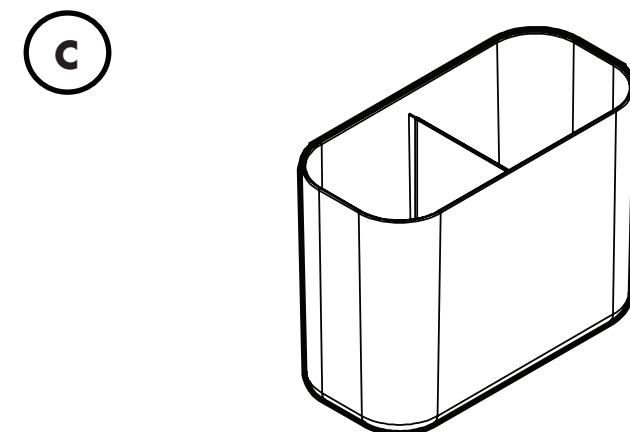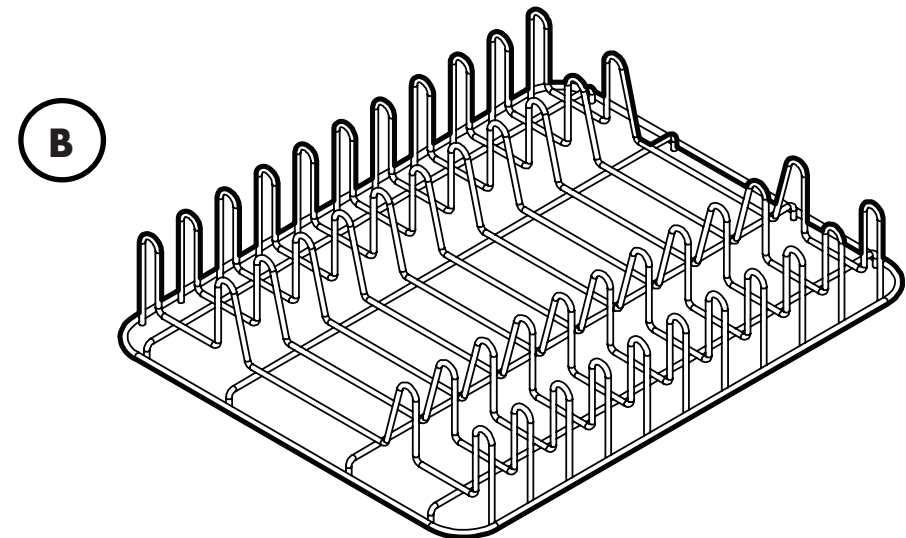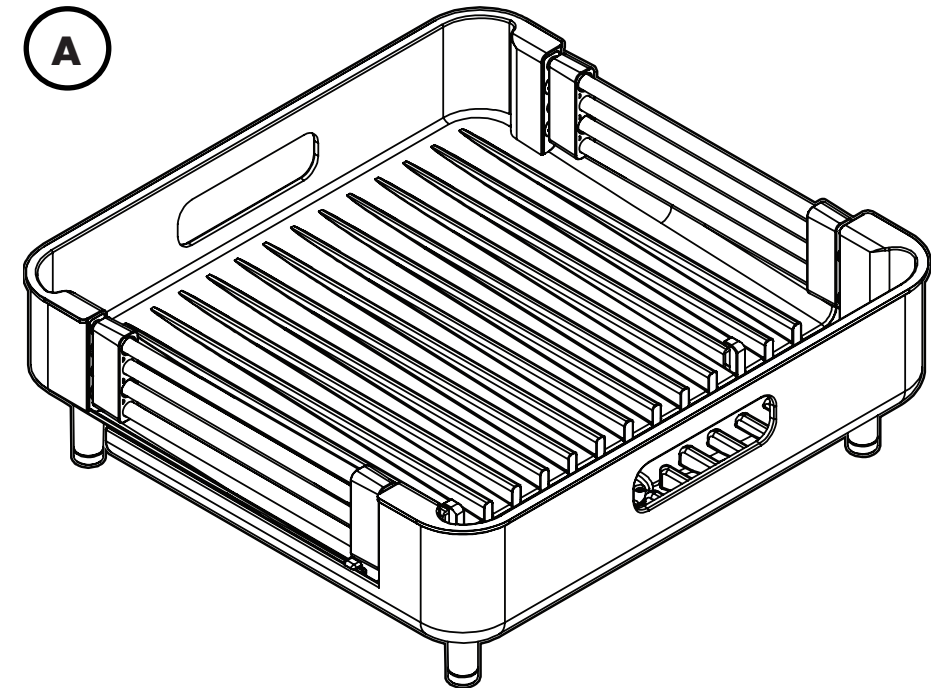

Need further help?
support@vonhaus.com


See our full range at
www.vonhaus.com

Assembly

1

Prepare the dish rack

Place the dish rack (A) on a flat surface. Pull out the drain channel, then rotate and remove it to set the rack in its working position.

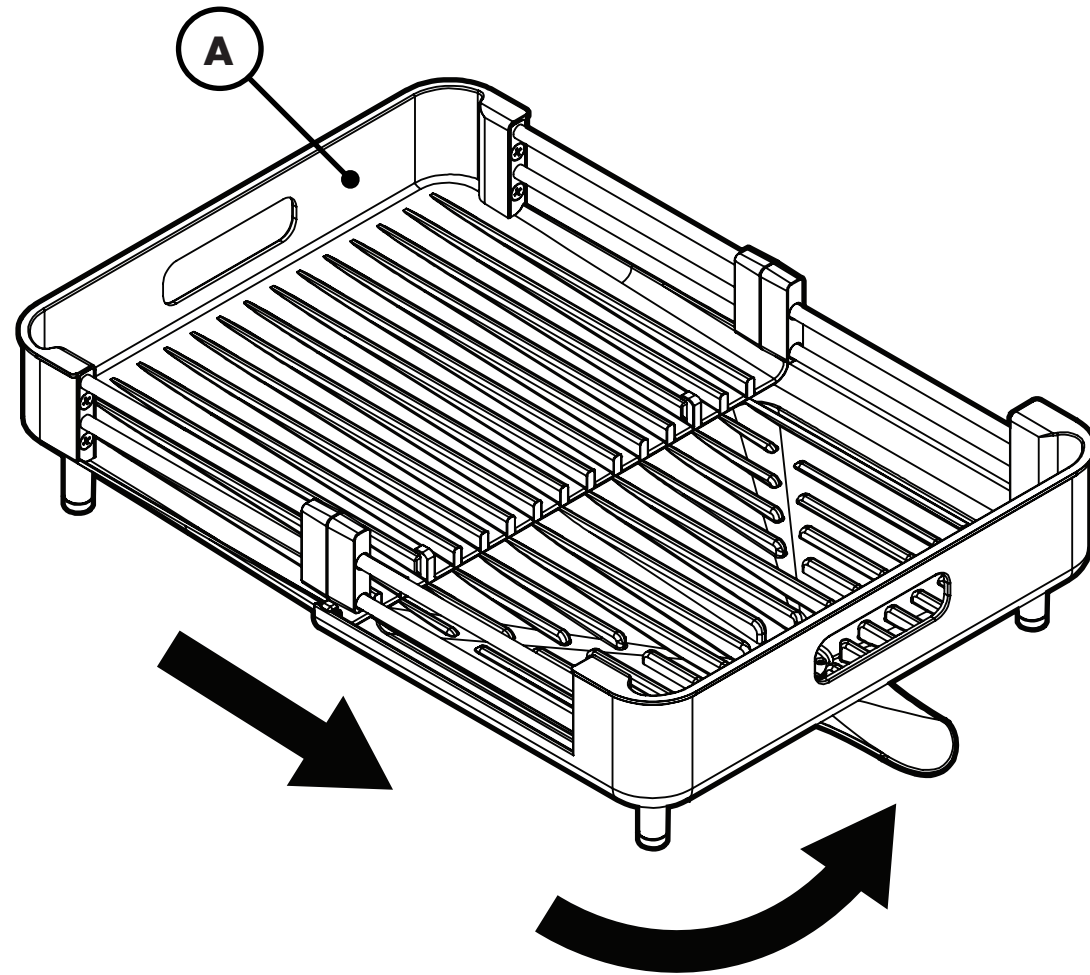


Assembly

2

Attach the plate rack


Take the plate rack (B) and lower it into the main rack, pressing it down into the plastic clips on either side until it sits flat and secure.

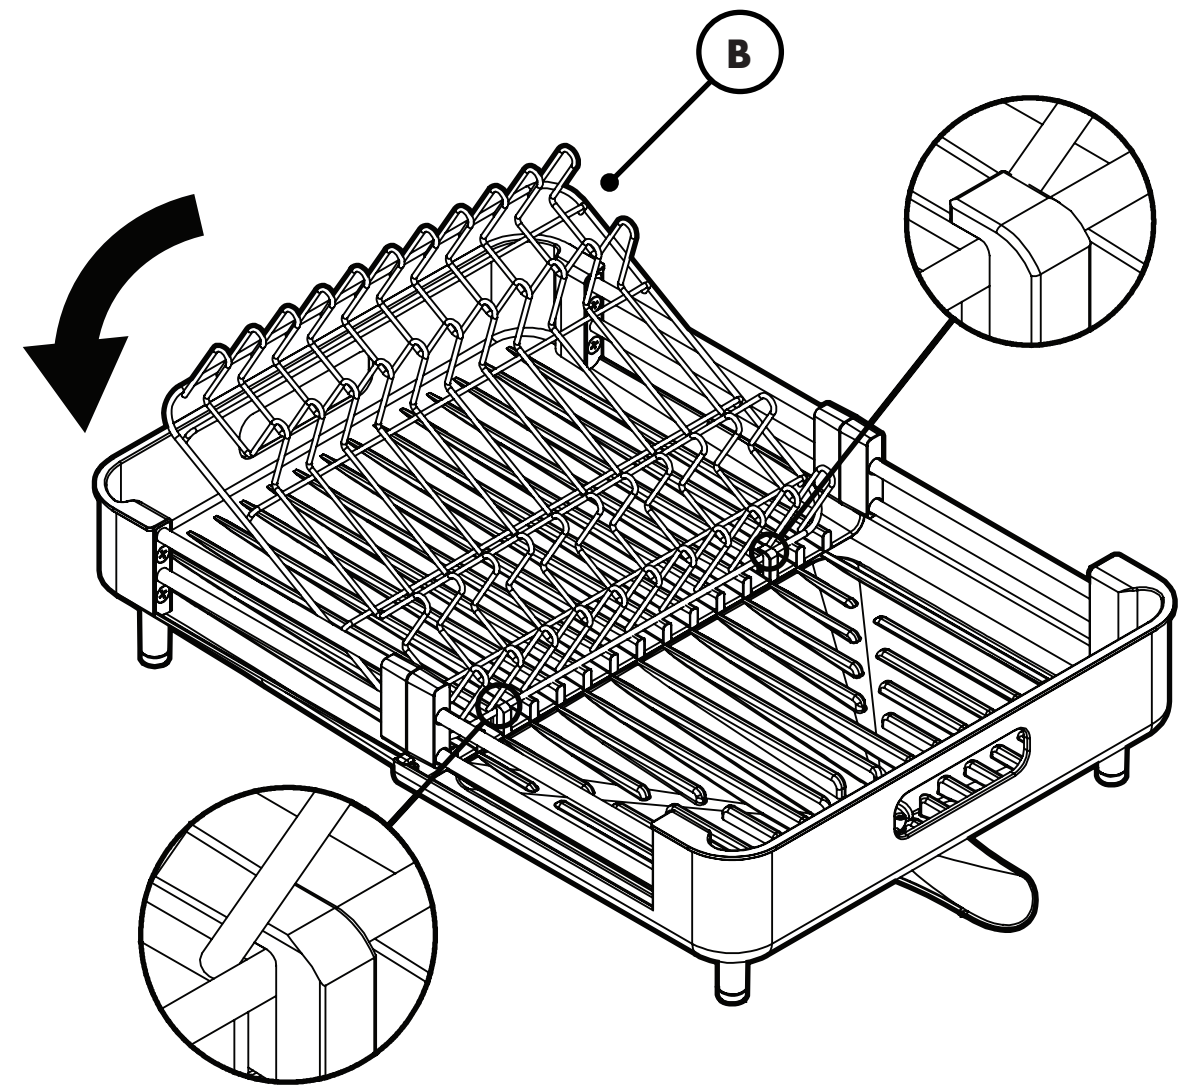

Assembly

3

Add the utensil holder
Slide the utensil holder (C) onto the side of the rack, hooking it into the channel on the rim until it clicks into place.

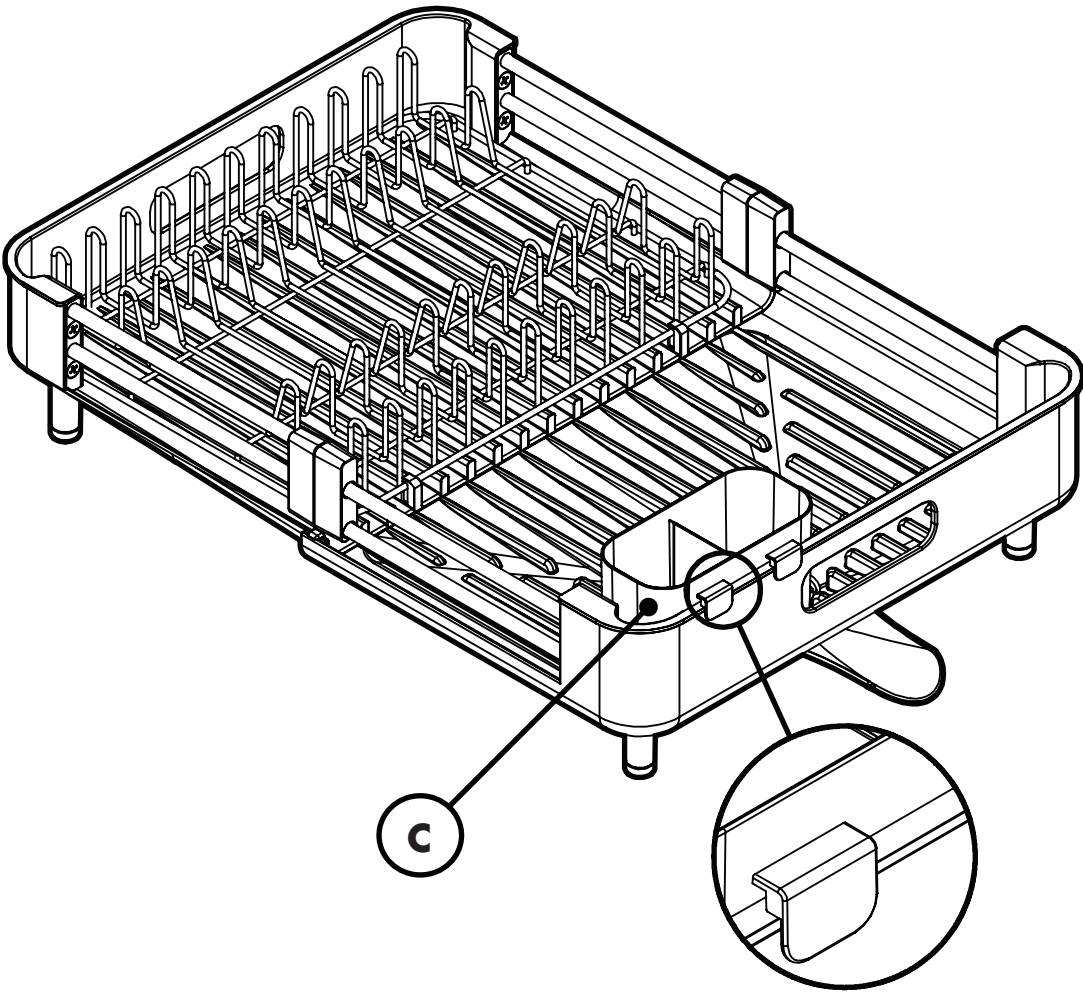

Information

Important Safety Notice

This product is **not suitable for use by children** or by individuals with **physical, sensory, or mental impairments** that may limit their ability to operate the equipment safely, **unless** they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

General Safety

This rack is designed to hold up to 10 plates, 8 bowls, 4 mugs, and around 15 pieces of cutlery — try not to overload it, as this could cause it to become unstable.

Always place the rack on a flat, stable surface well away from the edge of the worktop. Take care when handling the wire plate insert, as the wire ends can be sharp.

This product is not a toy — please keep it out of reach of young children. Check the plastic clips from time to time, and stop using the rack if any appear damaged or broken.

Maintenance

The wire rack components are made from high-quality stainless steel, which resists rust and is safe for use in kitchen environments.

Wipe down regularly with a damp cloth and a small amount of washing-up liquid to keep the rack clean and free from limescale or soap build-up.

Avoid abrasive scrubbers or harsh cleaning products, as these can scratch and dull the surface. The plastic draining tray and utensil holder can simply be rinsed under the tap.

Do not use bleach. Hand wash only.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonshef is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

