

1HORA

WIRELESS SPEAKER

BOC250



USER MANUAL

Please read the instructions carefully
before using the product.

PRODUCT SPECIFICATIONS:

- ◆ Model: BOC250
- ◆ Bluetooth version: 5.3
- ◆ Connection distance: 10M approx.
- ◆ SNR: 85dB
- ◆ Battery capacity: 2400mAh /7.4V/ 17.76Wh
- ◆ Playingtime: 5H
(100% volume)
- ◆ Speaker size: 70mm
- ◆ Power: 4Ω/10W*2 RMS
- ◆ Frequency response: 140HZ-18KHZ
- ◆ Input: 5V=2A
- ◆ Dimensions: 332.3*70.5*94.8mm
- ◆ Weight: 1250g

PACKING LIST:

Wireless speaker ×1
Type-C charging cable ×1
AUX cable ×1
User manual ×1

POWER ON/POWER OFF:

Power On: When the speaker is off, press and hold the power button to turn it on. The blue light will flash.

Power Off: When the speaker is on, press and hold the power button to turn it off. The blue light will turn off.

BLUETOOTH CONNECTION:

1. Turn on the Bluetooth speaker, and the blue light flashes for pairing. Search the bluetooth device "1HORA-BOC250" on your phone, it will connect with your phone.

2. As the Bluetooth speaker is turned on, it will automatically connect with the previous mobile phone that has connected before, no more searching Bluetooth device on your phone any more.

3. No pairing connected for 10 minutes, the speaker will automatically shut down.

MUSIC PLAYING & PICK UP CALLS:

1. When playing music, press the "Play/Pause" button to pause the music. Press the button again to resume playback.

2. When receiving a call, press the "Play/Pause" button to answer the call. Press the button again to end the call. To reject an incoming call, press and hold the button for 2 seconds.

(In other modes, short press the Bluetooth button to enter Bluetooth mode. When connected via Bluetooth, press and hold the Bluetooth button for 1 second to disconnect. Pressing it again will re-establish the connection.)

3. During music playback, press the "-" button once to decrease the volume. Press and hold the "-" button to go to the previous track.

4. Press the "+" button once to increase the volume. Press and hold the "+" button to skip to the next track.

MODE SWITCH:

The speaker will enter wireless BT mode when power on. Insert the TF card then it will automatically enter the TF card playback. Click the "ON/OFF" button to switch USB/TF card/AUX/wireless Bluetooth modes.

CHARGING:

1. This product has built in non-removable rechargeable battery, which can be charged by type C cable.
2. Charging voltage and current is 5V=2A.
3. When the speaker is charged, the red light will be on. As it is fully charged, the lights will be off.
4. Charging the speaker while playing music will speed up the decline of battery life. We suggest use the speaker after fully charged. Repeated charging and discharging will lead to the decline of battery life, which is a normal phenomenon of rechargeable batteries.

FREQUENTLY ASKED QUESTIONS (FAQS)

Connectivity Problems

1. Make sure the speaker is powered on and in Bluetooth mode.
2. Ensure that the phone's Bluetooth is turned on.
3. When pairing with the speaker, the closer the phone is to the speaker, the better, preferably within a half-meter range.
4. Unplug any USB drives, TF cards, or 3.5mm audio cables from the speaker, turn it off, then turn it back on before attempting to connect again.
5. Keep away from sources of interference and obstacles while using

Charging Issues

1. Use the original provided cable.
2. Change the charger for charging.
3. Do not charge in high-temperature environments.

FREQUENTLY ASKED QUESTIONS (FAQS)

Not Turning On

1. Confirm whether the speaker has power.
2. Replace the charging cable and charger, and recharge the speaker.
3. Remove the SD card, USB drive, and audio cable, then try again.

One Side No Sound

1. Disconnect the 3.5mm cable;
2. Change the song;
3. Turn off the speaker and then turn it back on.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC WARNING

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY STATEMENT:

All products are warranted to be free from defective materials and workmanship. The warranty period for all equipment provided by our company is 12 months after purchase. If you have any questions, please contact a customer service representative for assistance.