

# OUTDOOR SECURITY LIGHT


Model Number: DH8069BK  
DH8069WH




### Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326  
Monday – Friday 9:00 a.m. – 5:00 p.m. CST

## PACKAGE CONTENTS

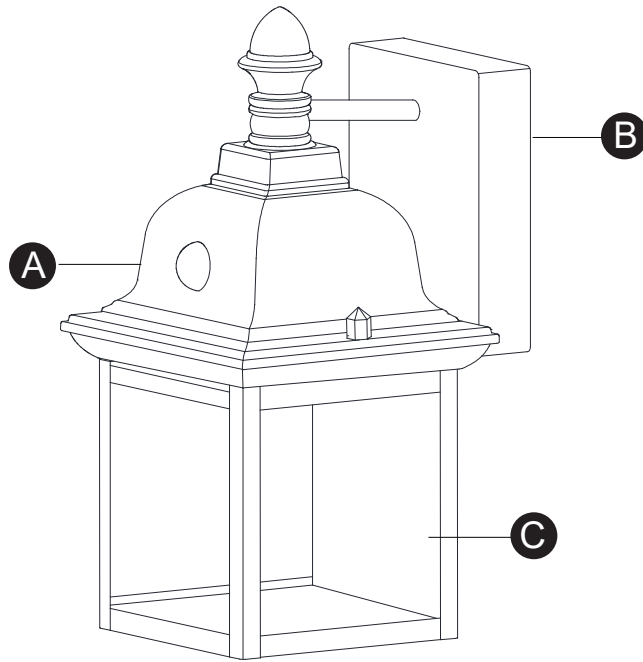


## HARDWARE CONTENTS Note: Hardware not shown actual size.

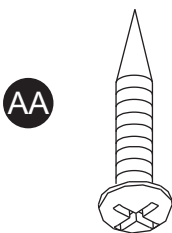

AA

Drywall Screw  
X2

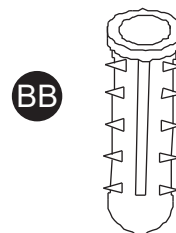

BB

Anchor  
X2

## SAFETY INFORMATION

1. Please read and understand this entire manual before attempting to assemble, operate or install the product.
2. **Integrated LED: 3 W**  
**Working Temperature Range of Sensor: -4°F ~ 104°F**

## PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Tools Required for Assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Safety Glasses, Ladder, Electric Drill.


## ASSEMBLY INSTRUCTIONS

### Important to know

1. No wiring required
2. Use three 1.5V AA batteries (not included)  
Recommend to use Menards SKU number:  
Energizer / 2105370 in Menards store or  
more than 2200mAh 1.5V AA lithium battery.
3. Easy to install
4. 120 lumen LED output
5. Wall mount only
6. Power switch setting:
  - a.) Set the switch to OFF position: the power turns off.
  - b.) Set the switch to ON position: light turns to sensor mode. Turn light on automatically when motion is detected and turn it off automatically when motion stops. Photocell keeps the light OFF during daylight.


### Installation Steps

1. Press the locking tab of the mounting plate and slide the mounting plate from the light fixture(A).

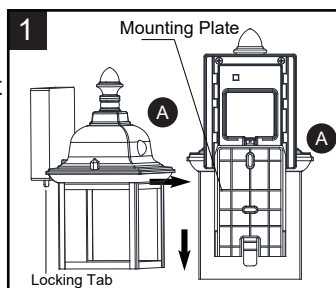


4. Install three 1.5V AA batteries (not included) into the battery compartment. Make sure the polarity of the batteries is correct. Restore the battery cover.

**NOTE: Recommend to use more than 2200mAh 1.5V AA lithium battery for extreme climate and long life span.**

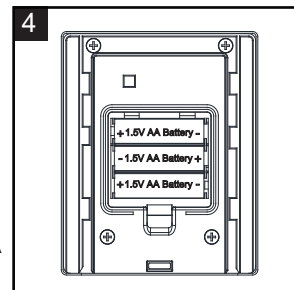


2. Hold the mounting plate to the wall and mark the set holes on the wall surface for drilling. Remove the mounting plate from the wall. Drill both holes. Thread the anchors(BB) into the holes, and then attach the mounting plate to the wall, secure the drywall screws(AA) through the set holes into the anchors(BB).

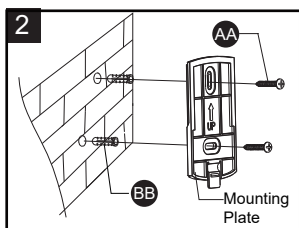



5. Press the power switch to the ON position to activate the motion sensor.

**Note: When power is first applied, the light will turn on immediately. Wait for about 30 seconds to allow the sensor to warm up.**

When motion is detected, the light will turn on. The light will stay on for a period of 10 seconds after all motion has stopped.

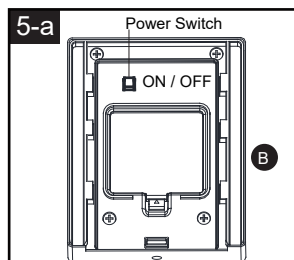


3. Pull out the locking tab of battery cover to open the battery cover and then remove the battery cover from the back plate (B).

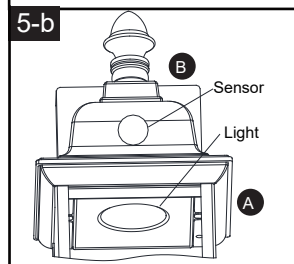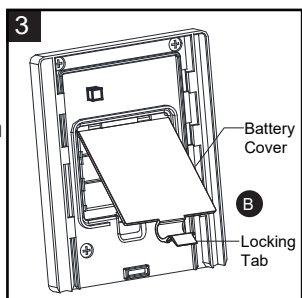


# ASSEMBLY INSTRUCTIONS (continued)

6. Place the guide slot of the light fixture(A) over the mounting plate and slide the fixture(A) down onto the mounting plate until the locking tab clicks and locks the light fixture(A) into place.

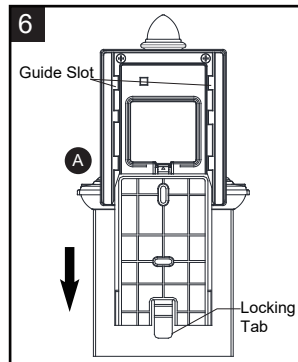

## Battery Replacement

Note: Properly dispose of drained batteries.

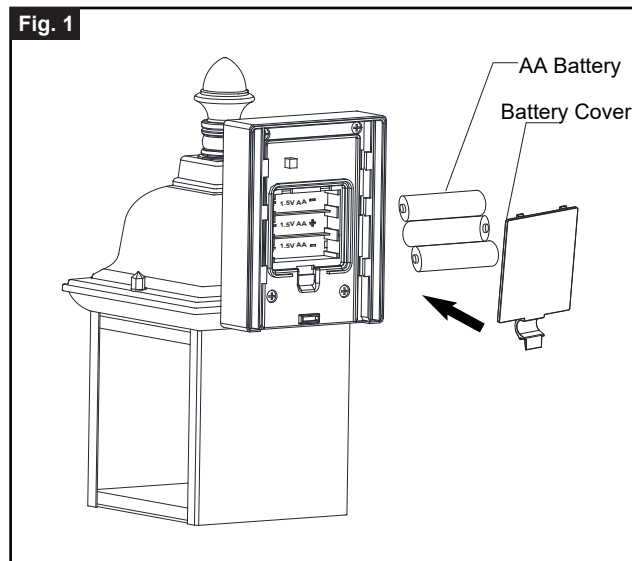




1. Press the locking tab of the mounting plate and slide the light fixture(A) up to detach the light fixture (A) from mounting plate.
2. Remove the battery cover on the back of the light fixture and remove the old batteries.
3. Install three new 1.5V AA batteries into the battery compartment. Make sure the polarity of the batteries is correct.
4. Restore the battery cover.
5. Place the guide slot of the light fixture over the mounting plate and slide the fixture down onto the mounting plate until the locking tab clicks and locks the light fixture into place.

## Notes:

1. The sensitivity of the motion sensor will increase as the environmental temperature gets cooler. For best performance, gently clean the lens with a soft cloth every 1 or 2 months to assure maximum sensitivity.
2. The fixture will provide a detection distance of up to 25 feet. (See Fig.2)
3. The sensor detects movement across a detection range of 120 degrees. (See Fig.3)
4. The sensor will be more sensitive to motion across its detection path than motion directly towards it. (See Fig.4)
5. To reduce possible nuisances, do not mount the fixture near a heat source like an air conditioner, vent or furnace exhaust, or in a direction facing any reflecting object or other light source.





### Where you install your fixture is important:

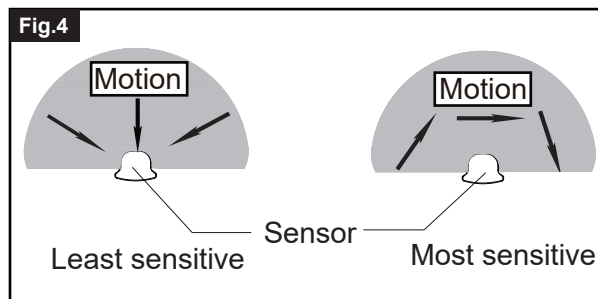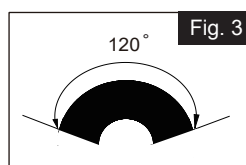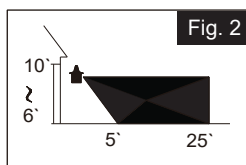Be sure the light is mounted straight on the wall otherwise, the detection distance may be limited.



The following parts are available for re-order if damaged or missing. Call our toll free at 1-800-887-6326

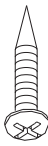Spare Parts List:

AA		<b>Drywall Screw X2</b>	BB		<b>Anchor X2</b>	 <b>Assembly Kit 5912MM (1 SET)</b>	C		<b>Glass Pannel X3 9996CS</b>
----	---	-----------------------------	----	---	----------------------	--	---	---	-----------------------------------

## CARE AND MAINTENANCE

- To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use paints, solvents, or other chemicals on this light fixture. They could cause a premature deterioration of the finish. This is not a defect in the finish and will not be covered by the warranty.

## TROUBLESHOOTING

Symptom	Possible Cause	Solution
If the light will not come on.	1. Power switch is in OFF position.	1. Turn power switch to the ON position.
	2. Weak battery.	2. Check battery charge and replace if necessary.
	3. It is possible to install where there is bright light.	3. Confirm that light is on after cover the sensor by hand, move another dark position and avoid direct sunlight.
If the light stays on.	1. Light control may be sensing small animals or automobile traffic.	1. Reposition light away from the area of movement.
	2. False triggering caused by a heat source, such as a heater or dryer vent, or heated swimming pool.	2. Eliminate heat source or relocate fixture.
Light is not as bright as normal, the light flashes or blinks.	Weak battery.	Check battery charge and replace if necessary.

If unable to fix any of the above issues, please consult a certified electrician.

**FIVE-YEAR LIMITED WARRANTY:** If, during normal use, this PATRIOT LIGHTING® lighting fixture breaks or fails due to a defect in material workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the product or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



### Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326  
Monday – Friday 9:00 a.m. – 5:00 p.m. CST