

INSTRUCTIONS SHEET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.

These operating, installation, and safety instructions are integral parts of the product.

IMPORTANT:
Please read all “CONSUMER INFORMATION” before operating this toy vehicle.
ADULT SUPERVISION REQUIRED.

Note to Adults: to ensure that the child’s play is both safe and fun, please review all operating instructions and safety tips in the CONSUMER INFORMATION section with your child.

--- CONSUMER INFORMATION ---

CONTENTS:
1 x Vehicle
1 x Transmitter Controller

- SAFETY TIPS:**
- Toy surface may become hot and cause burns if the electronics get wet. DO NOT OPERATE this vehicle near/in/through water, snow, sand, grass or any wet or muddy surfaces.
 - Never play this vehicle on streets! The streets are for real cars!
 - Do not pick up vehicle while in motion.
 - Always place the car gently on the floor by hand. Never throw the car onto the floor.
 - Avoid collisions with walls, any hard objects, or human/animal bodies.
 - Keep fingers, hair and loose clothing away from tires and wheel hubs.
 - To avoid accidental operation, remove all batteries from toy when not in use.
 - Do not connect this toy with other power supplies.
 - Do not insert any wire into electrical outlets.
 - Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operations.
 - Stay clear of obstructions and hazards to avoid injury and damage.

THIS VEHICLE IS DESIGNED TO WORK WITH 3 (THREE) STANDARD “AA” ALKALINE BATTERIES, SOLD SEPARATELY.
CONTROLLER IS DESIGNED TO WORK WITH 2 (TWO) STANDARD “AAA” ALKALINE BATTERIES, SOLD SEPARATELY.

- BATTERY SAFETY INFORMATION**
- It is recommended to use only Alkaline type batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
 - Remove batteries if vehicle will not be used for a long period of time to prevent possible battery leakage.
 - Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
 - Rechargeable batteries are to be removed from the toy before being charged.
 - Rechargeable batteries are to be charged by an adult only.
 - Non-rechargeable batteries are not to be recharged.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short-circuited.

- QUICK TIPS**
- When your vehicle starts to lose power, it may lose function or performance. It’s time for fresh batteries. Your vehicle’s running time may change depending on your driving style.
 - Radio interference can make your vehicle run abnormally. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings; or CB radios. Try to stay away from these!
 - Don’t store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
 - If the vehicle resets automatically, that means the batteries are weak and need to be changed.

 
CLEANING INSTRUCTION
To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy clean with damp cloth. Wipe dry. DO NOT IMMERSE IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry before putting batteries back into clean, dry battery compartment.

- INSTRUCTION FOR DISPOSAL OF WASTE**
- Your batteries and electronic toys should be recycled or disposed per your local waste management guidelines.
 - Contact your local waste management officials for information regarding the environmentally sound recycling and disposal of batteries and electronic toys.


TROUBLE SHOOTING

PROBLEM	SOLUTION
Vehicle will not START	1. Power switch is off. Make sure to turn it on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Replace batteries and/or install new batteries.
Vehicle does not respond to controls.	1. Transmitter controller battery is drained. Replace the controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.
Vehicle does not drive straight.	1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight / forward.
Vehicle does not move	1. Stop operation, switch off the power and rest your vehicle a few minutes. 2. Check the position of the batteries in the vehicle, they may have been knocked loose during play.
Vehicle does not respond properly	Major reason is out of range. Bring controller closer to the vehicle. If problem still happen, remove the controller batteries and replace with new batteries and restart (ON/OFF) the vehicle.
Transmitter controller does not work	The controller light is off, its battery is drained. Replace the controller battery.

1

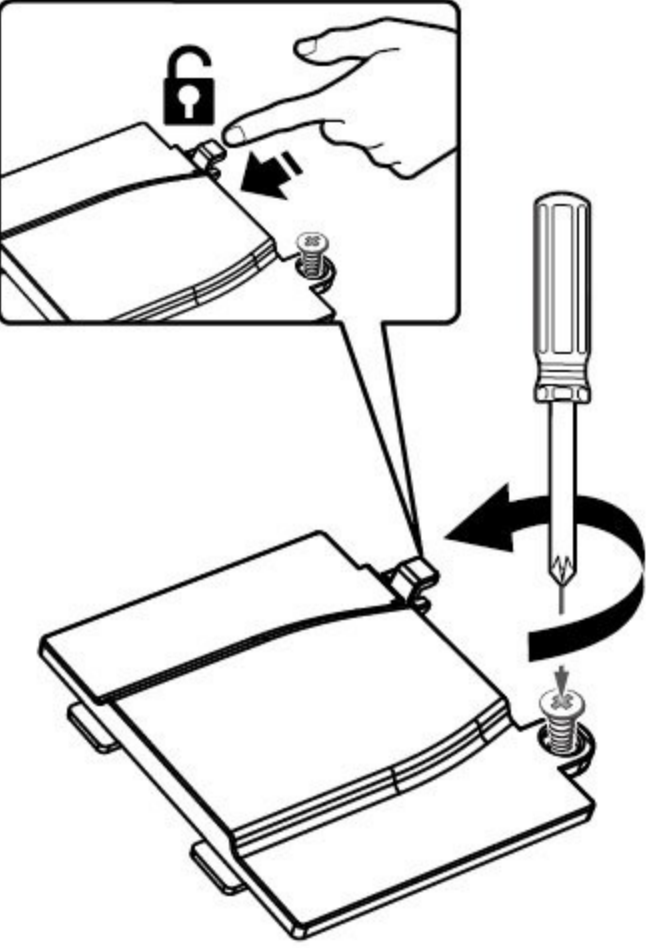

3 x 1.5V “AA/LR6”
Not included

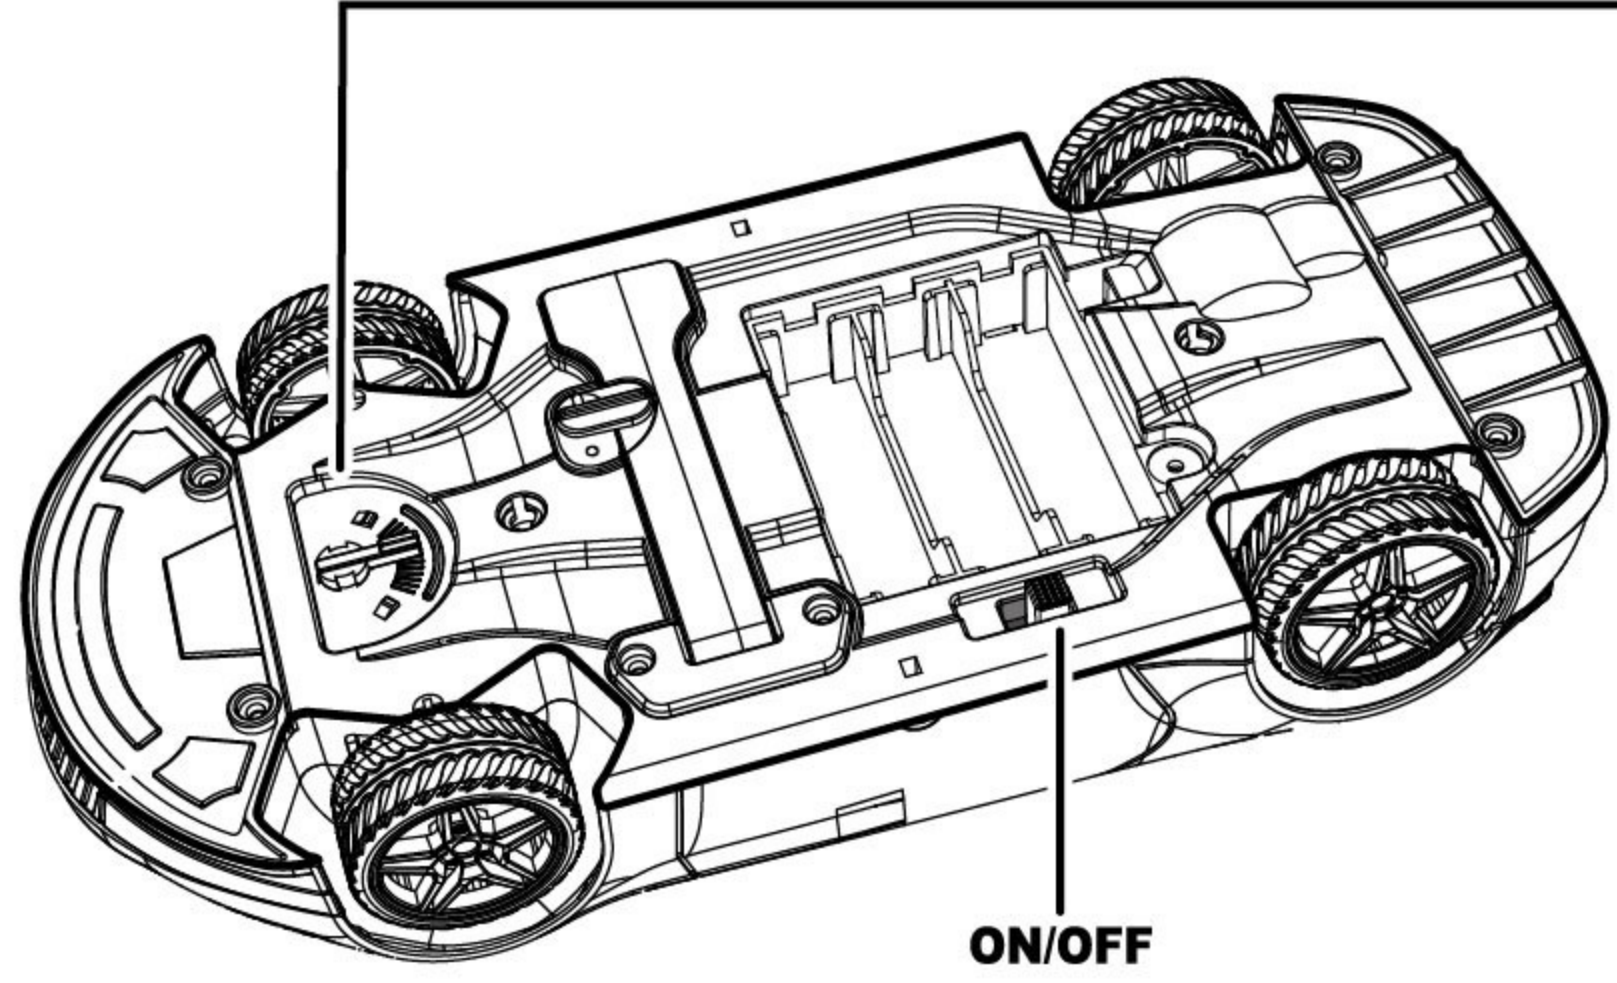 


Steering Dial


TO ADJUST STEERING ALIGNMENT
Adjust the steering alignment lever on the underside of the vehicle when the vehicle doesn't run straight / forward.



 2

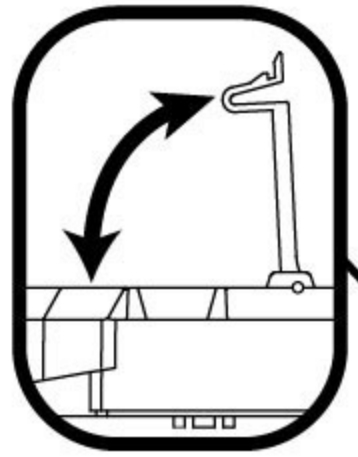

2 x 1.5V “AAA/LR03”
Not included

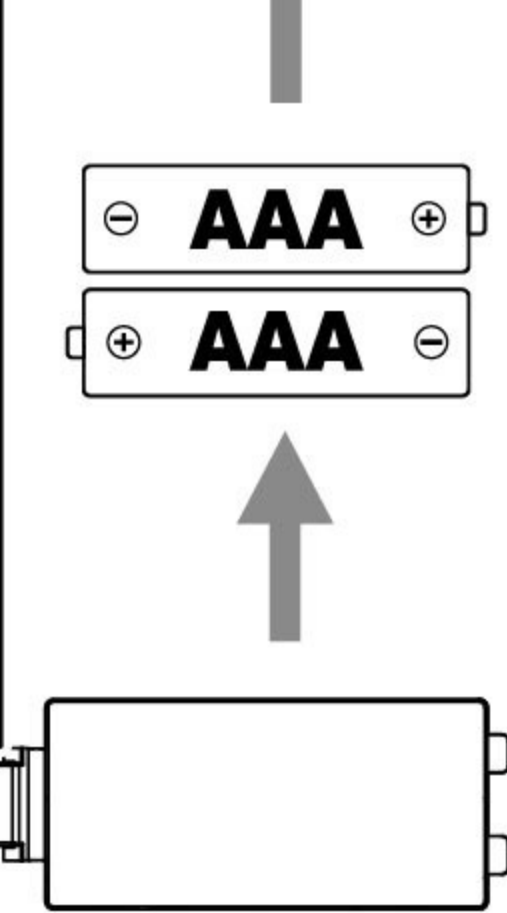 



LED

 
Left

Right

Forward

Reverse


OFF/ON

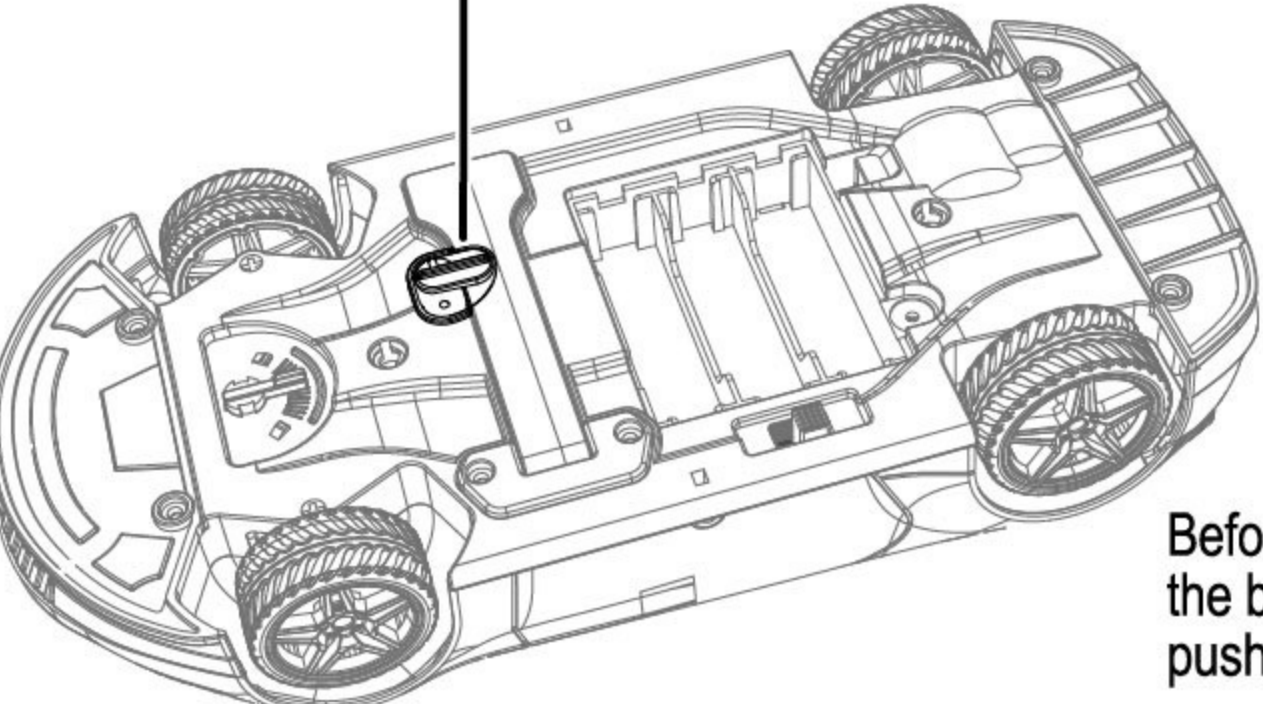

Close

Open

 Before playing, please unlock the hitch on the bottom of the car. When you're done, push the lock back into place.

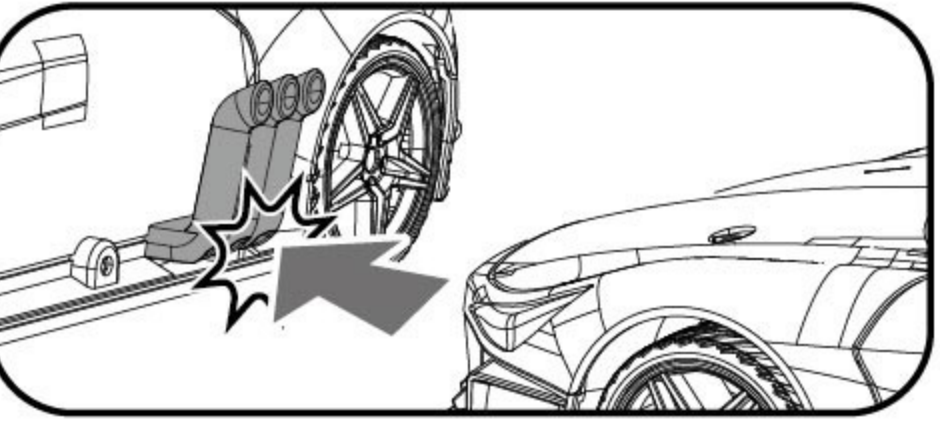

Close

Open

When the two cars collide at the position of the exhaust pipe, the rod underneath will pop out and the car will flip.

**Important!
Problems?**



**U.S.A & Canada
30-Day Limited Warranty
Jada Toys Products**

**For customer support
please contact us at:**
cs@jadatoys.com or
1-800-679-5232
Between the hours of 8:30 am to 5:30 pm :
Pacific Time : Monday – Friday
WWW.JADATOYS.COM

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for thirty (30) days from the date of purchase. Jada Toys will repair or replace the product, at our sole discretion, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the phone numbers listed below. Many problems can be solved in this manner. If necessary, you may be asked to return the product for a replacement or refund at the place of purchase (please refer to the retailers return policy) or you may be instructed to return the product (postage paid and insured by the consumer) to Jada Toys – address to be provided upon contacting us via phone/email. Include your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair / replacement and return shipment will be free of charge. Please return the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty. Jada Toy’s liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole discretion, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Expect some delay in January following the holiday season.
Please be patient and keep trying the toll-free number.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- ✗ Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.
- ✗ Products with batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

6+

The product uses 2.4GHz remote control technology.

MADE IN CHINA

NO. 38150

