

GROOVZ



@Groovzaudio



@Groovzaudio

Thank you for your purchase! We hope you enjoy your new **Groovz Headphones**.

If you have any questions or concerns, please reach out: support@groovzaudio.com



Visit us at
www.groovzaudio.com
for exciting product
offers and to register
your warranty



JTB PRODUCTS LLC



GROOVZ[®] TOUCH



USER MANUAL

FCC Information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.


TABLE OF CONTENTS

DEVICE DIAGRAM	01	• UI Interface Showcase	09-10
SPECIFICATIONS	02		
PACKAGE CONTENTS	02	UNDERSTANDING YOUR GROOVZ TOUCH SCREEN INTERFACE	11-14
SETTING UP YOUR HEADPHONES	03	HOW TO OPERATE	15
• Fitting	03	CLEANING YOUR EARBUDS	16
• Powering On	04	TROUBLESHOOTING	17-18
• Powering Off	05	PRECAUTIONS FOR USE	19-20
• Bluetooth Pairing	06		
• Understanding Power Display	07	WARRANTY INFORMATION	21
• Charging Your Headphones	08	NEED HELP?	22

Warning:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

 - 1 Display
- 2 Charging pin
- 3 Type-C interface
- 4 Button
- 5 Ear Cap
- 6 Charging contacts
- 7 Touch area

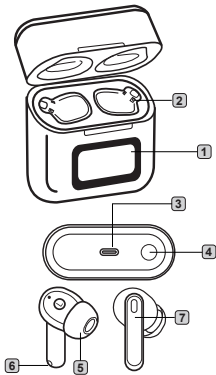

TECHNICAL SPECS

SPECIFICATIONS

Model: GROOVZ (Touch)	Working time: 15 Hours
Bluetooth: v5.4	Working voltage: 3.3V-4.2V
Bluetooth Range: 30 feet	Charging time: 70 minutes
Earbud Battery: 33mAh	Speaker impedance: 32Ω±15%
Charging Case Battery: 400mAh	Frequency response: 20-20KHZ
Power input: 5V	Transmission distance: 30 Feet
Standby time: ≤ 140 hours	

BOX CONTENTS

- Charging box
- Earbuds
- Type-C Charging Cable
- User Manual
- Set of Interchangeable Earbud Tips



SETTING UP YOUR HEADPHONES

 
01. FITTING

Groovz Earbuds come with three sizes of ear tips: small, medium, and large. We recommend trying each size to find the most comfortable and secure fit. Your earbuds should feel snug in your ears without causing discomfort and should stay in place during everyday movement. A proper fit also helps to deliver the best sound quality and noise isolation.



02. POWERING ON/OFF

POWERING ON (AUTO MODE)

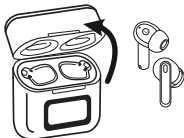

- Open top cover of charging case.
- Remove earbuds from case.
- The earbuds will automatically enter pairing mode.

 
POWERING ON (MANUAL)



- With earbuds already removed from charging case, press & hold both left and right earbud touch control locations for 5 seconds.


POWERING OFF

- Remove earbuds from ears.
- Place left and right earbuds into charging case.
- Close charging case and this will automatically power down the earbuds.

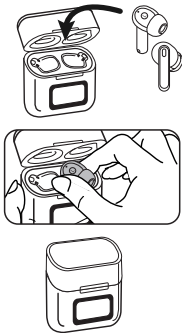

03.BLUETOOTH PAIRING

 - Remove earbuds from charging case.
- Turn ON Bluetooth from device.
- Find bluetooth name "Groovz" in list of pairing options on device.
- Click to connect, and Groovz earbuds will announce successful connection.

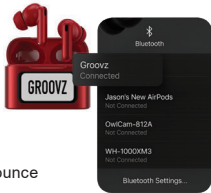

NOTE: If there is pairing device information, the headset will automatically connect to the device within 2-4s. If the headset is not connected to the device, the headset automatically turns off after 3 minutes of standby.

BUTTON FUNCTION: For the first pairing: Triple-click the button to pair the left and right earbuds. Triple-click the button again to pair the earbuds with the charging case.

04. UNDERSTANDING POWER DISPLAY

- Your Groovz charging case features a touchscreen display that shows the battery level of both the case and the earbuds.
- When you place the earbuds in the case, the screen will indicate they are charging.
- A full battery is shown when the screen shows 100%. If the screen shows a red low battery symbol, the case or earbuds need charging.



Charging Interface



Low battery alert

05. CHARGING YOUR HEADPHONE

- To charge the case, connect the included USB-C cable to a power source. The touch screen will light up to show charging progress.
- When the earbuds are placed inside the charging case, they will begin charging automatically.
- For the best performance, keep your earbuds and case fully charged before use.



06. UI INTERFACE SHOWCASE



 
Noise Reduction Mode




Music Player




Calendar Settings



Time Settings

 


Brightness

 


Locate



 Power Menu



Incoming Call

 


Volume



Wallpaper



 Lock Screen



Call Screen

Understanding Your Groovz Touch Screen Interface

Your Groovz Touch charging case features a built-in touchscreen display that gives you fast access to useful controls and system info. Here's what each screen does and how to use it:

Noise Reduction Mode

Screen Options: OFF | ANC | TRANSPAR

How to Use:

Swipe to toggle between:

OFF – All sound modes are disabled.

ANC (Active Noise Cancellation) – Blocks outside noise for immersive listening.

TRANSPAR (Transparency Mode) – Lets in ambient sound so you can stay aware of your surroundings.

Music Player

Controls: Play / Pause / Next / Previous

How to Use:

Tap:

Center to Play or Pause

Right arrow for Next Track

Left arrow for Previous Track

Calendar Settings

How to Use:

Tap arrows to select the year, month, and day.

Tap the red X to cancel or the blue ✓ to confirm your selection.

Time Settings

How to Use:

Tap the hour, minute, or second fields to adjust time.

Confirm with the blue checkmark.

Brightness

How to Use:

Swipe the slider left or right to adjust the screen brightness.

Find My Earphone

How to Use:

Tap the left or right earbud icon to make that earbud play a sound. (Helpful for finding a lost earbud nearby.)



Power Menu

Options: Restart | Shutdown | Recovery | Clear Pairing

How to Use:

Tap:

Restart – Reboots the case system

Shutdown – Powers off the case

Recovery – Use if the screen becomes unresponsive

Clear Pairing – Erases saved Bluetooth connections



Incoming Call

How to Use:

Tap the green phone to answer or the red phone to reject.

(Only functions when the earbuds are connected to your phone.)



Volume Adjustment

How to Use:

Swipe left or right to adjust volume of your earbuds.



Wallpaper

How to Use:

Swipe to scroll through available backgrounds.

Tap to select your favorite wallpaper for the display screen.



Lock Screen

What It Does:

This is the default idle screen. Swipe or tap to unlock and return to the main interface.



Call Screen

What It Shows:

Displays call timer and allows microphone toggle during active calls.

HOW TO OPERATE

ON STATE	Turn off Manually	Tap and hold for 5 seconds
	Play/Pause	Single tap
PLAYING STATE	Previous track	Double click left
	Next track	Double click right
	Volume +	Triple tap left
	Volume -	Triple tap right
CALL STATE	Answer/End a phone call	Double tap
	Reject a phone call	Long press
IN SIRI	Activate voice assistant	Four tap touch area
NOISE CANCELLATION	Transparency mode-ANC on-ANC off	Long touch left/right ear 3s

CLEANING YOUR GROOVZ EARBUDS



- Gently pull off the ear tips from each earbud.
- Rinse the ear tips with water only—Do not submerge the earbuds in water, do not use soap or household cleaners.
- Wipe the ear tips with a soft, dry, lint-free cloth.
- Allow the ear tips to dry completely before reattaching them to your earbuds.

TROUBLESHOOTING

HAVING TROUBLE PAIRING YOUR GROOVZ EARBUDS?



- **Ensure Bluetooth Is On:** Confirm Bluetooth is enabled on your smartphone, tablet, or computer.



- **Check Earbud Battery:** Place the earbuds in the case and check the touch screen display to ensure they are charged.

- **Charge the Case:** Connect the charging case to power if the battery is low.

- **Restart Your Devices:** Restart your device (phone, tablet, etc.) and the earbuds.

RE-PAIRING STEPS:

- **Forget the Device:** Remove the earbuds from your device's Bluetooth list (this is often called "forget" or "unpair").
- **Restart Bluetooth:** Turn Bluetooth off and back on again on your device.
- **Re-Pair the Earbuds:** Place the earbuds in pairing mode and attempt to pair again.

RESETTING:



- **Charging Case Reset:** Place the earbuds in the charging case, then press and hold the button on the case until the LED indicator flashes red, then white. This signals that your earbuds have been reset and are ready to pair again.

PRECAUTIONS FOR USE

- Store headphones in a cool dry, ventilated environment.
- Avoid contact with oil, water vapor, and steam.
- Avoid cleaning with irritating, organic solvents or materials containing these ingredients.
- Use the headphones according to the provided specifications, and avoid exposing to environments that could affect performance like moisture, dust, or extreme heat.

- To ensure smooth connection, it is recommended that the distance between the mobile phone and the headphones be within 10 meters.
- If the headphones fail to connect or communicate properly, do not dismantle the headphones without permission. The device and its accessories are not guaranteed otherwise.
- To charge the headphones, please use the standard Type-C charging cable or the one specified by our company.
- Keep the headphones sufficiently charged to ensure normal operation.

WARRANTY INFORMATION

Groovz headphones come with a 1-Year Limited Warranty from the date of purchase. The warranty covers defects in materials and workmanship. It does not cover accidental damage, misuse, or unauthorized repairs. Should your product become defective during the warranty period, we will repair or replace (at our option) your product.



To register your warranty or report any defects, please contact customer support at support@groovzaudio.com.

**GROOVZ is a registered trademark of
JTB Products LLC, West Chester, PA.
Designed and Engineered in the USA.**

NEED HELP?

SCAN THIS CODE WITH
YOUR PHONE FOR



GROOVZ

- Step-by-step tutorial videos
- Frequently asked questions
- 7-day-a-week support

www.groovzaudio.com
West Chester, PA