



User Manual

RC Shark

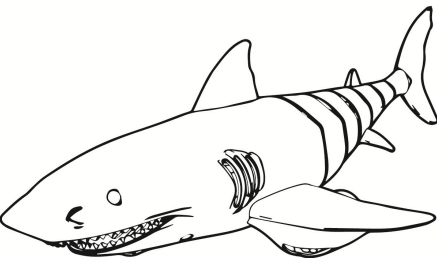


No.9966A

<RC TOY'S DETAILS>

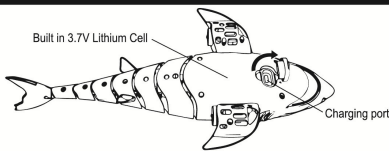


<REMOTE CONTROL FUNCTIONS>

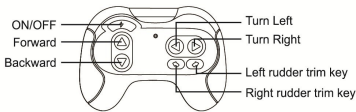 

< CHARGE INSTRUCTION >

1. Plug the USB cable into a 5V power source (e.g. PC, phone charger, power bank) with maximum 2A output.
2. Plug the charging cable into the port in the back of the vehicle.

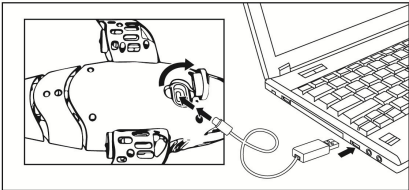


Warm Notice:

1. Do not charge the battery immediately after use, let's the battery cool for at least 10 minutes.
2. The charging indicator will light up during charging and light will turn off when finishing charging.

-1-
 
<BATTERY INSTALLATION>

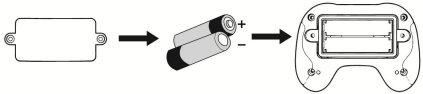


1. Open the battery cover.
2. Install 2x1.5V AAA batteries (not included) in the correct positive (+) and negative (-) polarity direction.
3. Close the battery cover.


Notice: If the remote control will not be used for a long time, please make sure to take out the batteries.

<OPERATION>

1. Forward and Backward

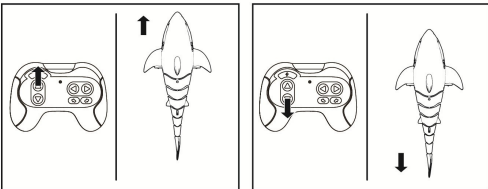

2. Turn Left and Turn Right

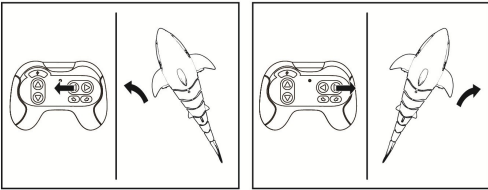

When the shark's battery is low, the lights on the eyes will flash.

-2-

<NOTE>

1. The motor will rotate only when the product is put into water, not when held in the hand.
2. Please play on the water.
3. Adult supervision recommended at all times.
4. Remove all batteries when not using it for a long period of time.

<HOW TO REMOVE OR PLACE THE BATTERY>

- Non-rechargeable batteries cannot be charged.
- The battery is charged by children 8 years of age and older.
- Different types of batteries or new and old ones should not be mixed.
- The battery should be inserted with the correct polarity.
- Used-up batteries should be removed from the toys.
- The power terminals must not be short-circuited.

<TROUBLE SHOOTING>

PROBLEM	SOLUTION
Motor does not run	1. Power switch is off please turn on. 2. Battery exhausted, please charge. 3. Re-frequency.
Suddenly stopped during operation	1. Check if the battery is electrical. 2. Replace or recharge the battery.
Remote control Power indicator flashing	Replace the battery.
Driving becomes slow	Recharge the battery.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

-3-