

 
User Manual of Product 1:

Toshiba Small Rice Cooker 3 Cup Uncooked – LCD Display with 8 Cooking Functions, Fuzzy Logic Technology, 24-Hr Delay Timer and Auto Keep Warm, Non-Stick Inner Pot, White

User Manual of Product 2:

TOSHIBA EM925A5A-SS Countertop Microwave Oven, 0.9 Cu Ft With 10.6 Inch Removable Turntable, 900W, 6 Auto Menus, Mute Function & ECO Mode, Child Lock, LED Lighting, Stainless Steel

TOSHIBA

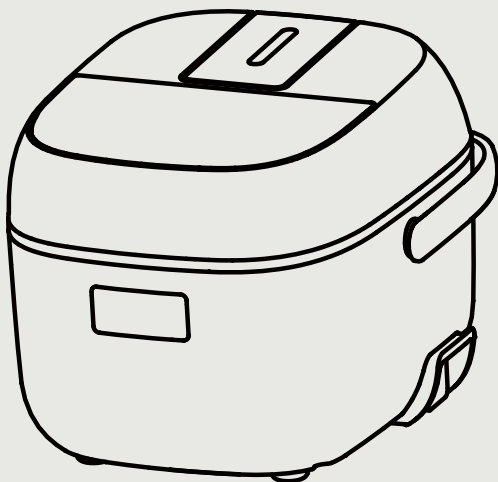

USER MANUAL

Electric Rice Cooker

TRCS02

Safety Precautions

Product Features

Installation Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or the manufacturer for details.

0	Safety Precautions.....	4
1	Product Features.....	5
2	Installation Instructions.....	6
	Unpacking.....	6
	Electrical Requirements	6
	Location Requirements.....	7
3	Operating Instructions.....	8
	Controls	8
	Using the Rice Cooker.....	9
4	Care And Cleaning.....	18
5	Troubleshooting Tips	23
6	Warranty.....	25

Read This Manual

Inside you'll find many helpful hints on how to use and maintain your rice cooker properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your rice cooker. You'll find many answers to common problems in the troubleshooting tips - you should be able to fix most of them quickly before calling service. These instructions may not cover every possible condition of use, so common sense and attention to safety is required when operating and maintaining this product.



SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The level of risk is shown by the following indications.



WARNING: This symbol indicates the possibility of death or serious injury.



CAUTION: This symbol indicates the possibility of injury or damage to property.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:



WARNING

- Read all instructions before use.
- Do not touch hot surfaces. Use potholders or oven mitts when handling the cooking bowl or lid.
- To avoid electrical shock do not immerse cord, plugs, or the rice cooker housing in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Keep appliance and cord away from children.
- Unplug from electrical outlet when not in use and before cleaning.
- Allow appliance to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
- Do not disassemble, repair or modify the rice cooker. For any repair, consult a Toshiba authorized Service Center.
- Do not operate the rice cooker if any part of the unit is damaged.
- Do not use outdoors. Intended for indoor household use only.
- Do not let cord hang over edge of countertop, or touch hot surfaces, including the top of the rice cooker. Never use outlet below countertop, and never use with an extension cord.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not place near heat-sensitive curtains.



WARNING

- The total amount of food and water should NOT exceed the MAX level marked on the cooking pot. Some foods such as rice, expand during cooking and should not fill the cooking pot over half way.
- Spilled food can cause serious burns. Extreme caution must be used when moving an appliance containing hot liquids or hot oil.
- Do not use appliance for other than intended use.
- Always attach cord to appliance first, and then plug cord into a wall outlet.
- A short power cord is used to reduce the risk resulting from the cord being grabbed by children, or becoming entangled in or tripping over a longer cord.
- To disconnect, set all controls to "Off," then remove plug from wall outlet.
- The use of accessory attachments not recommended by Toshiba may cause injuries.
- Handles are not used to carry heavy objects. Items in the cooker can not be moved by the handle.



CAUTION

 
To reduce the risk of Electric Shock, cook only in removable container.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS DESIGNED FOR HOUSEHOLD USE ONLY.

KEEP APPLIANCE AWAY FROM CHILDREN.

PRODUCT FEATURES

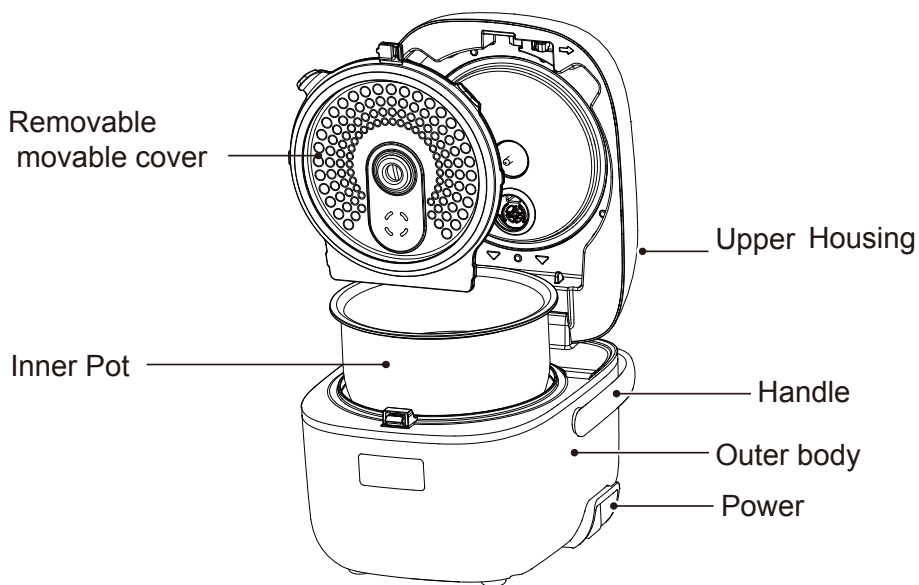

Accessories

Serving Spatula Soup Ladle Measuring Cup Power cord



INSTALLATION INSTRUCTIONS

Unpacking

Remove all packing materials.

Wash the cooking pot, inner lid, steam port and other accessories, and then dry thoroughly before using.

Electrical Requirements



WARNING

Electrical Shock Hazard

- Plug into a grounded 3 prong outlet.
 - Do not remove the ground prong.
 - Do not use an adapter.
 - Do not use an extension cord.
- Failure to do so can result in death, fire or electrical shock.

A 120 V, grounded electrical supply is required. It is recommended that a separate circuit serving only the rice cooker is used. Sharing the power supply with other appliances will result in overheating.

Power Supply Cord



NOTE

This Rice Cooker has a 3-prong grounded plug. To reduce the risk of electrical shock, the plug will fit into an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug.

A short power supply cord is used to reduce the risks of becoming entangled in, or tripping over a longer cord, or of the cord being grabbed by children.

If the power supply cord is too short, have a qualified electrician or technician install an outlet near the appliance. Do NOT use an extension cord.

Location Requirements

 
This rice cooker is designed for household use only; the cooker should not be used for commercial use.

Use indoors on a stable, level, non-heat sensitive surface such as a countertop in a location where the lid can be fully opened; do NOT use outdoors.

Do not place the rice cooker on an area of the countertop that is exposed to direct sunlight, or where it might be splashed with cooking oil.

RECOMMENDED CLEARANCE

Steam and heat emitted from the rice cooker may damage or discolor nearby walls or cabinets. It is recommended that the rice cooker be placed a minimum distance of 12" (30.5 cm) from walls or cabinets.

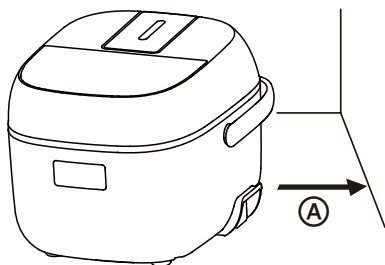

(A) At least 12" (30.5 cm)

OPERATING INSTRUCTIONS



WARNING

Fire/Burn Hazard

Unplug immediately and do not use rice cooker if:

 
- The power supply cord becomes abnormally hot during use.
- Smoke is emitted from the rice cooker or a burning odor is detected.
- The rice cooker is cracked or there are loose or rattling parts.
- The cooking pot, outer lid or inner lid is broken or deformed.

Failure to do so may result in fire, electric shock or injury.

Controls

IMPORTANT

To select a cooking program, the rice cooker must first be plugged into a grounded 3 prong electrical outlet (ON).

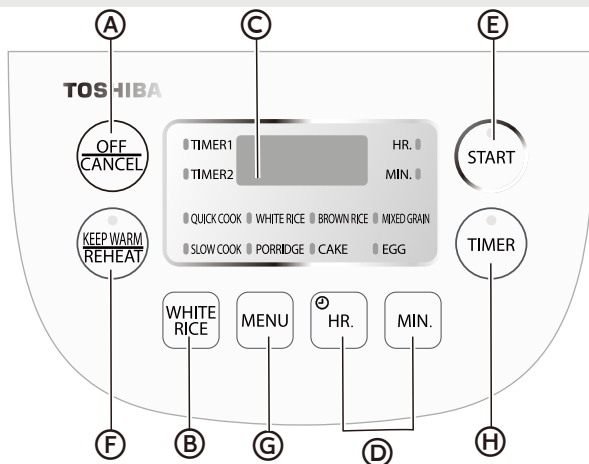

A OFF/ CANCEL

Press the OFF/CANCEL button to stop cooking and return to ON (standby mode).

B White Rice

Press the WHITE RICE button to set the program to cook white rice.

C Cooking Programs and Time Display

D Hour and Minute Buttons

Press the HR. or MIN. button to set the current time/delay time/the cooking time of slow cook and porridge.

E Start

Press START to begin cooking. The control panel will illuminate with the set program.

F Keep Warm/Reheat

Press the KEEP WARM/REHEAT button to keep warm or reheat the cooked rice.

G Menu

Press the MENU button to select from the preset cooking programs listed on the display.

H TIMER

SET CURRENT TIME

The rice cooker uses a 24-hour clock (0:00 [midnight] to 23 : 59 [11:59pm]). The clock cannot be set while the rice cooker is being used for: cooking, keeping warm or reheating, or after the delay timer has been set.

1. Plug the power supply cord into a grounded 3-prong electrical outlet to turn on the rice cooker.
2. Press and hold the HR button  for 2+ seconds until the time flickers on the display.
3. Press the HR button  continuously to change the hour or press and hold the button to fast forward.
4. Press the MIN. button  continuously to change the minutes or press and hold the button to fast forward.
5. When the correct time-of-day appears on the display, quickly press START to set the time.

Using the Rice Cooker

INTRODUCTION

The Toshiba® Rice and Grain Cooker benefits from the use of Fuzzy Logic, a technology that senses moisture levels to accurately cook food. Cooking time and temperature are defined by the appliance. Our highly intelligent Rice and Grain Multicooker automatically adjusts the heat and timing for perfect results every time.



IMPORTANT

- Do NOT place anything on or over the rice cooker lid, during use.
- Do NOT touch the steam vent during cooking.
- Do NOT place the interior cooking pot on a cooktop burner; the high temperature will warp the pot. The cooking pot is designed to be used only in the rice cooker.
- Do not use a pot or container other than the cooking pot (provided) in the rice cooker.
- Do not insert any foreign objects into the air vent or gaps at the bottom of the rice cooker.
- Do not season rice while it is being kept warm in the cooking pot. Seasonings left in contact with the interior of the cooking pot may damage the non-stick coating.
- Do not use metal cooking utensils. Metal utensils may scratch or damage the non-stick coating.

MEASURING RICE



IMPORTANT

The total amount of rice and water should NOT exceed the 3 cup MAX level marked inside the cooking pot.



NOTE

The Rice Measure is significantly smaller than the standard U.S. cup measure.

- To achieve the correct ratio of rice to water, use ONLY the Rice Measure (cup provided).
- Level the rice in the Rice Measure cup so that it is even with the top.
- For softer or firmer rice adjust the ratio of water to rice accordingly.
- If the rice requires rinsing before cooking, measure the rice before you rinse it, Follow the rinsing directions for that specific type of rice.

RINSING RICE

Some types of rice are rinse-free and other types require rinsing before use to remove excess starch which may make the rice sticky. Also, cooking rice with starchy water may result in the rice burning or being improperly cooked.

If the water should turn white or cloudy, when added to rinse-free rice, drain and replace the water before cooking. Many recipes recommend rinsing quickly so the rice does not absorb water prior to cooking.

To Rinse Rice Quickly:

1. Place a colander inside a larger bowl.
2. Place the rice in the colander and rinse under cool running water.
Rinsing rice in hot water may prevent the rice from cooking properly.
3. Using your hand stir the rice around 3 to 4 times to separate the grains.
4. Continue to rinse until the water in the bowl is clear.

ADDING OTHER INGREDIENTS

If you wish to add other ingredients or seasonings to the rice, do so after adding the water. The rice will not cook properly and be too firm if ingredients are added before the water.

COOKING RICE



WARNING

Electrical Shock Hazard

- Plug into a grounded 3 prong outlet.
 - Do not remove the ground prong.
 - Do not use an adapter.
 - Do not use an extension cord.
- Failure to do so can result in death, fire or electrical shock.

 


NOTE

Cooking time will vary depending on the type of rice or grain being cooked.


1. Before using for the first time, wash the cooking pot, inner lid, steam port, other accessories and attachments, and then dry each thoroughly.
2. Measure rice, and then rinse rice, if needed.
3. Add measured rice to the cooking pot.
4. Add water until it reaches the corresponding numbered Water Line marked on the interior of the cooking pot. For example, when cooking 3 measures of white rice, add water to third line from the bottom of the pot.

To suit your personal preference, the amount of liquid can be adjusted slightly (no more than $\frac{1}{3}$ of the distance between the lines).

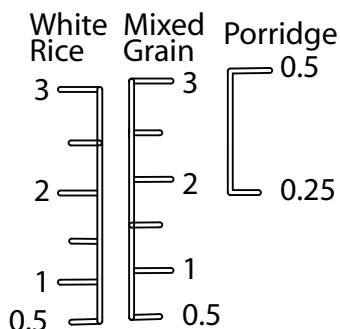

5. Stir the rice into the water, so that each grain is immersed in the water.
6. Place the cooking pot into the rice cooker.

 7. Rotate the pot two to three times to ensure a solid contact between the bottom of the cooking pot and the heating plate.

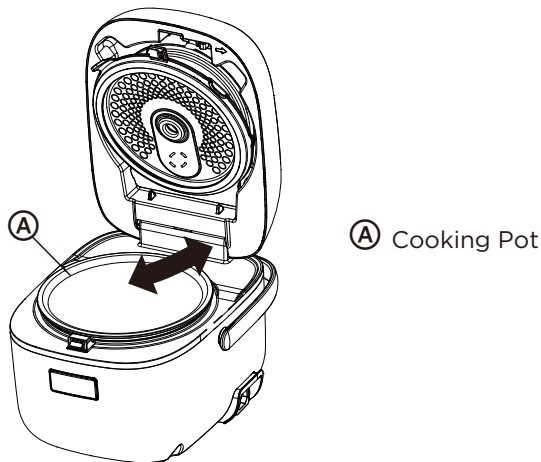

8. Close the lid, and then press downward until it clicks into place.
9. Plug the power supply cord into a grounded 3 prong electrical outlet.

NOTE

The rice cooker is powered ON, but in standby mode (no heat).

10. Select desired cooking program. See "Controls" for explanation of options.
11. Press START.

NOTE

During first use, there may be a plastic odor which will dissipate after using.

13. When cooking is completed, 5 beeps will sound. The Start light will turn off and the Keep Warm/Reheat light will illuminate.

Application of function buttons

START button

Plug in power supply, LED displays current time, multi-cooker is on Standby mode. Under the standby state, select the desired function and press "START" to start the program. If there is not any operation for more than two minutes, it will return to the standby state automatically.

OFF/CANCEL button

1. Press "OFF/CANCEL" button to return to the standby state.
2. Under the working state, press "OFF/CANCEL" button to exit the working state and return to the standby state.

MENU

Under the "standby" state, press the "MENU" button to select various functions.

Every time we press the "MENU" key, " " mark will move and the selection will consequently change. The functions cycle as follow:

QUICK COOK/WHITE RICE/BROWN RICE/MIXED GRAIN/SLOW COOK/PORRIDGE/CAKE/EGG

WHITE RICE

Under the "standby" state, press "WHITE RICE" button, The " " mark in the display area corresponding to "WHITE RICE" will be displayed.

KEEP WARM/REHEAT

When desiring to keep rice warm after cutting power, press "KEEP WARM/REHEAT" button, "Keep Warm/Reheat" light on. It will start to keep the rice warm. When desiring to reheat rice during the "KEEP WARM/REHEAT" function, loosen it, close the lid and press the "KEEP WARM/REHEAT" button, Reheating will start.

TIMER

After selecting the function need to pre-set the cooking time, press "TIMER" button, "TIMER1" light on, and the corresponding function light flashes on, press the "TIMER" button again, "TIMER1" light off and "TIMER2" light on.set the time and press "START" button.

The preset time is the cooking completion time.

"HR." and "Min." button.

Press the HR. or MIN. button to adjust the cooking time of slow cook and porridge.

Select the reserving set state, press the "HR." or "MIN." button to set the time of stopping reserving. Press "HR." once to increase 1h, press "MIN." once to increase 10min.

MIXED GRAIN

- 1.Under the standby mode, press the "MENU"button, select "MIXED GRAIN" function, "MIXED GRAIN" light flashes.
2. Press the "Start" button to start the "MIXED GRAIN" program, "Start" and "MIXED GRAIN" lights stay on, and digital screen display countdown timer.
- 3.The MIXED GRAIN function automatically enters the stew stage after cooking automatically enters the temperature preservation function when program completes.

The MIXED GRAIN function Recommended cooking range 0.5-3 cups of rice.

NOTE: Mixed grains need to be soaked in hot water for 2~3 hours before cooking.

Quick Rice

- 1.Under the standby mode, press the "MENU" button, select "Quick Rice" function,"Quick Rice" light flashes.
- 2.Press the "Start" button to start the "Quick Rice" program, "Start" and "Quick Rice"lights stay on, and digital screen display countdown timer.
3. The Quick Rice function automatically enters the stew stage after cooking automatically enters the temperature preservation function when program completes.

Brown Rice

1. Under the standby mode, press the "MENU" button, select "Brown Rice" function, "Brown Rice" light flashes.
2. Press the "Start" button to start the "Brown Rice" program, "Start" and "Brown Rice" lights stay on, and digital screen display countdown timer.
3. The Brown Rice function automatically enters the stew stage after cooking automatically enters the temperature preservation function when program completes.
The Brown Rice function Recommended cooking range 0.5-3 cups of rice.

White Rice

1. Under the standby mode, press the "Menu" button, select "WhiteRice" function, "Whiet Rice" light flashes.
2. Press the "Start" button to start the "White Rice" program, "Start" and "White Rice" lights stay on, and digital screen display countdown timer.
3. The White Rice function automatically enters the stew stage after cooking automatically enters the temperature preservation function when program completes.

CAKE

1. Under the standby mode, press the "MENU" button, select "CAKE" function, "CAKE" light flashes.
2. Press the "Start" button to start the "CAKE" function, "START" and "CAKE" lights stay on, and digital screen display countdown timer.
3. The "CAKE" function automatically enters the temperature preservation.

Recipes:

3 eggs, white sugar 100g, cake mix 120g, unmelted butter 30g.

1. Put the sugar and eggs into a bowl, then stir with a whisk until foaming.
2. Add the cake flour, stir with a wooden spoon evenly; add the melted butter and mix quickly.
3. Pour it into the rice cooker before the bubbles disappear quickly.

EGG

1. Under the standby mode, press the "MENU" button, select "EGG" function, "EGG" light flashes.
2. Press the "Start" button to start the "EGG" function, "START" and "EGG" lights stay on, and digital screen display countdown timer.
3. The "EGG" function automatically enters the standby state when program completes.

Recipes:

Appropriate amount of eggs and water

1. Put the eggs into the inner pot.
2. Add water until eggs are soaked in , and do not exceed maximum water level.
3. Closing the cover, select the "EGG" function to start cooking.

PORRIDGE

1. Under the standby mode, press the "MENU" button, select "PORRIDGE" function, "PORRIDGE" light flashes.
2. Press "HR." and "MIN." button to adjust Porridge cooking time, the default timing is 90 minutes. Time can be adjusted between 60 minutes to 120 minutes.
3. Press the "START" button to start the "PORRIDGE" function, "PORRIDGE" lights stay on, and digital screen display countdown timer.
4. "PORRIDGE" function automatically enters the temperature preservation function when program completes.

SLOW COOK

1. Under the standby mode, press the "MENU" button, select "SLOWCOOK" function, "SLOW COOK" light flashes.
2. Press "HR." and "MIN." button to adjust SLOW COOK cooking time, the default timing is 3 hours. Time can be adjusted between 3 hours to 8 hours.
3. Press the "START" button to start the "SLOW COOK" function, "SLOW COOK" lights stay on, and digital screen display countdown timer.
4. "SLOW COOK" function automatically enters the temperature preservation function when program completes.

Timer per-set method (QUICK COOK/WHITE RICE/BROWN RICE/MIXED RICE/SLOW COOK/PORRIDGE)

1. Select the function requires pre-set timer, press the "TIMER" button, "TIMER1" light on and enter the setting state. Press the "TIMER" button again, "TIMER1" light off and "TIMER2" light on. Press "HR." or "MIN." to pre-set the completion time. Press "HR." once to increase 1 hour, press "MIN." once to increase 10 minutes. Long press to increase automatically.
 2. Press "START" button to start the pre-set timer function. The screen displays the completion time and starts the countdown.
 3. Timer can be pre-set up to 24 hours.
 4. Temperature preservation: The cooker enters to temperature preservation mode once cooking completed. The temperature preservation time is up to 24 hours, cooker returns to standby state after 24 hours. The shorter the preservation time, the better the taste.
- Note: Recommended timer pre-setting is no more than 12 hours to avoid food deterioration.

CARE AND CLEANING



WARNING

Burn Hazard

- Wait until the rice cooker has cooled before cleaning.
- Failure to do so may result in burns

Unplug the rice cooker from the electrical outlet, allow it to cool, and then clean and dry the cooker and all its parts after each use to avoid odors and poor performance.

GENERAL CARE



IMPORTANT

The rice cooker is not dishwasher safe. Use only soft cloths with a mild dish soap solution to clean the rice cooker. Do not wash either the rice cooker or its interior cooking pot in the dishwasher.

CLEANING THE COOKER EXTERIOR



IMPORTANT

Do NOT immerse the rice cooker in water.

Using a soft, damp cloth, clean the outer surfaces of the rice cooker.

Using a soft, dry cloth thoroughly dry the outer surfaces.

Steam Valve



 
IMPORTANT

- Clean the steam valve frequently to ensure proper venting.
- The rice cooker should be cool to the touch before cleaning the steam valve.

1. Remove the steam valve from the body.


Pull up

- Please press to install.

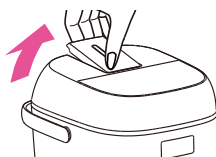


2. Open

 Hold the steam valve and open the small buckle.

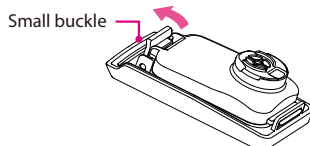

3. Cut-out

 
Insert the buckle on the steam valve base into the pinhole of the steam valve cover, and fasten the small buckle.

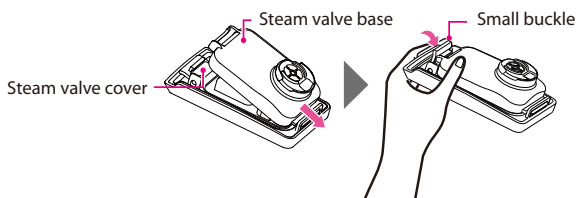

- When the sealing bar of the steam valve inside the cover is removed, please press it in to prevent it from appearing from the slot.

■ Remove the removable cover plate.

 
- ① Push the inner cover slider to the right according to the arrow (the removable cover plate leans forward).
- ② Grab the handle and pull up the removable cover plate.

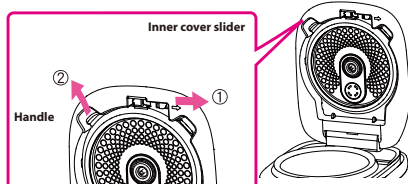

When the removable cover plate is removed, the upper housing cannot be closed, which prevents you from cooking without the removable cover plate.

■ Installation methods for the removable cover plate

 - ① Lean and insert the inner cover into the slot from above.
- ② Push and press the handle until a "clicking" sound is generated from the cover side.

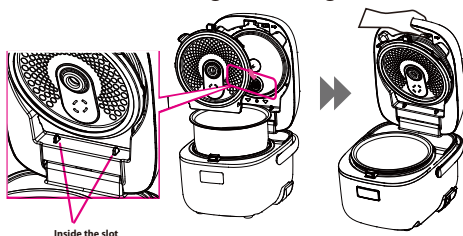

Heating Plate

1. Using a steel wool pad, remove any residue burned onto the metal heating plate.
2. Using a soft, damp cloth, wipe the heating plate, and then dry thoroughly.

Cooking Pot



IMPORTANT

- The inside of the cooking pot has a non-stick coating that can lose its non-stick properties if it becomes scratched or damaged.
 - Do not use abrasive cleansers, vinegar, bleaching agents, steel wool or other harsh scrubbing brushes to clean the cooking pot.
 - Do not use metal cooking utensils.
 - Wash the cooking pot immediately after removing rice that has been seasoned. Seasonings may damage the non-stick coating of the cooking pot if left in contact for any length of time.
1. Wash the cooking pot, using a soft cloth and a nonabrasive cleanser or a mild solution of dish soap and warm water.
 2. Using a soft cloth, dry both the interior and exterior of the cooking pot.
 3. Any other servicing should be performed by an authorized service representative.

TROUBLESHOOTING TIPS

Before calling for service, review the following tips. It may save you time and money.

This list includes common occurrences that are not the result of poor workmanship or defective materials.



WARNING

Electrical Shock Hazard

- Plug into a grounded 3 prong outlet.
- Do not remove the ground prong.
- Do not use an adapter.
- Do not use an extension cord.

Failure to do so can result in death, fire or electrical shock.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Rice cooker does not operate	The power supply cord is not completely plugged into a working 3 prong electrical outlet.	Plug the power supply cord into the electrical outlet.
	There has been a power failure. During a power failure, the time-of-day, not the countdown time, will appear in the display during a cooking program.	Reset the circuit breaker or replace the fuse once power is restored.
	Another appliance was plugged into the same electrical outlet, which tripped the circuit breaker or blown a household fuse.	Reset the circuit breaker or replace the fuse. Plug power supply cord into a separate, dedicated circuit.
Rice is mushy, sticky or clumping	Rice was cooked with too much water	Use less water when cooking rice. Once cooked, fluff rice immediately using a fork to separate the grains.
	Rice was rinsed or soaked before cooking Pre-rinsing can cause the rice to crack and become mushy and sticky during cooking. Soaking before cooking softens the texture of rice.	If rinsing is required, rinse the rice quickly and drain as much water as possible. Do not allow rice to soak in liquid prior to cooking.
Rice is hard or dry	Rice was not cooked with enough water or it was cooked with mineral water.	Use more water when cooking rice. Soak the rice for a short time before cooking.

Rice is scorched NOTE: Rice turning a light brown color is not a result of rice cooker failure.	Dirt or a foreign substance is stuck to the temperature sensor.	Remove foreign substance and clean well.
	Other ingredients and/or seasonings were added to the rice before cooking.	Cook only rice with the proper ratio of water.
	Rice was soaked for too long.	Soak rice for a shorter period of time.
Rice does not taste good	The cooking pot and inner cover are warm or hot when cooking begins.	Allow rice cooker to cool completely before cooking a new batch.
	Dirt or a foreign substance is stuck to the temperature sensor, inner lid, or steam vent.	Remove foreign substance and clean well.
	The inner lid or steam vent was not attached to the rice cooker.	After cleaning replace both the inner lid and steam vent into the rice cooker. See "Care and Cleaning."
	Used wrong ratio of ingredients to water or wrong cooking program for	Accurately measure the correct ratio of ingredients to water.
Unpleasant odor NOTE: A plastic odor is normal the first few times the cooker is used.	Keep Warm mode was used too long.	Do not allow rice to remain in Keep Warm mode indefinitely. Serve rice soon after the 10-minute resting period.
	Rice left in the cooking pot after Keep Warm mode has turned off.	Remove cooked rice from cooker.
	The rice was not rinsed thoroughly.	Rinse rice until the water runs clear.
	The cooking pot, inner lid and/or steam vent is dirty.	Clean and dry parts thoroughly. See "Cleaning."
	The plastic scoop was left in the cooking pot.	Remove plastic scoop and all accessories from the rice cooker before using.
Rice is dry and has turned color	Rice has been reheated repeatedly.	Rice should be reheated only once to maintain the quality. Sprinkle rice with water to help keep it from drying out during reheating.
	Steam vent is not attached correctly.	After washing, attach the steam vent correctly to the rice cooker. See "Cleaning."

Steam escaping from the rice cooker	The inner lid is not attached properly. The inner lid and/or cooking pot is deformed.	Check the condition of the inner lid and gasket. Confirm that the inner lid is correctly seated in the cooker cover.
	Foreign substances are stuck to the inner lid, cooking pot rim or the frame of the rice cooker.	Clean both the cooking pot and rice cooker after each use.
Rice cooker boiling over and spattering NOTE: It is normal for moisture to appear on the inner lid or cooking pot and drip when the lid is opened.	The inner lid and/or steam vent are not attached properly.	After cleaning replace both the inner lid and steam vent into the rice cooker. See "Care and Cleaning."
	The steam vent and/or temperature sensor is dirty.	Clean the steam vent and temperature sensor.
	Porridge program was unintentionally used to cook rice.	Select the cooking program for the ingredients you are cooking.
Difficult to close the cooker lid	The inner lid is not attached properly. NOTE: The outer lid will not close unless the inner lid is attached correctly.	Replace the inner lid into the top cover of the rice cooker. See "Care and Cleaning."
	Foreign substances in the lid latch well are preventing the outer lid from latching.	Remove debris from the lid latch well.
Film on interior of cooking pot	The starch in the rice will melt during cooking and dry onto the interior of the cooking pot.	During washing, use a non-abrasive plastic scouring pad or utensil to gently remove the film.

ERROR DISPLAY

PROBLEM	POSSIBLE CAUSE	SOLUTION
E1, E2, E5, E6, EU	Circuit Board and Sensor Fault	Immediately unplug rice cooker. After error is resolved, plug in rice cooker, and then press CANCEL to remove error code from display.

LIMITED ONE-YEAR WARRANTY

(U.S. AND CANADA ONLY)

Warranty Period:

This warranty is available to consumers only. You are a consumer if you own a Toshiba® Rice and Grain Multicooker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Toshiba® Rice and Grain Multicooker will be free of defects in materials or workmanship under normal home use for 1 year from the date of original purchase. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Toshiba® Rice and Grain Multicooker should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number **1-855-204-5313** for additional information from our Consumer Service Representatives or send the defective product to Consumer Service at Toshiba, 5 Sylvan Way, Parsippany, NJ 07054.

NOTE:

For added protection and secure handling of any Toshiba product that is being returned, we recommend you use a traceable, insured delivery service. Toshiba cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Toshiba products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Toshiba and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Toshiba for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at **1-855-204-5313**. Toshiba will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR TOSHIBA PRODUCT

If you are experiencing problems with your Toshiba product, we suggest that you call our Toshiba Service Center at **1-855-204-5313** before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location. Your Toshiba® Rice and Grain Multicooker has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Toshiba. This warranty does not damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Important:

 
If the nonconforming product is to be serviced by someone other than Toshiba's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-855-204-5313** to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

TOSHIBA

MICROWAVE SOLO OVEN INSTRUCTION MANUAL

EM925A5A-SS

Please review this instruction manual before operating.

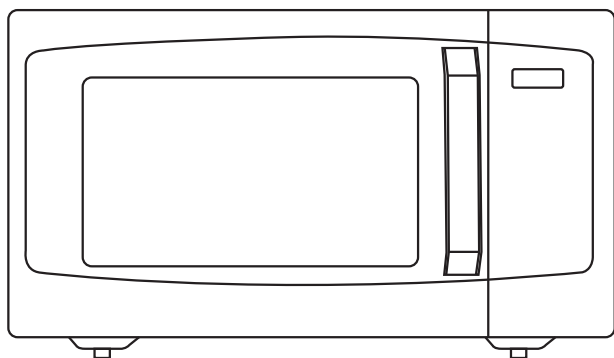

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Setting up your oven	EN-14
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19
1. Power levels.....	EN-20
2. Clock setting.....	EN-21
3. Kitchen timer.....	EN-21
4. Microwave cook	EN-22
5. One touch start	EN-23
6. Time defrost.....	EN-24
7. Weight defrost function	EN-24
8. Popcorn.....	EN-25
9. Potato	EN-25
10. Frozen vegetable.....	EN-25

11. Beverage	EN-26
12. Dinner plate	EN-26
13. Pizza	EN-27
14. Memory function	EN-27
15. Turn on/off the buzzer sound	EN-28
16. Multi-stage cooking	EN-28
17. Energy saver mode	EN-30
18. Lock function	EN-30
19. Inquiring function	EN-30
20. Cooking end reminder function	EN-31
21. Other specifications	EN-31
Cleaning	EN-32

MAINTENANCE

Trouble shooting	EN-34
One year limited warranty	EN-36



NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

 
PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

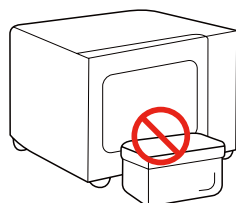

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	EM925A5A-SS
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER(MICROWAVE)	1350W
RATED OUTPUT POWER(MICROWAVE)	900W
OVEN CAPACITY	0.9 cu.ft.
TURNTABLE DIAMETER	Ø 10.6 inch
EXTERNAL DIMENSIONS	19.15x15.91x11.48 inch
NET WEIGHT	Approx. 27.3 Lbs



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following:



Read all instructions before using the appliance.



Read and follow the specific:

"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.



As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.



To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes.

IMPORTANT SAFETY INSTRUCTIONS

Do not leave paper products, cooking utensils, or food in the cavity when not in use.

 Install or locate this oven only in accordance with the installation instructions provided.

 As with any appliance, close supervision is necessary when used by children.

 This microwave should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

 Keep cord away from heated surfaces.

 
 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.


IMPORTANT SAFETY INSTRUCTIONS

4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

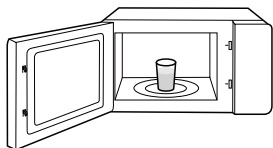


 When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking

 or some smoke in the microwave cavity, discoloration of the cavity may also occur.

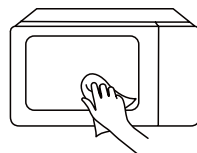

 This appliance is for private household use only.

  Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

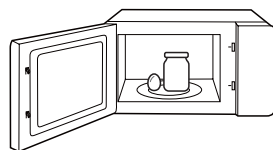

 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type

IMPORTANT SAFETY INSTRUCTIONS

 
of oven is specifically designed to heat, cook or dry food.
It is not designed for industrial or laboratory use.

 Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

 Do not cover or block any openings on the oven.

 Do not store or use this appliance outdoors.

 Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

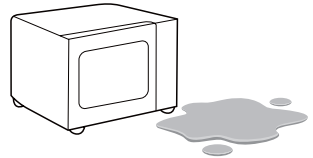

 Do not immerse cord or plug in water or any other liquid.



 Do not let cord hang over edge of table or counter.

SAVE THESE INSTRUCTIONS

HOUSEHOLD INDOOR USE ONLY

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3 prong grounding-type plug for insertion into a proper grounding-type receptacle. DO NOT alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.



CAUTION

Do not insert your fingers into any gaps or holes; it may cause injuries.



WARNING

Improper use of the grounding can result in a risk of electric shock.

Three-pronged
(grounding) plug



DANGER

Electric Shock Hazard:
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



WARNING

 
Electric Shock Hazard:

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord sets or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding -type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

**This device complies with
part 18 of the FCC Rules.**

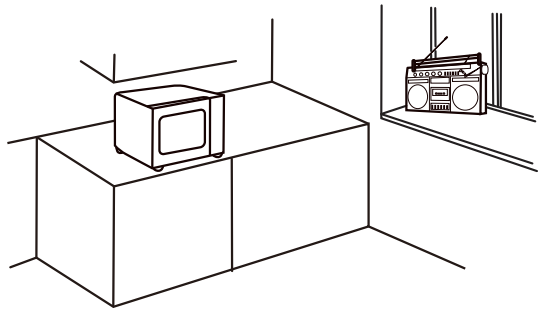

UTENSILS



CAUTION

Personal Injury Hazard:

 
Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

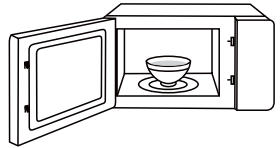

NOTE

 KEEP THE CAVITY CLEAN

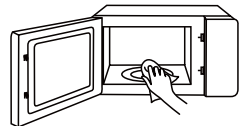



MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

  
MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	

SETTING UP YOUR OVEN

NAMES OF OVEN PARTS AND ACCESSORIES

 Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:




Glass Tray

(Can be used under all functions)



 Instruction Manual

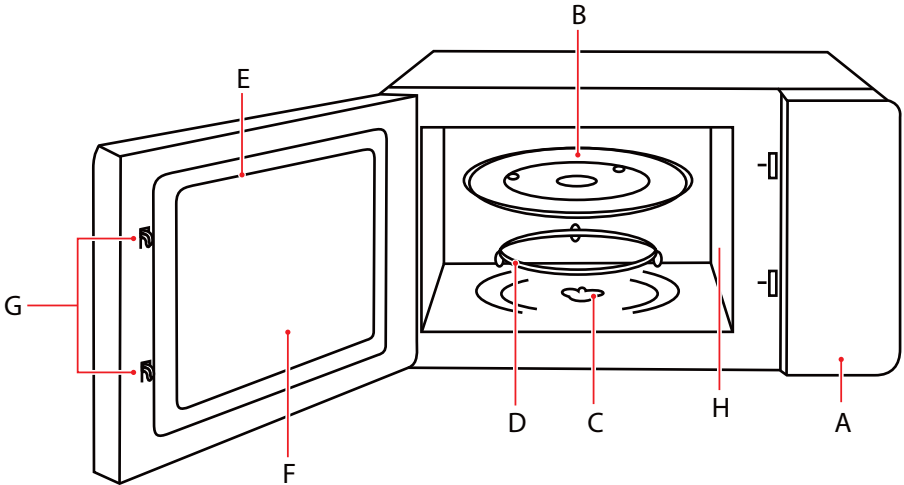

- A. Control panel
- B. Glass tray
- C. Turntable shaft
- D. Turntable ring assembly

- E. Door assembly
- F. Observation window
- G. Safety interlock system
- H. Waveguide cover

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.

 
 
For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ③.

Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

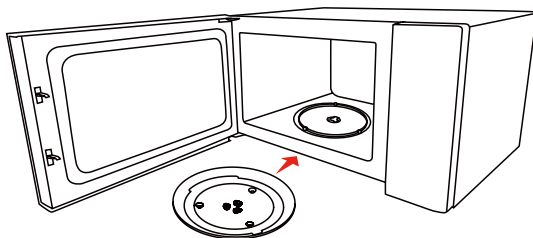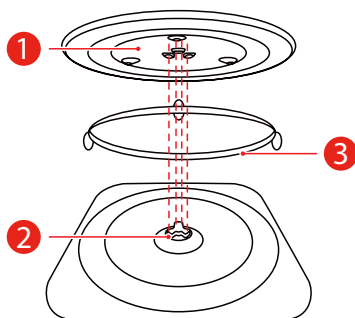

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

SETTING UP YOUR OVEN

 
COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 3.0 ft.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Operation of microwave oven may cause interference to your radio or TV reception.
Please place the oven as far away from radios and TV as possible.

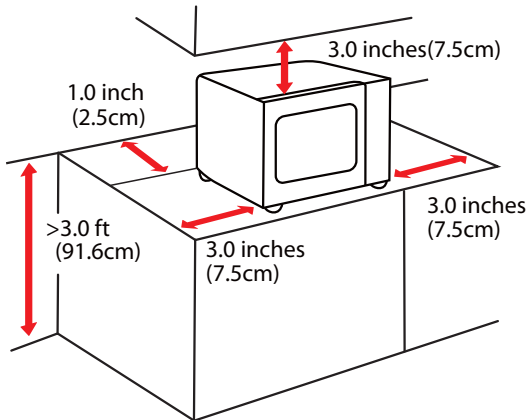


SETTING UP YOUR OVEN

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

 - Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be avoid.

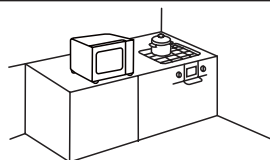

The accessible surface may be
hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.

 


NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

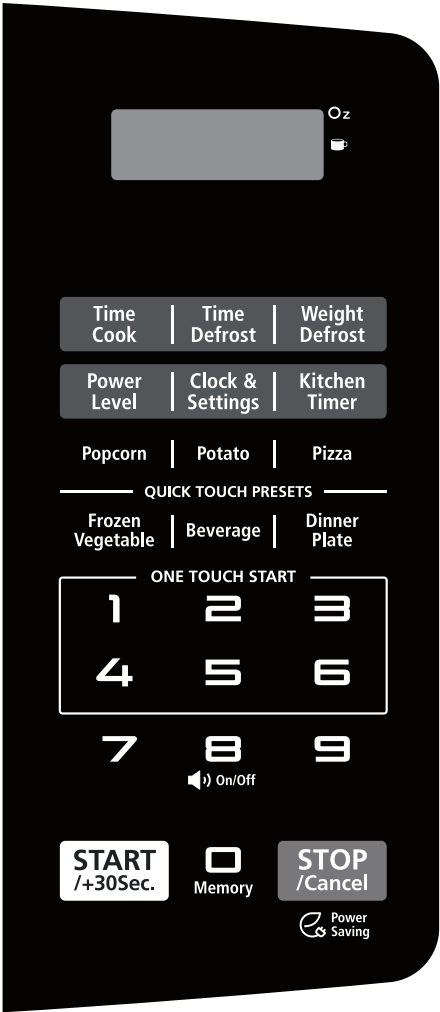

1. POWER LEVELS

Ten power levels are available.

- a

Press "Time Cook" , "00:00" will display, then press number pads.

Time Cook

ONE TOUCH START
1 2 3
- b

Press "Power Level" and "PL10" will display. Then press number pads to select a different power level.

Power Level

ONE TOUCH START
1 2 3
- c

In cooking state of microwave, press "Power Level", the current power will be displayed for 3 seconds. Then press number pads to change a different power level.

Power Level

ONE TOUCH START
1 2 3

Example : To cook the food with 50% microwave power for 15 minutes.

- Press "Time Cook" , "00:00" will display.

Time Cook
- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.

ONE TOUCH START
1 2 3
- Press "Power Level" , then press "5" to select 50% microwave power.

Power Level

4 5 6

- Press " START/+30Sec. " to start cooking. Buzzer sounds once. The remaining cooking time will display.

START
/+30Sec.

LEVEL	POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7

LEVEL	POWER	DISPLAY
6	60%	PL6
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1

2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a** Press "Clock & Settings" once, "00:00" will appear in the display.



- b** Press the number pads to enter the current clock time. For example, if the time is now 10:12, press " 1, 0, 1, 2 " in order.



- c** Press "Clock & Settings" to finish clock setting, " : " will flash and the numbers will appear as a clock time in the display.





NOTE

- If the numbers entered are not within the range between 1:00 to 12:59, the setting will not be accepted until valid numbers are entered.
- In the process of setting clock, if the " STOP/Cancel " pad is pressed or if there is no operation within 1 minute, the display will automatically return to the previous clock setting.

3. KITCHEN TIMER

- a** Press "Kitchen Timer" once, "00:00" will appear in the display.



- b** Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds.



- c** Press "START/+30Sec." to confirm setting, and the timer will start to count down.



- d** When the time amount elapses, the oven will beep 5 times.



- The Kitchen Timer setting is different from the Clock setting; it is simply a timer.
- During the Kitchen Timer function, no cooking function can be set into operation.
- Kitchen Timer amount cannot be increased by pressing "START/+30Sec.".
- Pressing "STOP/Cancel" will cancel the Timer countdown.

4. MICROWAVE COOK

- a** Press "Time Cook", "00:00" will appear in the display.



- b** Press number pads to enter the cooking time. The maximum cooking time is 99 minutes, 99 seconds.



- c** Press "Power Level", PL10 will flash. Press number pads 0 through 9 to select a different power level if desired. See the POWER LEVEL table above.

**Power
Level**



- d** Press "START/+30Sec." to start cooking. The remaining cooking time will display.



Example : To cook the food with 50% microwave power for 15 minutes.

- Press "Time Cook" , "00:00" will display.

 
**Time
Cook**

- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.



- Press "Power Level" , then press "5" to select 50% microwave power.

**Power
Level**



- Press " START/+30Sec. " to start cooking. The remaining cooking time will display.

**START
/+30Sec.**

 


NOTE

- In the process of setting, if the " STOP/Cancel " pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock.

5. ONE TOUCH START

Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6. Press " START/+30Sec. " to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds.



Instant cooking at 100% power level and 30 seconds cooking time can be started by pressing " START/+30Sec. ". Each repeated press will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes, 99 seconds.

**START
/+30Sec.**



- Time can also be added in 30 second increments by pressing " START/+30Sec. " during Microwave Cooking, Time Defrost and Multi-stage Cooking.
- Time cannot be added by pressing " START/+30Sec. " during Weight Defrost and Kitchen Timer functions.

6. TIME DEFROST

- a Press "Time Defrost" , "dEF2" will appear in the display.

**Time
Defrost**

- b Press the number pads to input the defrost time.



- c The default microwave power is power level 3. If you want to change the power level, level, press "Power Level" once, and PL3 will display; then press the number pad for the desired power level.

**Power
Level**



- d Press " START/+30Sec. " to start defrost cooking. And the remaining defrost time will display.

**START
/+30Sec.**

7. WEIGHT DEFROST FUNCTION

- a Press " Weight Defrost " once,"dEF1" will display.

**Weight
Defrost**

- b Press number pads to input weight to be defrosted.
Input the weight range between 4 to 100 Oz.



- c If the weight input is not between 4 to 100 Oz, the input will be invalid. A beep will sound and the unit will not work until valid numbers are entered.

- d Press "START/+30Sec." to start defrosting and the cooking time remaining will be displayed.

START
/+30Sec.

8. POPCORN

- a Press "Popcorn", "1.75" will appear in the display.

Popcorn

- b Press "Popcorn" two more times to choose the weight, "3.0" and "3.5" will display in order.

Popcorn

- c Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

START
/+30Sec.

9. POTATO

Press "Potato" repeatedly until the number you wish appears in the display "1", "2", "3" will display in order.

- a Press once : 1 potato (approx. 8.0 oz)
Press Twice: 2 potatoes (approx. 16.0 oz)
Press 3 Times: 3 potatoes (approx. 24.0 oz)

Potato

- b Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

START
/+30Sec.

10. FROZEN VEGETABLE

- a Press "Frozen Vegetable", "4.0" will appear in the display.

**Frozen
Vegetable**

- b** Press "Frozen Vegetable" two more times to choose the weight, "8.0" and "16.0" will display in order.

**Frozen
Vegetable**

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START
/+30Sec.**

11. BEVERAGE

- a** Press "Beverage", "1" will appear in the display.

Beverage

- b** Press "Beverage" two more times to choose the weight, "2" and "3" will display in order. One cup is about 4.0 Oz.

Beverage

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START
/+30Sec.**

12. DINNER PLATE

- a** Press "Dinner Plate", "9.0" will appear in the display.

**Dinner
Plate**

- b** Press "Dinner Plate" two more times to choose the weight, "12.0" and "18.0" will display in order.

**Dinner
Plate**

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START
/+30Sec.**

13. PIZZA

- a Press "Pizza", "4.0" will appear in the display.



- b Press "Pizza" two more times to choose the weight, "8.0" and "14.0" will display in order.



- c Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.



14. MEMORY FUNCTION

- a Press "Memory" to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display.



 
- b Press "Memory" until your desired procedure number appears in the display. Press "START/+30Sec." to begin it. A maximum of two cooking stages can be set for each procedure.



To program a procedure, follow the steps listed below.

Example: Cook food at 80% Power Level for 3 minutes and 20 seconds; save as memory 2.


- Press "Memory" twice; screen displays 2.



- Press "Time Cook", then press "3","2" and "0" in order.



 
- Press "Power Level" once, then press "8" for "PL8" to display.

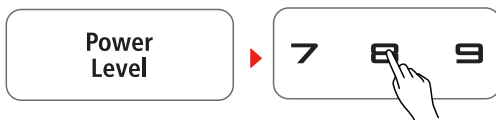

- Press "START/+30Sec." to save the procedure. Oven beeps once. Or press "START/+30Sec." twice directly save and start cooking.



 
- To choose the procedure from the memory list, press "Memory" twice. Screen will display "2". Press "START/+30Sec." to run procedure.




- Auto Menu cannot be set in Memory function.

15. TURN ON/OFF THE BUZZER SOUND

 - a** It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound. All the buttons has no beep when they are pressed, including the ending cooking sounds is turn off too.

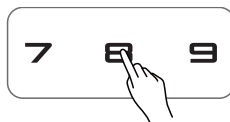

 - b** When the sounds turn off, long pressing on 8 f or 3 seconds, it sounds a long beep and the sound turn on.

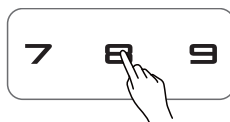

- All models has mute function and energy-saved function. This function can work under lock function too.

16. MULTI-STAGE COOKING

At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage.



- Auto Menu cannot be set in Multi-stage Cooking.

Example: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3.

- Press "Memory" 3 times; screen displays 3.



- Press "Time Cook", then press "5", "0" and "0" to set first stage cook time.

Time
Cook

4 5 6



- Press "Power Level" once, then press "8" to choose 80% first stage cooking power.

Power
Level

7 8 9



- Press "Time Cook" again, then press "1", "0", "0" and "0" to set second stage cook time.

Time
Cook

ONE TOUCH START
1 2 3

- Press "Power Level" again, then press "6" to choose 60% second stage cooking power.

Power
Level

4 5 6



- Press "START/+30Sec." twice to immediately start multi-stage cooking.

START
/+30Sec.

- To choose the procedure from the memory list, press "Memory" three times. Screen will display "3"; press "START/+30Sec." to run procedure.

Memory

START
/+30Sec.



- If you do not want to save a particular multi-stage program as a procedure, do not press "Memory" as the first step.
- Press "START/+30Sec." after programming both stages.

17. ENERGY SAVER MODE

- a In standby mode, press the " STOP/Cancel " once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saver mode.
- b In child-locked mode, press the " STOP/Cancel " once (less than 3 seconds) and release to enter the Energy Saver Mode.
- c Above operation is the only way to start the Energy Saver mode.
- d The Energy Saver mode works only if the door is closed.

STOP
/Cancel

STOP
/Cancel

18. LOCK FUNCTION

- a To lock the microwave so that it cannot be operated by children or other unintended users, press " STOP/Cancel " pad for 3 seconds. You will hear a long beep. "  " will display.
- b To Unlock, press " STOP/Cancel " for three seconds, you will hear a long beep and "  " will disappear.

STOP
/Cancel

STOP
/Cancel

19. INQUIRING FUNCTION

- a When oven is cooking, press "Clock & Settings" for the time of day to appear for three seconds in the display.
- b When oven is cooking, press "Power Level" pad for cooking power to appear for three seconds in the display.

**Clock &
Settings**

**Power
Level**

20. COOKING END REMINDER FUNCTION

The oven will beep five times to alert the user that cooking time has ended.

21. OTHER SPECIFICATIONS

- a "START/+30Sec." must be pressed to continue cooking if the door is opened during cooking.

START
/+30Sec.

- b A single beep sounds to indicate that a pad is correctly pressed; if pad is not correctly pressed, no beep sounds.

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape.
Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

 
Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges

 


Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth.
Do not use metal or glass scrapers for cleaning.

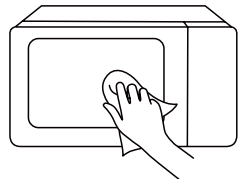


CLEANING

APPLIANCE FRONT PLATE

Hot soapy water:

 
Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

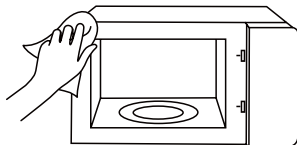

APPLIANCE CAVITY

Hot soapy water or vinegar solution:

 
Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

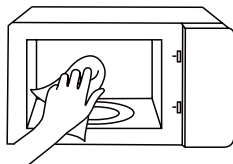

RECESS IN THE COOKING COMPARTMENT

Damp cloth:

 Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

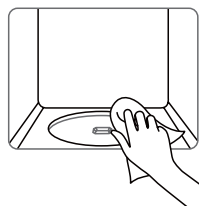

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.



DOOR PANEL

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

TROUBLE SHOOTING

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Sensor cooked foods not properly cooked	a. Cover or lid on food not vented. b. Door opened before sensor-detected cooking time appears in display.	a. Cover or lid over food must contain vent hole for escaping steam. b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer's warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

PN:16170000A89753

#DetailsMatter

Customercare@us.toshiba-lifestyle.com
855-204-5313