


# EASY STEPS TO UPDATE TS401

## 1 Download & Install MaxiLinkII Software

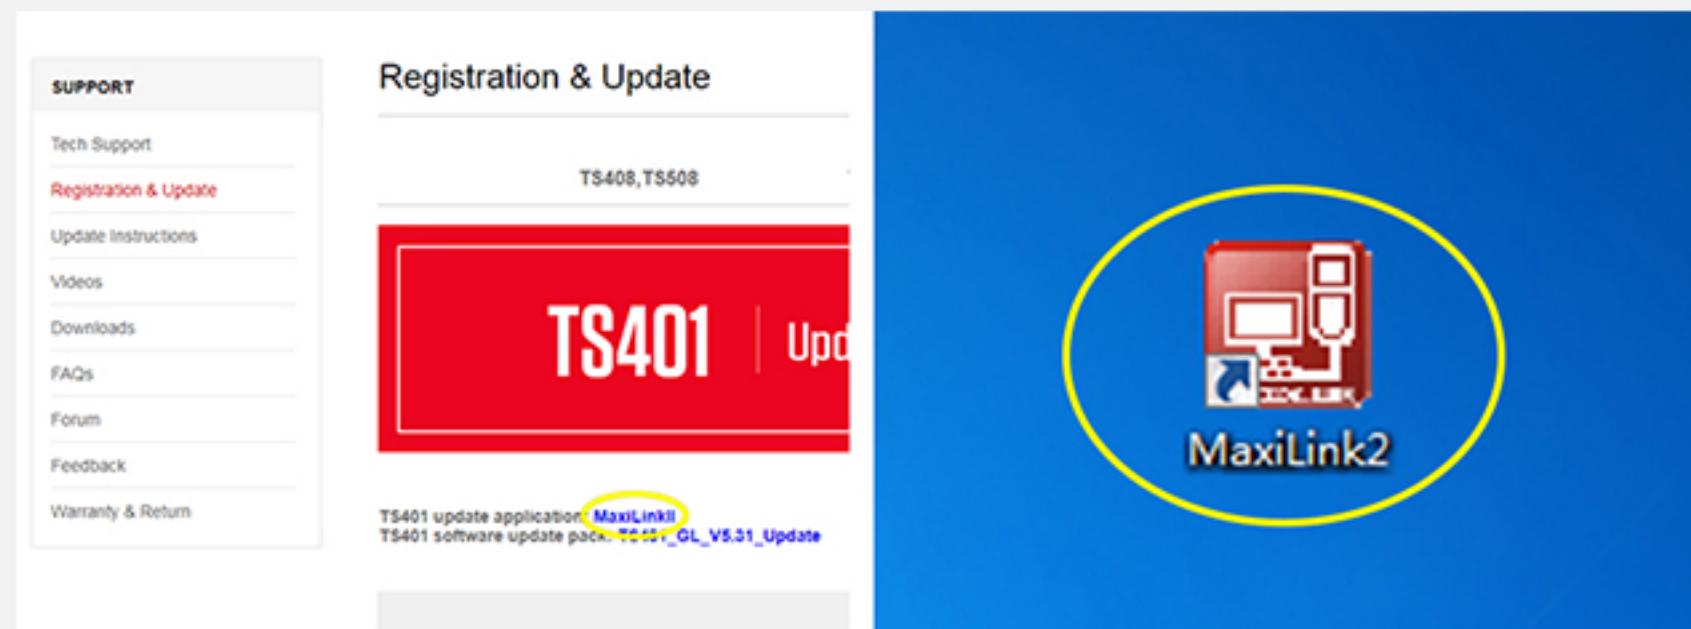

Go to [www.maxitpms.com](http://www.maxitpms.com). Click "Support" and select "Registration & Update". Download "MaxiLinkII" and unzip the file.

## 2 Download TS401 Update Software



Download "TS401\_GL\_VX.XX\_Update" software update pack, and unzip the file.

## 3 Connect TS401 with PC



Connect TS401 with PC via the supplied USB, and select Update Mode on the tool.

## 4 Update the Tool



**NOTE:** Both the ".bin" file and the ".aut" file must be updated together for proper function.

Launch MaxiLink2 on the PC, and select TS401. To update program, select the ".bin" file; to update DTC, select the ".aut" file.