

High-definition Digital Camera User Manual

LK-032



Function Introduction:

1. Up button 2. Down button 3. Power button 4. Reset hole
5. Confirm button 6. Menu switch key / Photo/Video/Album
7. Rope clip 8. Type-C charging port 9. Mounting hole
10. TF card slot 11. Display screen 12. Speaker
13. Camera (180-degree front/rear rotation) 14. Indicator light

Key definitions:

1: Up key

- 1: Long press the menu key to enter Settings. Short press the function key to move up in the settings interface.
2: Short press to turn flash on or off in photo and video modes.
3: Short press to flip to the previous page in album mode

2: Press the key

- 1: Long press the menu key to access Settings. Short press the function key to scroll down in the settings interface.

- 2: In video recording mode, press and hold to turn audio on or off.
3: Short press in album mode to scroll down to the next page.

3: Power button.

- 1: Long press for 3 seconds to use the power button
2: Long press to activate the screen-off function key

4: Reduction Bond

- 1: Short press the crash reset button

5: Determine the key

- 1: Short press to confirm or set menu options for taking photos and videos

6: Menu Key

- 1: Short press to access the photo, video, or album switch button
2: Long press this button in album playback mode to access settings and delete options: Delete, Delete All, Lock Current, Unlock Current, Unlock All. Short press to return.
3: Long press the photo/video interface to enter the settings page; Resolution, Image Quality, Continuous Camera, White Balance, Time Mark, Key Sound, Time Setting, Auto Power Off, Language, Fill Light, Auto Screen Off, Format, Reset System, Software Version. Short press to return.

7. Rope Hook

8. Type-C charging port

9. Stent Hole

10. TF Card Slot

11. Display Screen

12. Horn

13. The camera can pivot 180 degrees forward and backward.

The bracket can rotate 90 degrees.

14. Indicator Light

- 1: The red light is always on when charging, and it turns off when fully charged

Product Parameter

Product Name: HD Digital Camera

Product model: LK-032

Display: 1.97-inch HD display

Lens: High-definition camera lens with 180°/90° rotation capability

Functions: Take photos, record videos, rotate the lens

Image resolution: 2M, 3M, 5M, 8M, 10M, 12M, 48M, 64M

Video resolution: HD, FHD, 2K, 4K

Video format: AVI

Charging time: approximately 3 to 3.5 hours

Battery life: approximately 4.5 hours

Charging method: TYPE-C DC 5V

Memory expansion: 64 GB

Product dimensions: 134.31*42.4*31.58mm

Weight: approximately 130g

packing list

Camera 1, Manual 1, Gift Box 1, CtoC Data Cable 1, Lanyard 1, Support 1

warn :

Contains small parts. This package (instruction manual and label) contains important information. Please keep it properly for future use.

Key points

1. Regularly inspect the product for structural integrity. If significant damage is observed, immediately cease use.
2. The built-in battery is non-removable and can only be charged under adult supervision.
3. Keep away from sources of ignition during use.
4. Do not use in high-temperature or humid environments!
5. When not in use for an extended period, please charge the product periodically every 1 month.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

