 
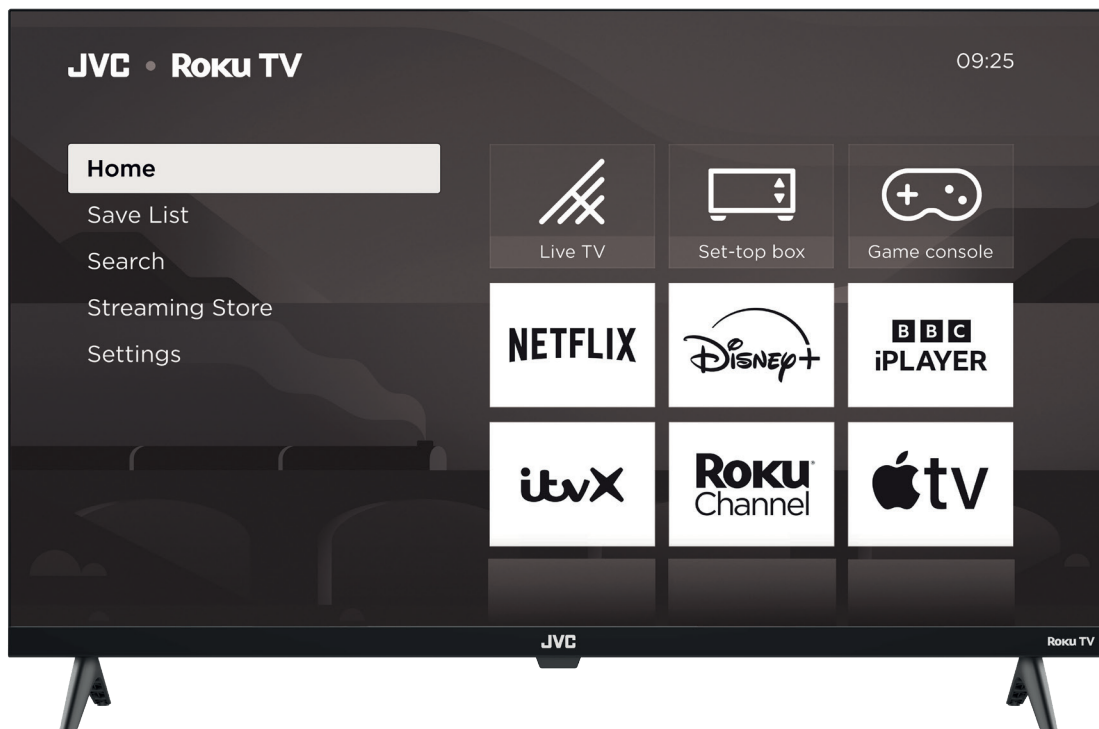 


JVC • Roku TV

Quick Start Guide

32" HD Smart LED TV

LT-32CR250



A perfect fit for any smart home



Roku TV™

Stream free and premium TV, live news, sport, movies, and more.



Plus 1000s more



Plus thousands of streaming channels

Visit roku.com/channelchecker to see more channels

Content resolution is based on TV compatibility and may vary by channel. Channels are subject to change, vary by region, and may require payment.



Certain services are subject to change or withdrawal at any time, may not be available in all areas, or in 4K, HDR or DOLBY VISION or DOLBY ATMOS and may require separate subscriptions.

Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries and regions. The Works with Apple Home badge is a trademark of Apple Inc. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa. Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- **WARNING:** Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.
- To avoid danger of suffocation, keep plastic bags out of reach of babies, children and domestic animals.
- Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over tighten the screws and mount the stand rubbers properly.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over causing serious personal injury or death.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.
- Use this TV set at an altitude of less than 2000 meters above sea level, in dry locations and in regions with moderate or tropical climates.

Many injuries, particularly to children, can be avoided by taking simple precautions such as;

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only use furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both furniture and the television set to a suitable support.
- Not standing the television set on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall Mounting

- Read the TV and wall mount instructions before mounting your TV on the wall.
- For TVs over 40" in size, wall mounting requires 2 people to lift and position the TV on to the wall mount.
- The wall mount bracket is not supplied, they can be purchased from your dealer.
- Do not install the TV on a ceiling or an inclined wall.
- Only use the screws supplied with the wall mount bracket when attaching the TV to the bracket. See your TV instructions for screw type.

- Tighten the wall mount screw firmly to prevent the TV from falling. Do not over tighten the screws.
- If you are in any doubt how to mount your TV, contact a professional.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

 
- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.
- Make sure that there is a gap of at least 10 cm on both sides and a gap of 20 cm at the top.

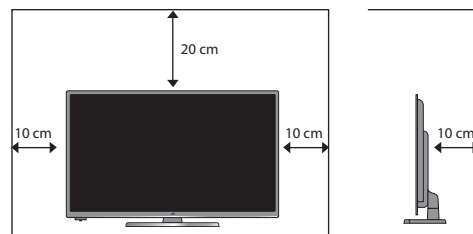

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm and long inactivity periods (going on holiday).

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Optimum viewing

- View the unit in moderate light to prevent eye strain. It is recommended to watch the unit from a distance 3-7 times that of the screen height.

LCD screen

- The LCD screen is manufactured using high-precision technology. However, some tiny black points and / or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.

Screen Burn

- A characteristic of Plasma and TV Panels is that displaying the same image for a long time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures shown on the unit will be constantly moving and fill the screen.
- Examples of images that you need to watch out for are as follows (this is not an all-inclusive list):
 1. **Black Bars:** If black bars appear at the left / right or top / bottom of the screen, it is recommended to change the format so that the picture fills the entire screen.
 2. **TV Channel Logos:** e.g. Shopping channel logos and pricing displays - especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
 3. **Time Displays**
 4. **Interactive Services:** Do not view a stationary page for long periods of time.
 5. **TV Menus**
 6. **Pause Mode:** Do not leave the screen in pause mode for long periods of time, e.g. when watching videos.
- To prevent screen burn if viewing any of the above for long periods of time, reduce contrast and brightness when viewing. Once burn-in occurs it will never disappear completely.

Country Restrictions for Wireless Internet

- This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

Country	Restriction
Bulgaria (BG)	General authorization required for outdoor use and public service
France (FR)	In-door use only for 2454-2483.5 MHz
Italy (IT)	If used outside of own premises, general authorization is required
Greece (GR)	In-door use only for 5470 MHz to 5725 MHz band
Luxembourg (EL)	General authorization required for network and service supply(not for spectrum)
Norway (NO)	Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Ålesund
Russian Federation (RU)	In-door use only

- The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for both 2.4 GHz and 5 GHz wireless LAN's.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.

Standby

- The  button on the remote control does not switch off the unit completely. The unit will continue to draw electricity from the mains supply while in standby. In the interests of safety and to

avoid unnecessary energy consumption, never leave the unit in standby while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Disconnect the mains plug from the mains socket.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not dispose of batteries in fire or with hazardous or flammable materials.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Earthing

- Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing - and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11)



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- The wall socket plug is used as a disconnect device, the disconnect device should be readily accessible.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Thank you for purchasing your new JVC Roku TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about **15 mins** for initial setup. Please follow this guide for a successful first time installation.



The latest eco-friendly power-saving technology will switch off the TV if it is left on and idle for 4 hours. If you wish to deactivate this feature, go the HOME screen, then to SETTINGS - SYSTEM - POWER - POWER SAVING MODE and un-tick 'Turn off after 4 hours'.

1

What's in the Box?

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

- | | | |
|--|---|---|
| ☒ TV | ☒ Remote Control/
AAA Batteries x2 | ☒ Quick Start Guide |
| ☒ Stands x 2 | ☒ Stand Screws x 4 | |

 


Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.

2

Operating Your Remote Control

1. Press and slide the battery cover to remove it.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries match with the (+) and (-) indicated in the battery compartment.
3. Slide and click battery compartment back into place.

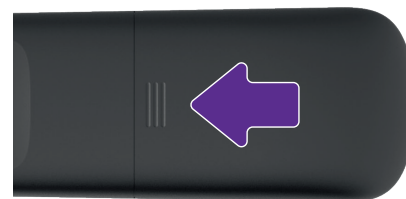


3

Installing the Stand

Attaching the Stand to the TV

 1. Ensure the TV is switched off and not connected to the mains power supply.
2. Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
3. Fit each stand to your TV using the screws supplied.

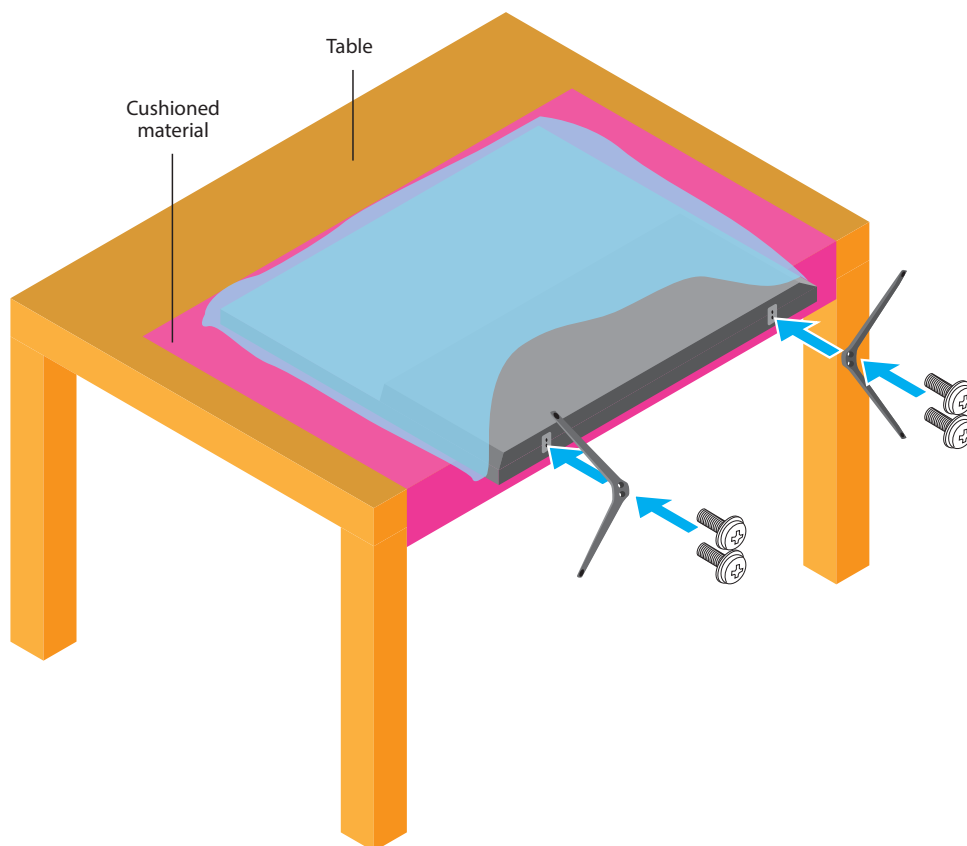

If you don't have a table big enough, you can use the TV box. Lie the box flat, make sure you place the polystyrene back in the box first to give the box some rigidity and strength.

 


The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4

Connecting the Aerial and Switching the TV on

1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
2. Plug the TV into a mains socket and switch on at the mains.
3. In standby mode, press the  button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

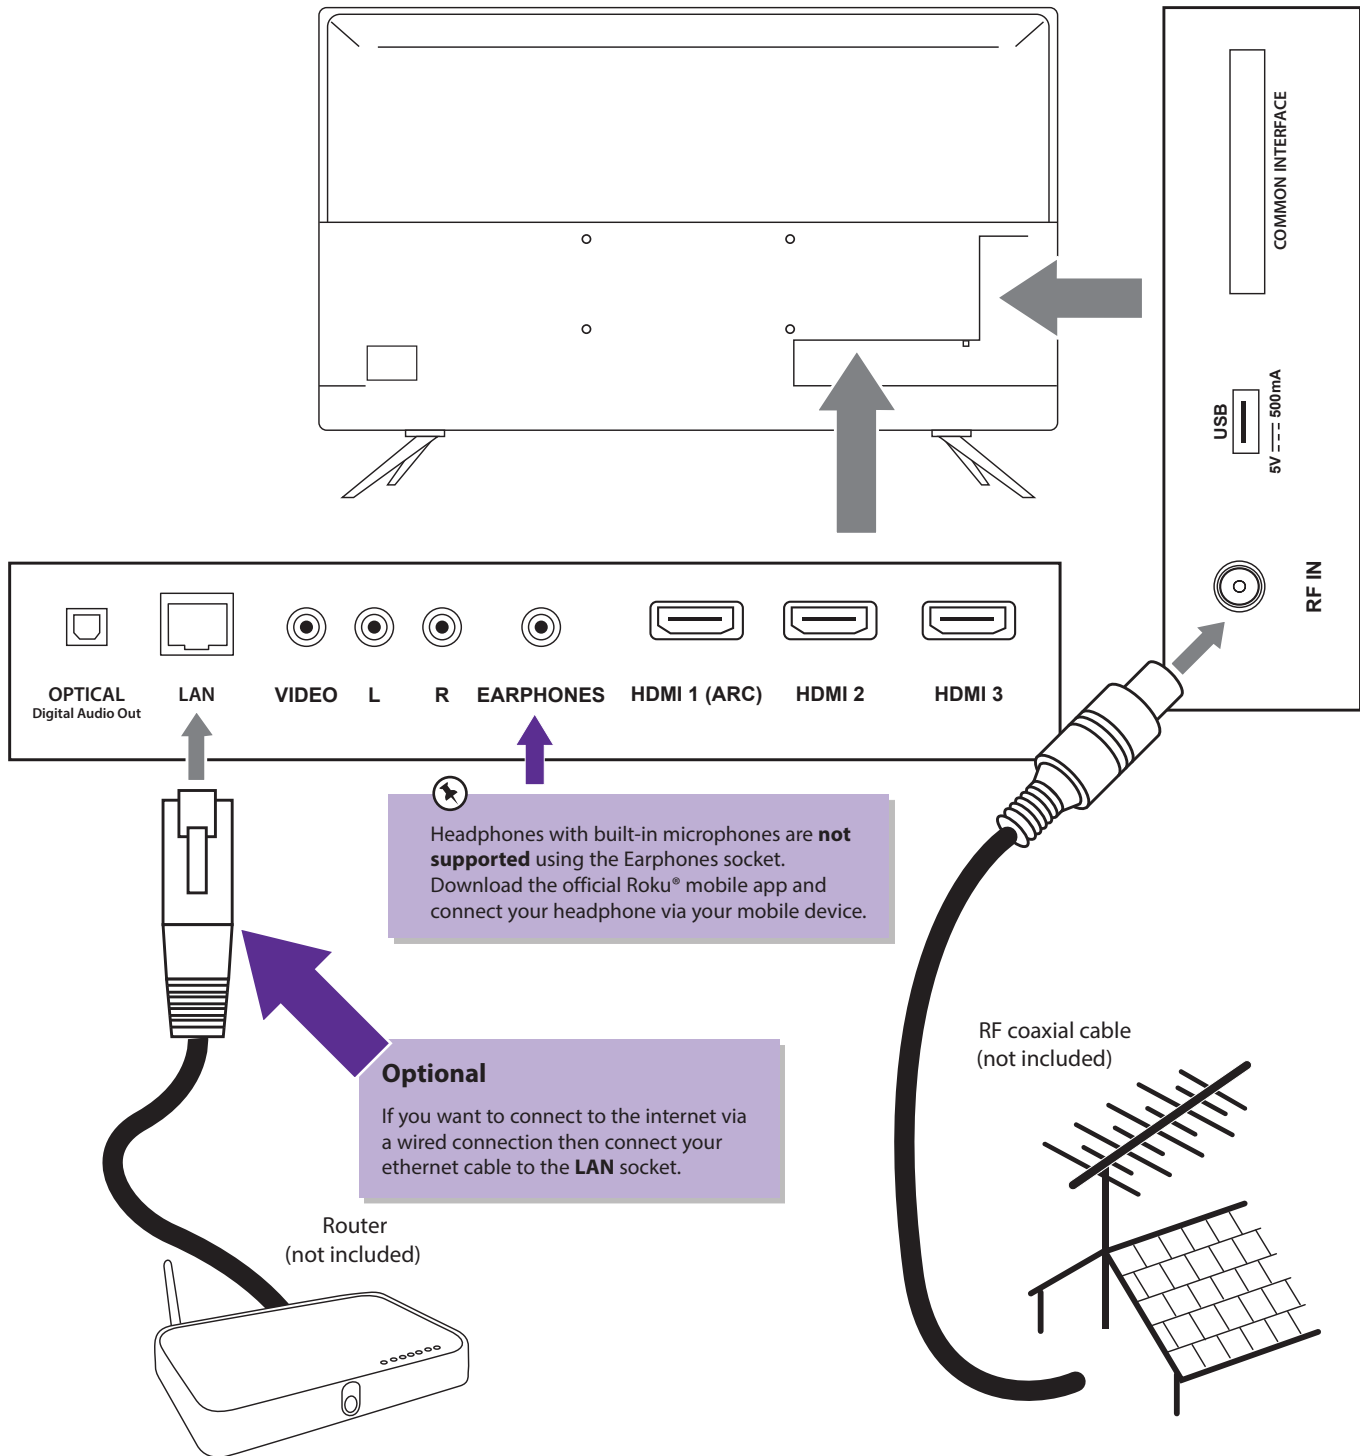


Do not connect the TV to the mains supply until you have completed all the connections. Always disconnect the TV from the mains socket when not in use for a long period of time. The  button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.


5 Choosing your language, location and connecting the internet

The first time you switch your TV on it will automatically be in the initial setup mode. This will guide you through the whole setup process of, selecting your desired language, connecting to the internet, activating your Roku account and connecting your devices.

 1. Select your Language, ENGLISH should already be highlighted then press the **OK** button to continue.

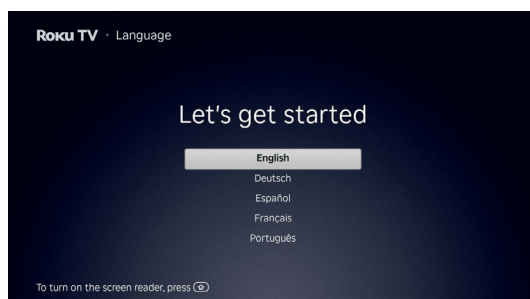

 
2. Select your Location, UNITED KINGDOM should already be highlighted then press the **OK** button to continue.

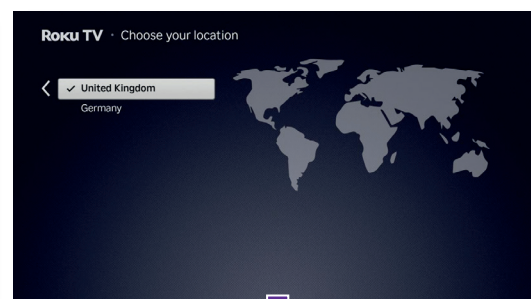



3. SET UP FOR HOME USE should already be highlighted then press the **OK** button to continue.



 STORE USE is only for use in a retail environment.

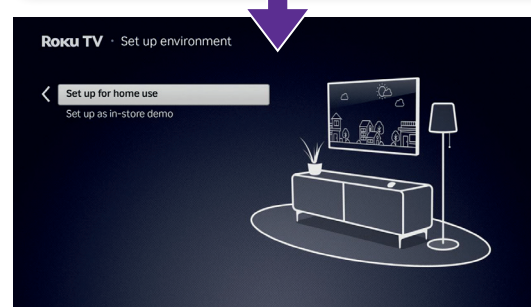


  4. Now its time to connect to the internet. You'll need your wifi password handy for this. The WIRELESS option is already selected so just press the **OK** button to continue.

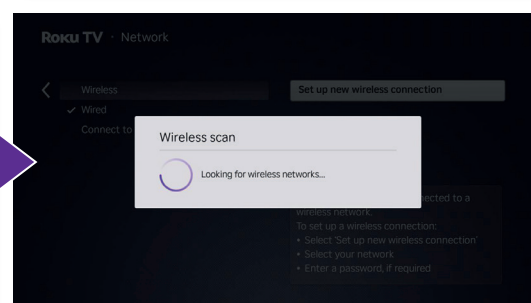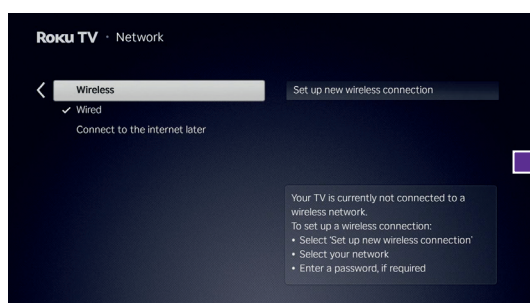


- The most common method of connecting your TV to the internet is WIRELESS but if you prefer you can also connect using a WIRED connection.
- If you don't wish to connect your TV to the internet select CONNECT TO THE INTERNET LATER.

 6. Select your wireless network from the list and then press **OK**.

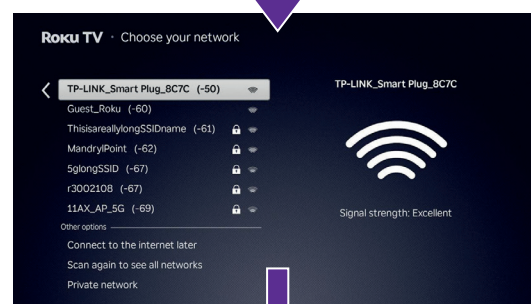

 7. Enter your Wi-Fi password using the keyboard on the screen and then highlight CONNECT and press **OK**.

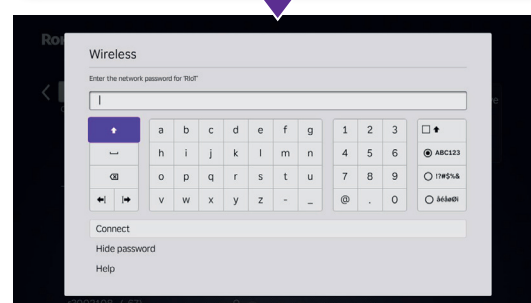


6

Checking for updates and setting up a Roku account


Once you have connected to the internet your TV will automatically check for any software updates. Once done you'll need to login to your Roku account, or set one up if you don't already have one. The account is FREE.

You will need either a laptop or smartphone which you can access the internet and your email account.

 
1. When your TV has connected to the internet it will check to see if there are any software updates needed. Please wait while the TV checks.

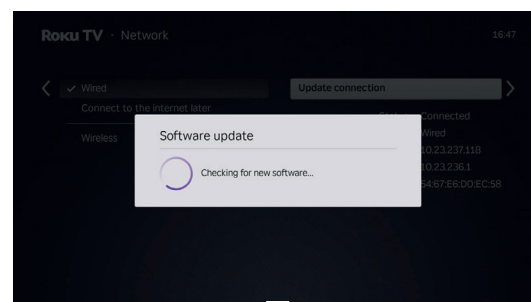

 2. Once your TV has updated then you will need to activate your TV. Press the **OK** button to activate the keyboard for entering your email address.

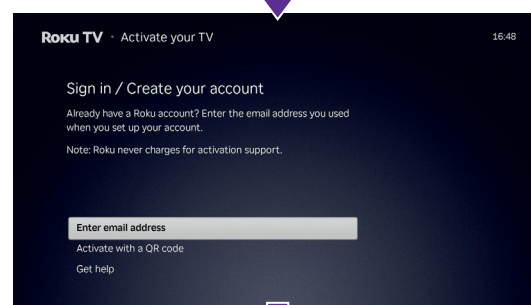


 3. Enter your email address using the keyboard on the screen, then highlight CONTINUE and press the **OK** button.

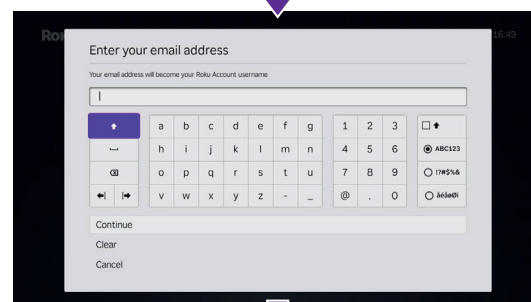

4. You now need to activate your TV by checking your email on your computer or smartphone to find the activation link email. If you don't find the email please check your spam folder.

 The screen will update once you have completed the instructions in the email.

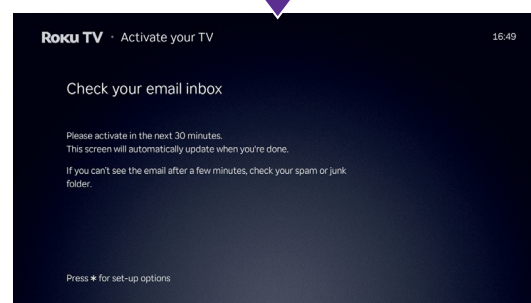

7 Activate your Roku TV

 
 
You'll now need to use your laptop, tablet or smartphone to check your email. This device will need to be on the same wifi network as your TV.




Beware of scams.

- Roku does not charge for activation support.
- The Roku app is FREE.


1. Open your email and click on the ACTIVATE DEVICE button.
2. Set up your preferences.
3. Name your device and give it a location.

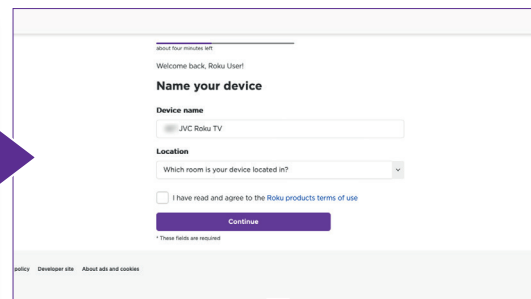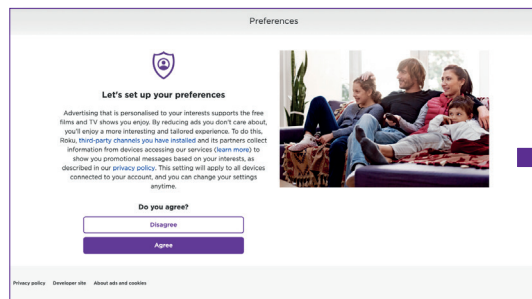


 
4. Select your region from one of the onscreen options.

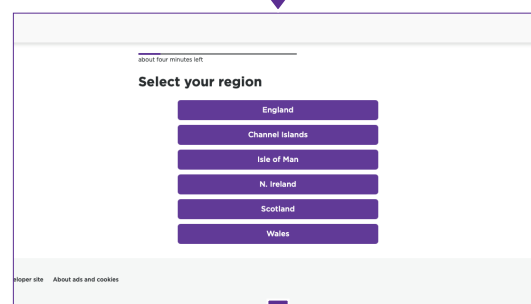

 5. Add more channels to your home screen, they are all free to install, however some may require a subscription to use.

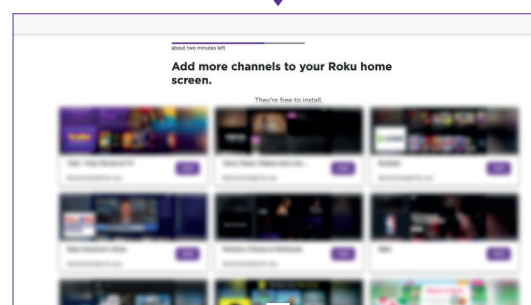

  6. Setup is now complete, your TV will now search for and update all the added channels.

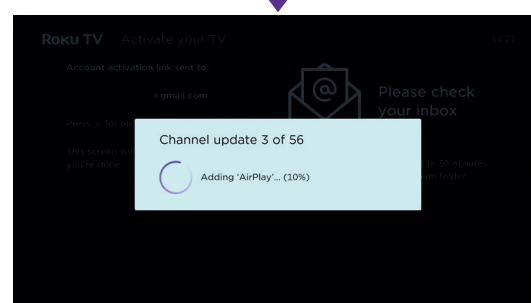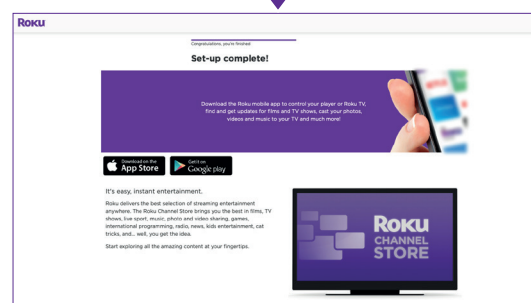


8


Connecting your devices

If you have other devices, such as a soundbar, set top box or games consoles then its now time to connect them. Connect all your devices to your TV and then plug them in and switch them on, then follow the process below.

 
1. You'll see the LET'S CONNECT YOUR DEVICES screen, press the **OK** button to continue.

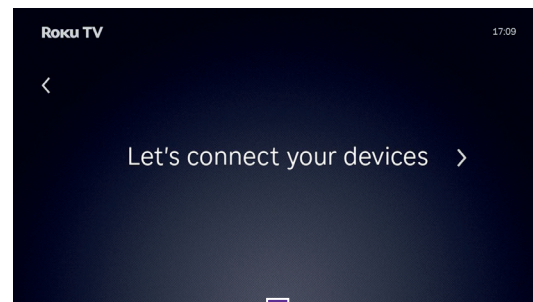

 
2. Make sure all your devices are connected to your TV and turned on, then with **EVERYTHING IS PLUGGED IN AND TURNED ON** selected press the **OK** button.

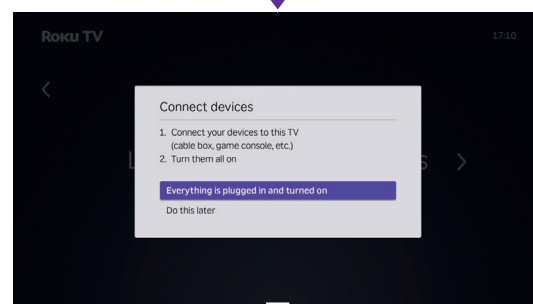

 3. Your TV will now search for devices.

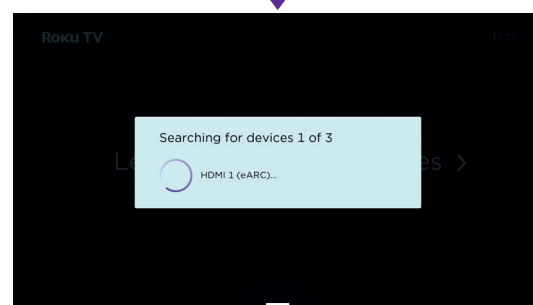

 4. Now you can name which device is connected to your HDMI and AV sockets. Scroll down the list to find a relevant name for your device and then press the **OK** button. Do this for each of your devices.

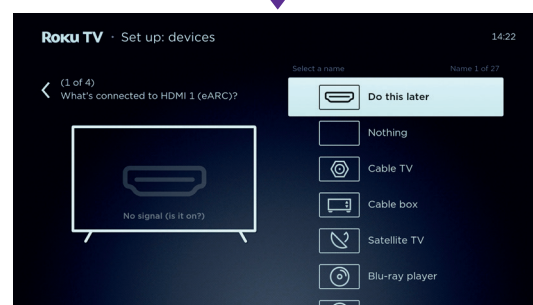

9

 
Tuning in Your TV

If you would like to watch live TV through an aerial, you'll now need to tune in your TV. If you have attached a Set top box such as **Sky/Virgin** or **BT** via a HDMI cable then there is no need to tune in your TV. To view your set top box select the Input that you have connected it to.




Make sure you have connected your aerial before tuning in your TV.


1. Make sure your aerial is connected. Select 'YES SET UP LIVE TV' and press **OK**.
2. Highlight ANTENNA/FREELY then press **OK**.

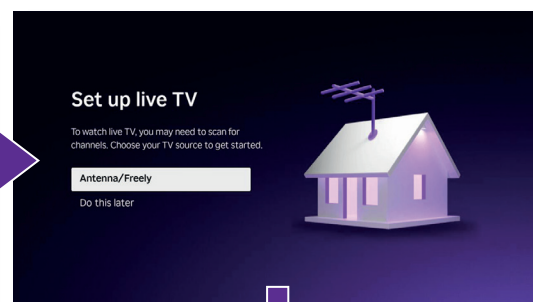

 
3. To make sure your TV scans in all channels select CHANNEL TYPE ALL and FILTERS ALL then highlight CONTINUE and press **OK**.

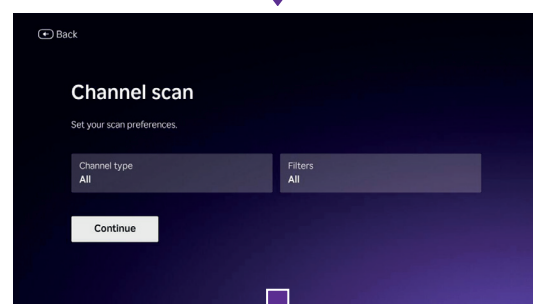

 
4. Your TV will now start scanning for channels.

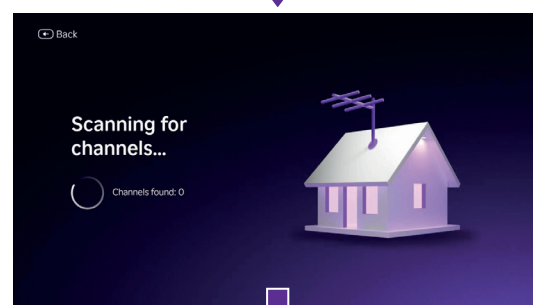

 5. Enter your postcode to get access to all the channels available in your area.

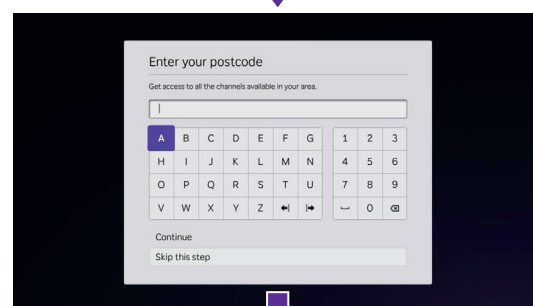


 6. You've finished! Press **OK** to watch live TV

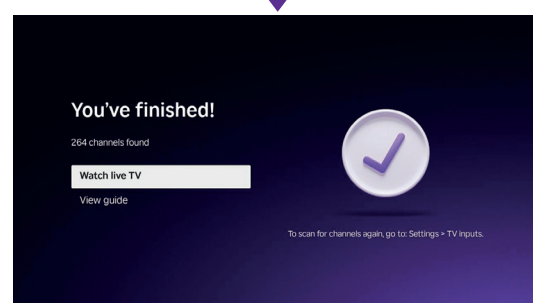

Accessibility Settings

 To access all of the accessibility menu options select the SETTINGS menu from the home screen, then scroll down to ACCESSIBILITY.

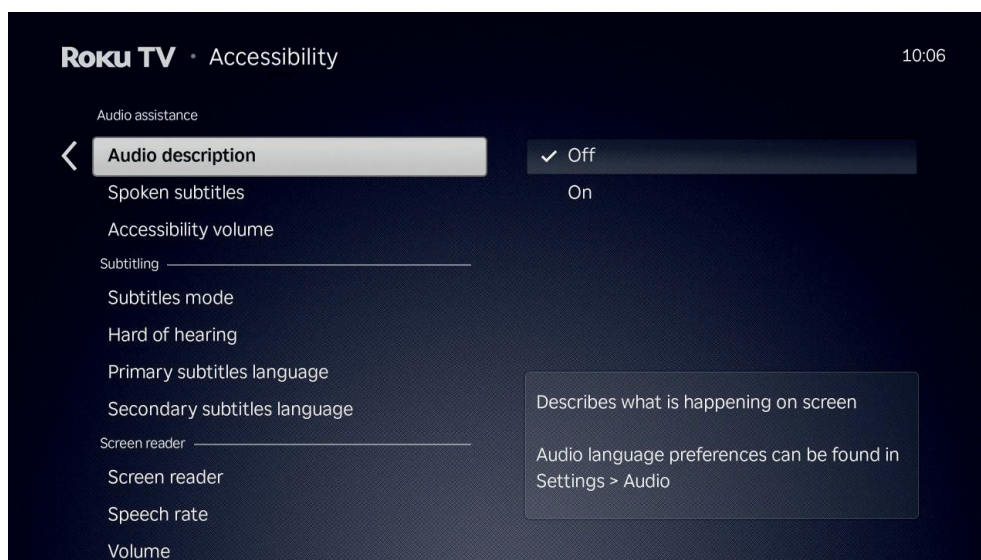

Accessibility Settings	
Audio description	Audio description describes what's happening on the screen. Switch on audio description by selecting ON.
Spoken subtitles	Spoken subtitles will read the video subtitles out loud. Switch on spoken subtitles by selecting ON.
Accessibility volume	Accessibility volume is the volume setting of the audio description and spoken subtitles. The volume level can be set to MEDIUM, HIGH or LOW.
Subtitle mode	Switch subtitles on or off. You have 4 options OFF - ON ALWAYS - ON REPLAY - ON MUTE. On always - will show subtitles on all the time. On replay - is a subtitle feature that will show a subtitle of replayed content after you have pressed the REPLAY button. It will show around 30 seconds of subtitles. It's not available on all content. On mute - Will show subtitles when your TV is muted.
Hard of hearing	Switching on hard of hearing will display captions describing the non vocal parts of a scene, like a door opening.
Primary subtitles language	You can select your preferred subtitle language here. It will only be displayed if available.
Secondary subtitles language	Sets your back-up language for subtitles, displayed when your primary choice is not available.
Screen reader	Screen reader will read out all the information displayed on screen. For example, it will read out all the menu options when a menu is displayed.
Speech rate	This is the screen reader speed at. It can be adjusted. FASTEST - VERY RAPID - RAPID - VERY FAST - FASTER - FAST - NORMAL - SLOW - VERY SLOW - SLOWEST.
Volume	This is the volume level of the screen reader. This can be adjusted. HIGH - MEDIUM - LOW.
Pitch	This selects the pitch for the screen reader. MEDIUM - LOW - LOWER - LOWEST - HIGHEST - HIGHER - HIGH.
Shortcut	You can enable a shortcut to switch screen reader on and off, so it's not on all the time. When enabled, switch between on and off for screen reader by pressing the * button four times consecutively.

Remote control overview

1. STANDBY Button

- Press to switch between on and standby.

2. FREELY button

- Press to access Freely.

3. Partner Buttons

Dedicated buttons show the logo of a pre-set streaming content provider. Dedicated content providers vary by model and region. Pressing a button turns on the TV and:

- Displays the streaming channel's main page if you have already added the channel to your Home screen.
- Displays the streaming channel's sign-up page if you have not already added the channel.

4. BACK Button

- Press to move back through menus, or go back to a previous screen.

5. HOME Button

- Press to return to the home screen.

6. OK and NAVIGATION (◀▶▲▼) Buttons

- Press OK to select highlighted items.
- Press OK in live TV to view the programme information banner.
- Press ◀▶▲▼ to move and highlight items in the corresponding direction.

7. VOLUME Buttons

Press to increase and decrease the volume level.

8. CHANNEL +/- Buttons

- Press to scroll up and down the channel list.

9. MUTE Button

- Press to mute or un-mute the volume.

10. REPLAY Button

- Live TV:** Jumps to previously tuned channel. If Live TV Pause is enabled, jumps back a few seconds with each press and resumes playing.
- Programme guide:** Returns to the current day and time. Streaming content: Depends on streaming app.
- On-screen keyboard:** Backspaces in the text you are entering.

11. STAR Button

- Displays additional options when available. On-screen hints let you know when this button is active.

12. REWIND - PLAY/PAUSE - FAST FORWARD Buttons

- Press to rewind, press one, two or three times to control the speed of the operation. Jump page through long lists, such as programme guide.
- Press to Play/Pause content.
- Press the fast forward, press one, two or three times to control the speed of the operation. Jump page through long lists, such as programme guide.

13. COLOURED Buttons

- Press the RED button to access Red button services if available.
- Press to access TELETEXT items when viewing Live TV.
- Press the coloured buttons to select Freeview Play options.

14. NUMBER Buttons

 
- Press to select a Live TV channels, or enter numbers on screen.

15. TV Button

- Press to jump to Live TV. Exits an interactive TV app.

16. GUIDE Button

- Press to view the Live TV Programme Guide.

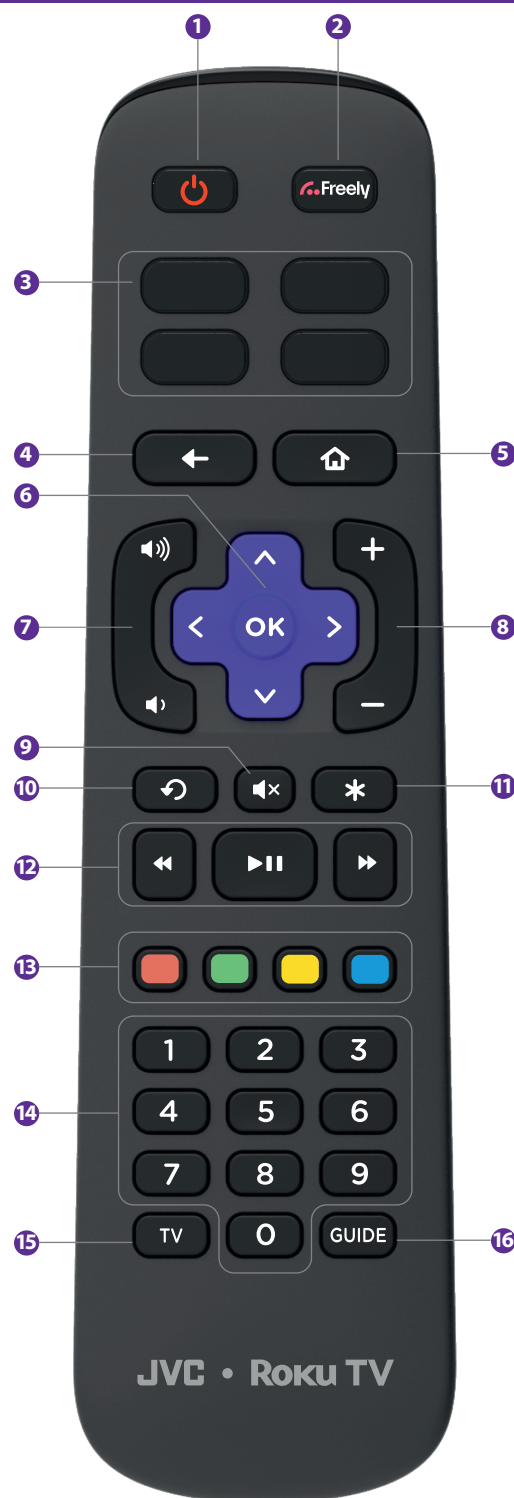


Roku® Mobile App

Download the **FREE** Roku® Mobile App to access the mobile remote control for even more control of your TV, including voice search and headphones for your personal enjoyment. To make sure you download the official app scan the relevant QR code.



 SCAN the QR CODE
to download the official Roku® App

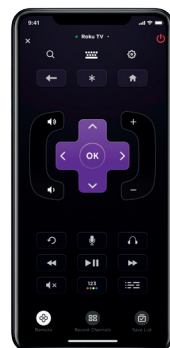

Your Instruction Manual

Your Instruction Manual can be found online

1. Go to **currys.co.uk**
2. Click on **Help & Support** on the top right of the page.
3. Scroll down to **I need help with...**
4. Click on **Buying guides, product manuals & product security reporting**, then **Product and service manuals**.
5. Enter **JVC Roku LED Smart HD TV Instruction Manual** and then click on the instruction manual.

For more information about the amazing features of your Logik Roku TV visit
<https://image.roku.com/c3VwcG9ydC1B/Roku-TV-User-Guide-14-5-GB.pdf>

Scan the QR code



Declaration of Conformity



Hereby, Currys Group Limited, declares that this TV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.currys.co.uk>

Click on **SEARCH** and enter the model number.

Licensing Information

- Roku, Roku TV, the Roku logo and the purple d-pad design are the trademarks or registered trademarks of Roku, Inc. in the United States and other countries. All other trademarks and logos herein are the property of their respective owners.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI logos are trademarks or registered trademarks of HDMI License Administrator, Inc.
- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
- Apple, Apple Home, AirPlay, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions. The Works with Apple Home badge is a trademark of Apple Inc. To use AirPlay and HomeKit with this JVC Roku TV, the latest version of iOS, iPadOS, or macOS is recommended.
- Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa.
- Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice.
- A minimum broadband speed of 10Mbps is recommended to stream live internet channels or watch on demand shows. Services, players and channels may not be available on all TVs. Extra costs may apply for certain players or services.

Product Fiche and Specifications

Brand	JVC
Model	LT-32CR250
Standby Power Consumption	< 0.5W
Networked Standby (Wake On LAN)	< 2.00W
Networked Standby (Wake On WLAN)	< 2.00W
Display Resolution	1366 pixels (horizontal) x 768 pixels (vertical)
Panel System	32 inch Direct lit LED Panel
Television System	DVB-T2 (VIDEO: MPEG-4 MP@ML, SOUND: AAC, MPEG-1 LAYER 1/2, MPEG-2 LAYER 2)
Power Source	220-240V~, 50/60Hz
Operating Temperature	0°C – 40°C
Operating Humidity	80% (max)
Mercury Content (mg)	X
Presence of Lead	√*
Audio Power	2 x 8W
Dimension (W x H x D) with base	716(W) x 465(H) x 178(D)
Weight (Net)	3.9kg
Inputs / Output	
AV	1
HDMI	3 (HDMI 1 with ARC)
Common Interface	1
USB	1 x USB 2.0 (Side)
ANT. (Aerial socket)	1
SPDIF (Optical)	1
Ethernet (RJ-45)	1
Built-in wireless network	Yes
Wireless Transmitter	
Frequency Ranges	Max Output Power
2400 - 2483,5 MHz (CH1-CH13)	< 100 mW
5150 - 5250 MHz (CH36 - CH48)	< 100 mW
5250 - 5350 MHz (CH52 - CH64)	< 100 mW
5470 - 5725 MHz (CH100 - CH140)	< 100 mW

Features and specifications are subject to change without prior notice.

*This television contains lead in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

To view energy information about your product scan the QR code on your Energy Label.

Statement of Compliance

S.1. 2023 No. 1007

The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulation 2023

This statement of compliance is issued under the sole responsibility of the manufacturer.

Currys Sourcing Limited
(Registered in Hong Kong No. 575469)
Unit 3101, 31/F, Two Sky Parc, 51 Hung To Road, Kwun Tong, Kowloon, Hong Kong
UK Representative: Currys Group Limited (Registered in England No. 504877)
1 Portal Way, London, W3 6RS, UK

Declare that the Product.

JVC Roku TV LT-32CR250

32" LED Smart HD Roku TV

We declare, that in our opinion as the manufacturer, we have complied with the Regulation, as follows:

Schedule of the Regulation complied with: **Schedule 1**

1. The product has no universal default passwords. Passwords are unique or defined by the user.
2. The manufacturer has published details of a point of contact for users to report security issues relating to the product for which they have an obligation and details of when a person who reports a security issue will receive: -
 - a. An acknowledgment of a security issue report.
 - b. Status updates until resolution of the report.
3. The manufacturer has published the defined support period for the product and if this period is extended, the new defined support period will be published as soon as is practicable.

Defined Support Period End Date: 31-Dec-2028

Product Security Report – productsecurityreports@currys.co.uk

Name: Kenneth Chow

Signature:



Position: Technical Director

Date:

10/03/2025

Need More Help?

If you need more help setting up your TV then please call:

UK: 0344 561 1234
Ireland: 0818 810575

Lines are open 24/7

Currys Group Limited (Registered in England No. 504877)
1 Portal Way, London, W3 6RS, UK
www.currys.co.uk
Contact details: business.standards@currys.co.uk

EU Representative

Currys Ireland Limited (Registered in Ireland No. 259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland
www.currys.ie
Responsible person: Currys Ireland Limited
Contact details: business.standards@currys.co.uk

This product is distributed and warranted exclusively by Currys Group Limited. "JVC" is the trademark of JVC KENWOOD Corporation, used by Currys Group Limited Under licence.

(QSG-LT-32CR250_230625V1)