

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

FRENCH FRY CUTTER

MODEL:F300

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

MODEL:F300



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

CORRECT DISPOSAL



This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

Important Safeguards

When using electrical appliances, basic safety precautions should be followed, including the following.

1. READ ALL INSTRUCTIONS.

1. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
2. Please check that the specified supply voltage in the product is consistent with the supply voltage(AC only).
3. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. Avoid direct contact with the blade as it is exceptionally sharp and can cause injury.
5. Do not operate the electric fry french cutter or any other electrical equipment with a damaged cord or plug, or after the unit malfunctions or is dropped or damaged in any manner. Return it to the nearest authorized service facility for examination, repair, or adjustment.
6. Put this instruction manual in a safe place. Do not discard.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Electric Shock Danger! Non-professional personnel are forbidden to repair the products, otherwise it may result in electrical shock. When failures happen, it should be repaired by a qualified maintenance personnel.
9. WARNING! It is strictly prohibited to put the main body of the machine and the power cord into any liquid.
10. Do not place the product directly on the fire or near the source of fire, otherwise the product will be damaged or even result in danger. Once part of the product is on fire, do not directly use water to extinguish the fire. Use a wet cloth to cover the fire site.

11. When the plug is plugged into the socket, it must be plugged to the end, otherwise it will cause the components overheating and burning due to poor contact.

12. Do not operate the appliance with a damaged cord or plug, or if the machine is malfunctioning or damaged. Send the unit to the nearest authorized service center for examination and repair.

13. Voltage of this machine was written on rating plate at side of machine.

14. Place machine on a flat and stable surface.

15. This appliance must be grounded while in use to protect the operator from electrical shock

16. Unplug main power cord from outlet while not in use and before cleaning. Allow to clean and cover the unit and store in a dry and safe place if Not being used for a long time.

17. To avoid any risk of electrical shock, do not immerse cord, plug or machine into water or other liquid.

18. This appliance must be grounded to make sure safe.

19. When the machine is working, do not put your hands into the card slot of the machine to avoid pinching or cutting your hands.

20. This is not a toy, please do not let children use it alone, it should be used under adult supervision.

21. The machine will automatically stop running after 15 minutes of continuous operation in automatic mode. If it needs to continue working, it needs to be manually turned on again

Note: This machine is not suitable for cutting sweet potatoes.

Chapter One Safety Precaution



Notice

- Prevent water and conductive liquid entering into the machine;
- Please do not throw stick and other things into the machine;

1.INTRODUCTION

This multi functional food chopper can cut potatoes,cucumbers carrots and other foods into strips. It is driven by a motor, which saves time and effort, so that you can make food better and easier.

2.SPECIFICATIONS & FEATURES

Model	Voltage V	Frequency Hz	CruuentA	Outline dimension mm
F300	DC29V	--	2A	372×115×115
Note: Via AC100-240V 50/60Hz 58W adapter				

3.FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the

user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

4. TRANSPORTATION AND MAINTENANCE:

Handle carefully during transportation and store in a dry and safe place after use.

5. OPERATION:

1. How to connect?

 
a) Insert the DC plug of the power adapter into the DC hole at the rear of the machine



b) Connect the power cord to the socket so that the machine is powered on



2. Control key description

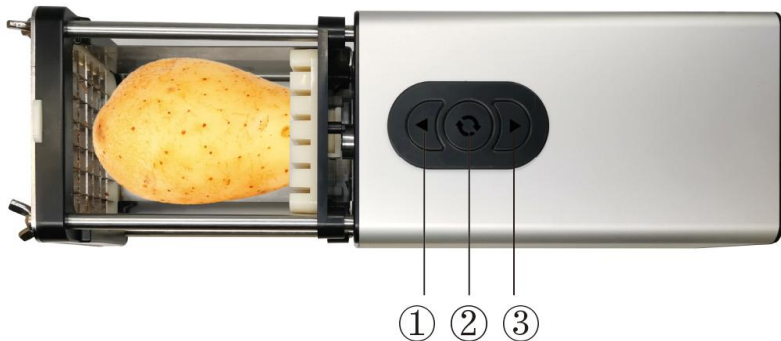

- a) Press and hold the "1" key, the connecting rod of the machine will push forward and compress the vegetable;
- b) Press the "2" key for a short time, wait for about 3 seconds, the machine will automatically run and perform reciprocating operation, instead of holding down the "1" and "3" keys all the time, press any key again, and the machine will stop automatically run;
- c) Press and hold the "3" key and the connecting rod of the machine will come back, so you can fill vegetables.

3. How to operate the machine to cut vegetable?

- a) Put the vegetable into the groove of the machine

 


b) Operate the control key on the top of the machine to press vegetable into strip




4. How to disassemble and replace blades?


a) Turn the four screws on the front of the machine counterclockwise to remove them

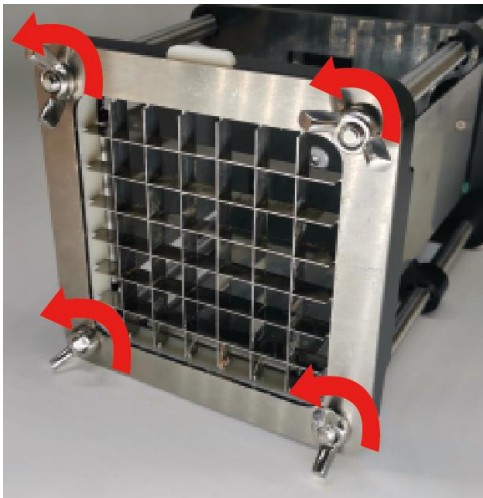

 
b) Remove the baffle

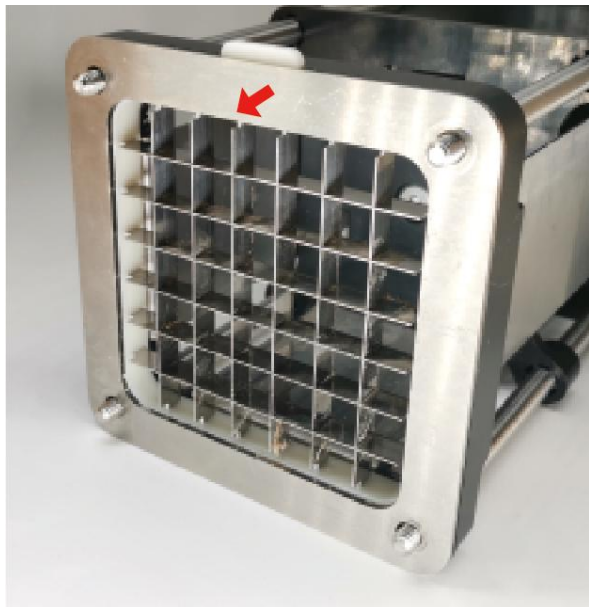

 c) Remove the blade, replace and clean it

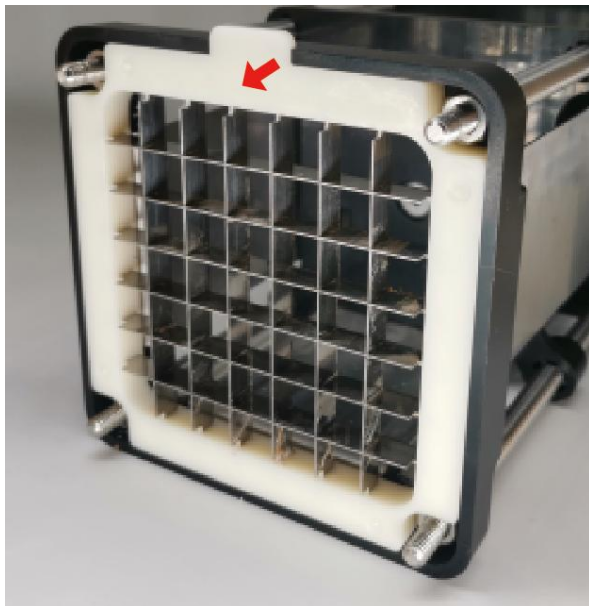

 
d) find the fixing piece on the back of the top plate

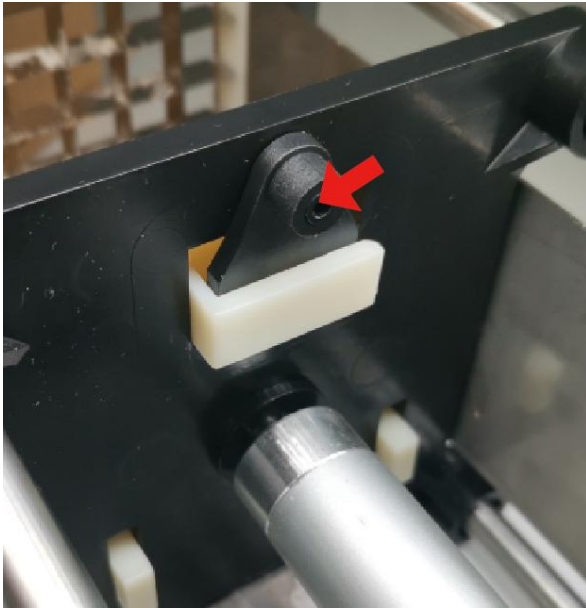

e) Turn the fixing plate Counterclockwise



 f) Pull up the top plate and remove it for replacement or cleaning

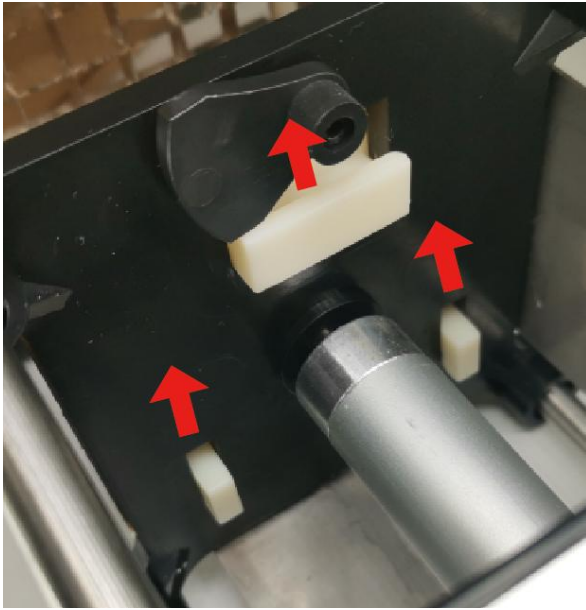

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support