


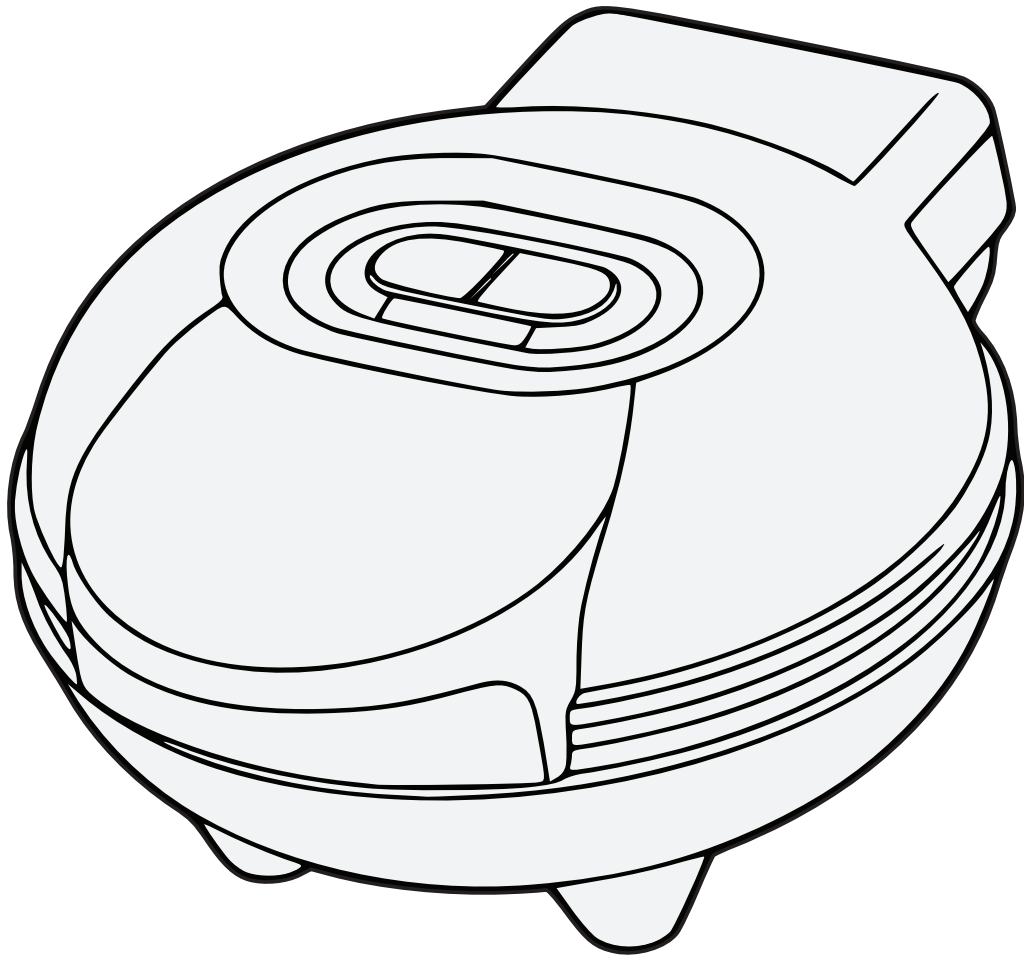

MINI WAFFLE MAKER

Product Instructions

Product No. 2000296

vonshef


Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME



Components

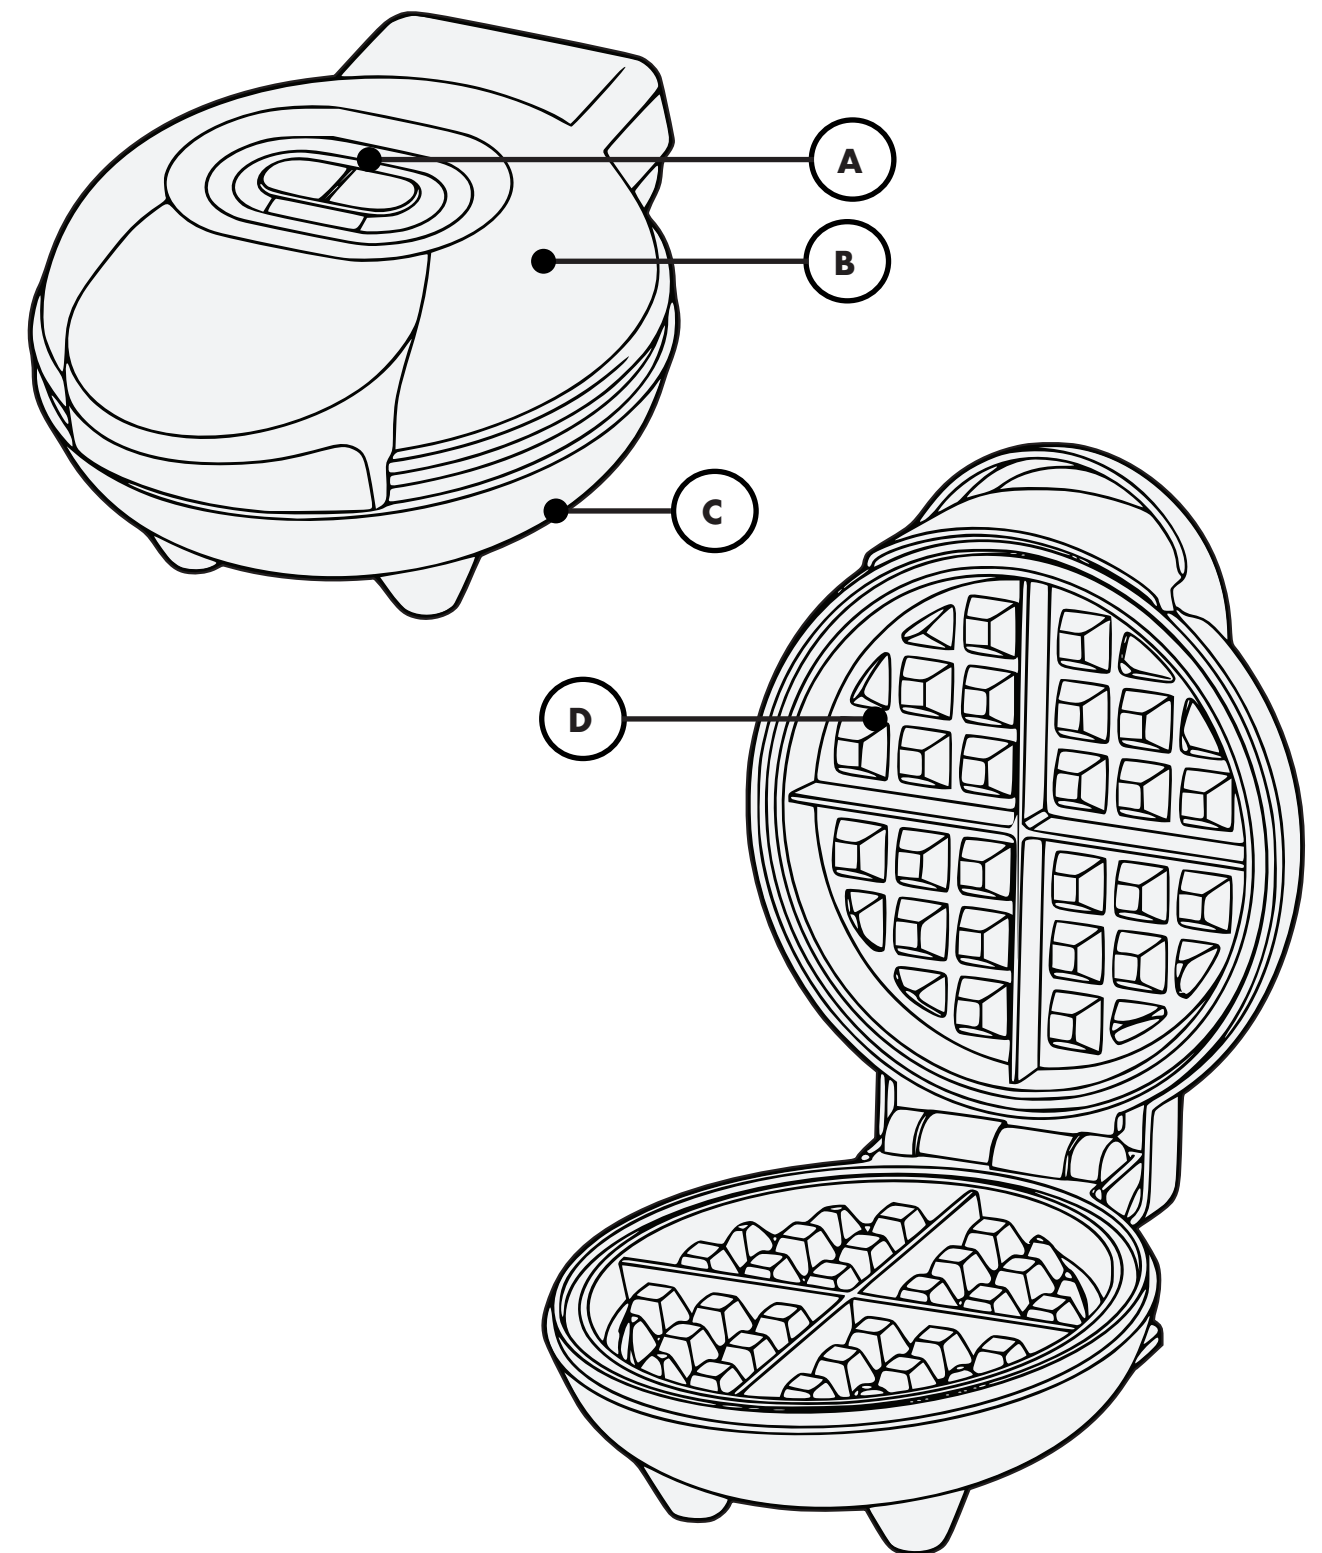

- A. Indicator Light
- B. Upper Housing

- C. Lower Housing
- D. Plate

Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Information

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following the safety instructions in this manual. Surfaces become very hot during use — avoid touching metal parts during and after operation.

- If the supply cord is damaged, it must be replaced by the manufacturer, an authorised service agent, or a similarly qualified person.
- Before connecting, check that the voltage shown on the underside of the appliance matches your mains supply. Connect to an earthed wall socket only.
- Do not operate using an external timer or remote control system.
- Place the appliance on a flat, stable surface with adequate space around it. Do not allow the cord to hang over the edge of a table or sink, or come into contact with hot surfaces.
- Always preheat the cooking plate before use. Never use sharp or abrasive utensils on the plate, as this will damage the non-stick coating.
- After use, unplug the appliance and allow it to cool fully before cleaning. Never immerse in water or allow water to enter the appliance.

Before First Use

- Plug in the waffle maker. Both the red and green lights will turn on while it heats.
- Once the red light switches off, this will indicate the waffle maker is heated up and the green light will remain on to indicate it's ready to use.
- Clean the baking plates with a damp cloth or sponge.
- Lightly grease the plates with butter or cooking oil.
- Plug in the waffle maker and heat until the green ready light switches off.

NOTE: Light smoke during first use is normal due to initial heating of internal components.

Operation

1. Plug in the waffle maker. Both the red and green lights will turn on while it heats.
2. Once the red light switches off, this will indicate the waffle maker is heated up and the green light will remain on to indicate it's ready to use.
3. Open the lid and lightly grease the top and bottom plates with oil or butter.
4. Pour your pre-prepared batter into the centre of the mould.
5. Gently close the lid. **CAUTION:** Do not overfill the mould to prevent mixture from overflowing.
6. Allow to cook for 5-8 mins or until your desired level of browning has been reached.
7. Once cooked, remove the waffle with heat resistant plastic or wooden utensils. Do not use metal as this will damage the non-stick surface of the cooking plates.
8. Disconnect from the mains and allow the appliance to completely cool before cleaning and storing away.

Usage & Safety

NOTE: During cooking, the red light will cycle on and off to maintain the correct cooking temperature

Cleaning After Use

- Use a heat resistant plastic or wooden utensil to remove any stubborn food residue.
- Do not use metal, sharp, or abrasive utensils as this will damage the non-stick surface on the cooking plates
- Clean the cooking plates with hot soapy water using a non-abrasive sponge or cloth
- Clean the body of the appliance using a damp sponge or cloth



Environmental Protection

Do not dispose of electrical products with household waste. Recycle where facilities exist.

Contact your local authority or retailer for recycling advice.

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



CAUTION: Hot surfaces.



Keep all electrical components dry at all times. Water and electricity create serious safety hazards that can result in injury or death.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Technical Specifications

Input Voltage: AC 220-240V; 50Hz
Rated Power Input: 600W

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

