

**POFOTO**

# User Manual

## Portable Video Player



**Model PD10**

POFOTO, Empowering Senses, Elevating Moments.  
If you have any questions, please contact: [help@pofotovip.com](mailto:help@pofotovip.com)



## Warm Tips

How to Get a 24 Month Warranty

Contacts us to register it within 3 weeks after receiving your player.

Enjoy Your New DVD Player!



Email us:

**help@pofotovip.com**

# EN

 
|                                   |    |
|-----------------------------------|----|
| USEFUL TIPS .....                 | I  |
| PRODUCT DESCRIPTION.....          | 3  |
| BUTTON INTRODUCTION .....         | 4  |
| REMOTE CONTROL INSTRUCTION.....   | 5  |
| RANGE OF USE.....                 | 8  |
| RANGE OF USE CONNECTION .....     | 9  |
| ENJOY FUN WITH A TELEVISION ..... | 9  |
| SETUP PAGE.....                   | 9  |
| SYSTEM SETUP .....                | 10 |
| LANGUAGE SETUP .....              | 11 |
| AUDIO SETUP .....                 | 11 |
| VIDEO SETUP .....                 | 12 |
| DIGITAL SETUP.....                | 12 |
| SPECIFICATIONS .....              | 13 |
| TROUBLESHOOTING .....             | 14 |
| WARRANTY.....                     | 17 |

## USEFUL TIPS


**1. Battery.** Please recharge the Battery for at least 6 hours before the initial use. If you connect this player with AC power, you can use it directly.

**Note:** Make sure you switch off the unit before charging. The charging indicator LED will change from RED to OFF to indicate that the battery has been fully charged. When the unit is on, the LED turns Green.

**2. LCD Screen.** If you find scratches on the screen, just remove the screen protector.

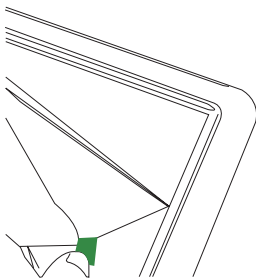

 **3. Laser Pickup.** There is a round card inside the player. Before you insert a disc, please remove the card. Please DO NOT touch the laser pickup or other parts with your hand.

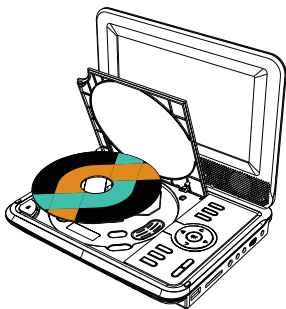


#### 4. Disc Format

|                           |                                                                                                                                                                                                                                 |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Disc Format Supported     | CD,DVD,DVD+R/-R,DVD+RW/-RW,VCD<br>SVCD,CD-R/RW                                                                                                                                                                                  |
| Disc Format NOT Supported | Blu-ray, HD DVD,Discs recorded in the AVCHD format,<br>DVD-Audio,Version 1.0 of DVD-RW,DVD-ROM,CD-<br>ROM,CDV,CD-G SACD,Photo CD,DVD-RAM that cannot<br>be removed from their cartridges,2.6-GB and 5.2-GB<br>DVD-RAM,PAL discs |

**5. Language Settings.** Press key [SET UP] → [OSD Lang] → Change the display language. It is the same procedure for Audio, Subtitles and Menu.

#### 6. About the Maintenance.

 
- Wipe with a soft,dry cloth to clean this unit
- Use eyeglass cleaner to remove stubborn dirt from the LCD.
- Do not use alcohol, paint thinner or benzine to clean it.
- Do not press onto the LCD screen or drop the product from a high place.
- This unit is not waterproof. To prevent a fire, do not place any container filled with liquid near this unit (such as a vase or flower pot) or expose it to dropping, splashing,rain or moisture.

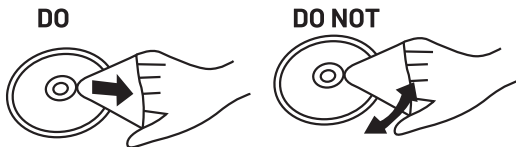

- To clean discs, wipe with a damp cloth and then dry.
- Do not attach labels or stickers to any discs (This may cause discwarping, making it unusable).
- Do not write on the discs with a ball-point pen or any other writing tool.
- To protect discs from scratches and dirt, return them to their cases or cassettes when not in use.
- Do not use discs that are severely deformed, cracked, or irregularly shaped (e.g., heart-shaped).

# PRODUCT DESCRIPTION

 
## Package Contents

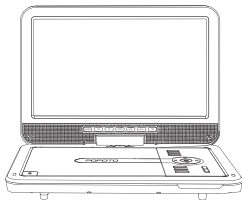


**Portable Video Player**



 
**Remote Controller**

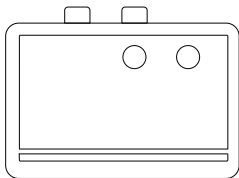


**Car Headrest Mount Holder**

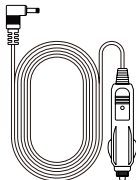 

**Car Charger**

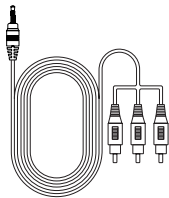 


**3-in-1 AV Cable**

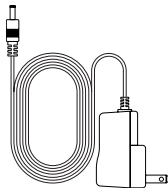 

**AC Adapter**

 
# BUTTON INTRODUCTION

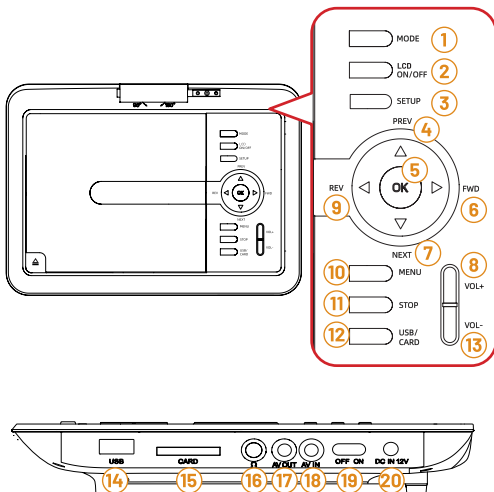

|   |                    |                                                                                      |
|---|--------------------|--------------------------------------------------------------------------------------|
| 1 | <b>MODE</b>        | Press repeatedly to switch the mode for AV MODE or DVD MODE                          |
| 2 | <b>LCD ON/ OFF</b> | Turn the unit screen on and off                                                      |
| 3 | <b>SETUP</b>       | Press to enter the setup menu, then use the direction keys and OK to set system menu |
| 4 | <b>PREV</b>        | Previous song                                                                        |
| 5 | <b>OK</b>          | Press to confirm the selected item; Pause and start playing                          |
| 6 | <b>FWD</b>         | Fast-forward X2/ X4/ X8/ X20                                                         |

|    |                                                                                   |                                                                                |
|----|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| 7  | <b>NEXT</b>                                                                       | Next song                                                                      |
| 8  | <b>VOL+</b>                                                                       | Increase volume                                                                |
| 9  | <b>REV</b>                                                                        | Fast rewind X2/X4/X8/X20                                                       |
| 10 | <b>MENU</b>                                                                       | Press to return to the root menu for DVD                                       |
| 11 | <b>STOP</b>                                                                       | Press to stop current video                                                    |
| 12 | <b>USB/<br/>CARD</b>                                                              | Press repeatedly to switch the playback source DVD/USB/<br>CARD                |
| 13 | <b>VOL-</b>                                                                       | Lower volume                                                                   |
| 14 | <b>USB</b>                                                                        | USB Reading Interface                                                          |
| 15 | <b>CARD</b>                                                                       | SD Card Reading Interface                                                      |
| 16 |  | 3.5mm Headphone Jack, can be connected to 3.5mm<br>headphones or some speakers |
| 17 | <b>AV OUT</b>                                                                     | AV Signal Output Interface (Used for Sync Display)                             |
| 18 | <b>AV IN</b>                                                                      | AV Signal input Interface (Used in AV IN Mode)                                 |
| 19 | <b>OFF/ON</b>                                                                     | Main Power Switch                                                              |
| 20 | <b>DC IN 12V</b>                                                                  | DC Power Charging Interface                                                    |


# REMOTE CONTROL INSTRUCTION

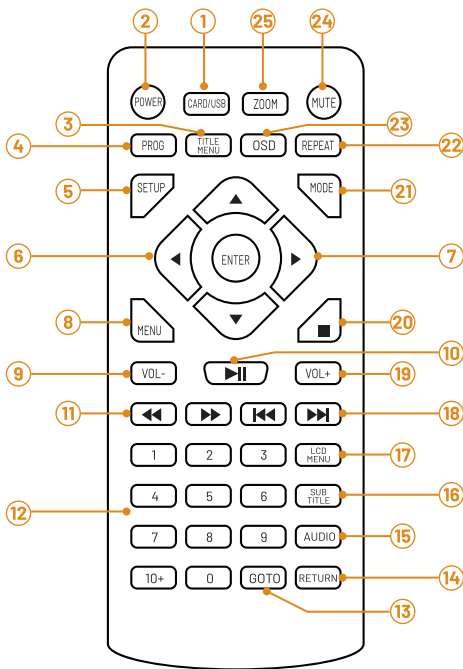 

|                                     |                                                                                                                                                           |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1. CARD/USB</b>                  | Switch between DVD, CARD and USB modes                                                                                                                    |
| <b>2. POWER</b>                     | Turn the unit on and off                                                                                                                                  |
| <b>3. TITLE MENU</b>                | All program titles can be displayed                                                                                                                       |
| <b>4. PROG</b>                      | Program a loaded disc to play chapters and titles or tracks in a specified order                                                                          |
| <b>5. SETUP</b>                     | Show Setup menu directly (except the AV mode)                                                                                                             |
| <b>6. DIRECTION BUTTON</b>          | Selection/Enter<br>-To select: Press up, down, left, or right<br>-To enter: Press[OK]<br>-Frame forwrd/Frame backward: (while paused) press left or right |
| <b>7. ENTER</b>                     | Press to confirm option                                                                                                                                   |
| <b>8. MENU</b>                      | View the main menu on a loaded DVD                                                                                                                        |
| <b>9. VOL-</b>                      | Decrease volume,minimum to 0                                                                                                                              |
| <b>10. PLAYER/PAUSE</b>             | Play or pause the audio/movie playback.<br>Confirm the selection or press it to select the file to play                                                   |
| <b>11. Fast Forward/Fast Rewind</b> | Select fast forward/rewind speed                                                                                                                          |
| <b>12. 0-10+Number Keys</b>         | Press number to input a DVD chapter or CD track (invalid for some discs)                                                                                  |
| <b>13. GOTO</b>                     | Press to go to a specific time index/title/ chapter                                                                                                       |
| <b>14. RETURN</b>                   | During DVD play,press this key,to main menu                                                                                                               |
| <b>15. AUDIO</b>                    | Press to swith left and right channels                                                                                                                    |
| <b>16. SUBTITLE</b>                 | Change subtitle mode                                                                                                                                      |

|                      |                                                                  |
|----------------------|------------------------------------------------------------------|
| <b>17. LCD MENU</b>  | Press this key to adjust the screen                              |
| <b>18. PREV/NEXT</b> | Press to play previous chapter/title/track                       |
| <b>19. VOL+</b>      | Increase volume,maximum to 15                                    |
| <b>20.PAUSE</b>      | Stop the audio/video/photo playback                              |
| <b>21. MODE</b>      | Select "DVD"mode or"AV IN"mode                                   |
| <b>22. REPEAT</b>    | Repeat the loaded disc                                           |
| <b>23. OSD</b>       | Display audip and video information such as title,play time,etc. |
| <b>24. MUTE</b>      | Mute the sound (Press again to activate the sound)               |
| <b>25. ZOOM</b>      | Short press to select 2X, 3X, 4X, 1/2, 1/3, 1/4                  |

## RANGE OF USE

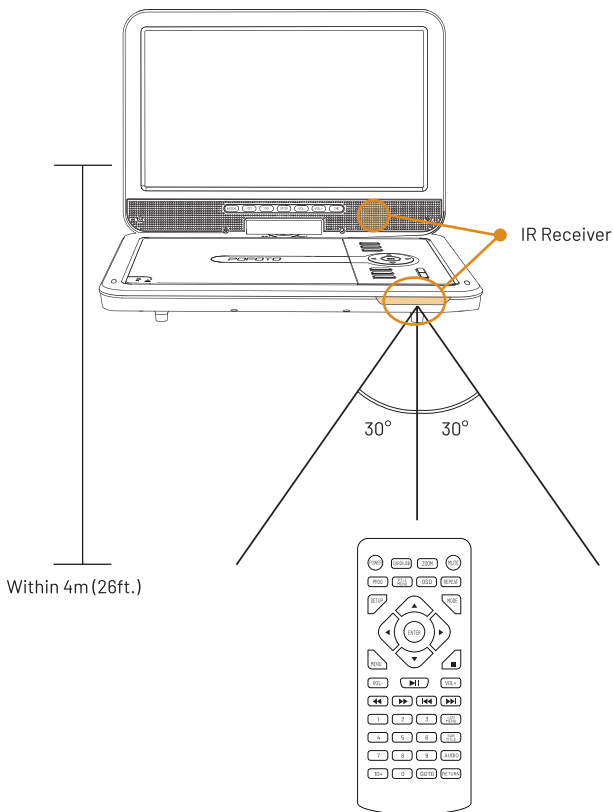 

The distance and angles are approximate.

Within 4m (26ft.) in front


Within 30 degrees angle either left or right

## RANGE OF USE CONNECTION

 Here are the instructions about how to play games on a DVD player:

1. Use your PC to download games from the attachment file.
2. Unzip the NES file folder to your PC, and copy the folder to a USB stick (16GB to 32GB).
3. Plug the USB stick into the right-side USB slot and plug the game joystick into the backside USB slot.
4. Turn on the player and press "USB/SD card", choose "USB" mode.


## ENJOY FUN WITH A TELEVISION

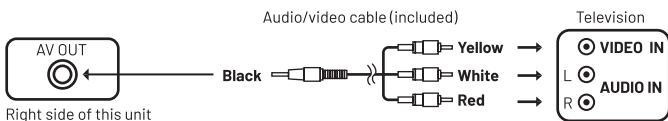

## SETUP PAGE

### Menu Operation

 1. Press **[SETUP]** on the remote control or on the unit to show the setup menu.
2. Use **[ ▲ ▼ ◀ ▶ ]** to control the cursor to enter the secondary or tertiary menu, and press **[OK]** to select the option you want to set.
3. Finally, press **[SETUP]** again to exit the setup menu.

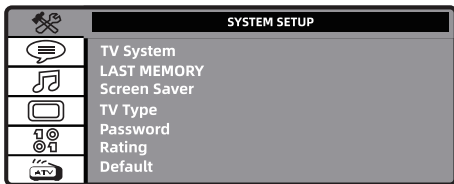

## SYSTEM SETUP

### [TV System]

Set TV Type to NTSC, PAL, or Auto.

### [LAST MEMORY]

1. ON: Each time you turn on the unit or stop the disc, it will memorize the last play duration. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.
2. OFF: Disable the last memory function.

### [Screen Saver]

1. ON: If the image remains motionless on the screen, for example the disc is paused, stopped etc., for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.
2. OFF: Turn off the screen saver function.

### [TV Type]

Setup panel display to 4:3PS, 4:3LB, 16:9

1. 4:3 Normal / PS PANSCAN

If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.

2. 4:3 Normal / LB LETTERBOX

If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.

3. 16:9 wide

Select this option if the unit is connected to a wide-screen TV set. The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

### [Password]

Enter the default password "0000" then set your password.

### [Rating]

When setting a rating level, a password screen is shown. Follow the on-screen instructions. **Do not forget your password.**

### [Default]

Restore all setting options of your portable DVD player to factory default settings.



## LANGUAGE SETUP

 
The Audio menu allows you to change the audio setup of the DVD.

**[Osd Language]** Set this on-screen display language in this item.

**[Audio Lang]** Set the default audio language.


**[Subtitle Lang]** Set the subtitle language.

**[Menu Lang]** Set the menu language.

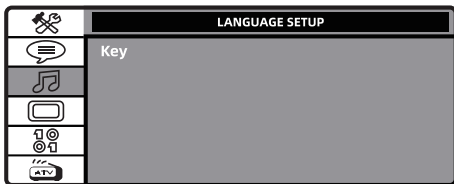

## AUDIO SETUP

 **[Key]** Adjusts the key of the audio from # to b.

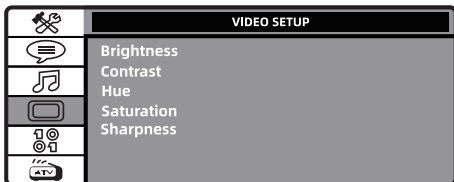

## VIDEO SETUP

 
**[Brightness]** Adjusts the screen brightness.

**[Contrast]** Adjusts the screen contrast.

**[Hue]** Adjusts the screen hue.

**[Saturation]** Adjusts the screen saturation.

**[Sharpness]** Adjusts the screen sharpness between 0-8.

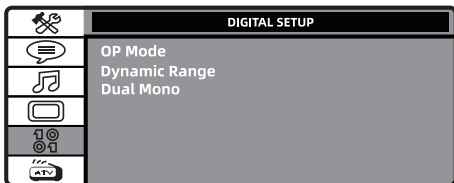

## DIGITAL SETUP

**[OP Mode]**

1. Line Out

Separate a soundtrack into two independent ones. This mode can be regarded as night mode. For playing AC-3 DVD discs, the volume will be lower than RF OUT.

2. RF Remod

Combine two soundtracks into one. This mode can be regarded as a day mode.

For DVD discs playing AC-3, the volume is higher than the Line Out.

**[Dynamic Range]** FULL, 6/8, 4/8, 2/8, OFF.

**[Dual Mono]** Set down Stereo, Mono L, Mono R, Mix-Mono.

# SPECIFICATIONS

## DIVX Playback

DIVX is a video (movies and video) recording format, which is commonly known as AVI.

DIVX disc features high quality that is comparable with the DVD's and larger capacity. For example:

| 1.5H movie  | In MPEG-1/2 format | In DivX         |
|-------------|--------------------|-----------------|
| DVD(MPEG-2) | About 1.5-2GB      | About 600-800MB |
| VCD(MPEG-1) | About 800MB-1G     | About 600-800MB |

## Difference among MPEG 1, MPEG 2 and MPEG 4

|             | MPEG 1                | MPEG 2   | MPEG 4                |
|-------------|-----------------------|----------|-----------------------|
| Speed(kb/s) | 1380kb/s<br>(352*288) | 6500kb/s | 8800kb/s<br>(720*576) |
| Quality     | Good                  | Excelled | Perfect               |
| Hardware    | Low                   | Medium   | High                  |

## Supported format for different files

| File            | Supported Format                                                |
|-----------------|-----------------------------------------------------------------|
| Compatible Disc | CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW                      |
| Audio           | MP3, WMA, OGG, AAC (Bit rates: 32-192kbps)                      |
| Video           | AVI, MPG, MP4, VOB, FLV, RMVB Resolution must be within 720*576 |
| Picture         | JPG                                                             |
| E-book          | TXT (Code: ANSI)                                                |

## Specification

|                    |                                           |
|--------------------|-------------------------------------------|
| Compatible DISC    | CD,DVD,CD-R(RW),DVD±R,DVD±RW,VCD SVCD(RW) |
| Frequency response | 20HZ to 20KHZ                             |
| Video output       | 1 Vp-p/5 Ohm unbalanced                   |
| Audio output       | 1.4 Vrms/10 kohm                          |
| Dynamic range      | Better than 85dB                          |
| Laser              | Semiconductor laser,Waver length:650      |
| Power source       | DC9-12V 1A                                |
| Battery Type       | Li polymer                                |

## TROUBLESHOOTING

Before contacting the customer service,please kindly check by yourself with the following chart.

| Trouble shooting                   | Solution                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The player can't read discs</b> | <ul style="list-style-type: none"><li>• Please clean the laser and DVDs with the alcohol first.(P2)</li><li>• Ensure the disc is in the right format for our DVD player.Our player doesn't support Dolby,pirate,burnt and blu rays DVDs.</li><li>• Find your product order and email to "Contact seller"<br/><b>(<a href="mailto:help@pofotovip.com">help@pofotovip.com</a>)</b></li></ul> |

|                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>The player doesn't work</b></p>                        | <ul style="list-style-type: none"> <li>• Make sure the power switch has been set to the "ON" position</li> <li>• Check connections to the AC adaptor or battery pack.</li> <li>• Check the status of the indicator light Under the premise of power connection, if it's on, there is a problem with the motherboard; if it's off, there is a problem with the motherboard or power adapter</li> <li>• Find your product order and email to "Contact seller"<br/>(<a href="mailto:help@pofotovip.com">help@pofotovip.com</a>)</li> </ul> |
| <p><b>Picture is distorted</b></p>                           | <ul style="list-style-type: none"> <li>• The disc might be damaged. Try another disc</li> <li>• It is normal for some distortion to appear during forward or reverse scanning</li> </ul>                                                                                                                                                                                                                                                                                                                                                |
| <p><b>The player doesn't read MP4 on the USB or Card</b></p> | <p>DVD player supports MP4 files in your USB Drive/ Card, but you need to convert the formats first. You can download a converter FormatFactory, to complete the conversion.</p> <p>Any questions please contact customer service for more help.<br/>(<a href="mailto:help@pofotovip.com">help@pofotovip.com</a>)</p>                                                                                                                                                                                                                   |
| <p><b>Remote controller doesn't work</b></p>                 | <ul style="list-style-type: none"> <li>• Replace the battery (AAA battery)</li> <li>• All buttons fail: A problem with remote controller or receiver</li> <li>• Individual buttons fail: Find your product order and email to "Contact seller"<br/>(<a href="mailto:help@pofotovip.com">help@pofotovip.com</a>)</li> <li>• Note: The remote controller needs to be aimed directly at the front of the Video Player, within 8 m and 30 degrees (P7)</li> </ul>                                                                           |

|                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>The player sound is too low.</b></p>  | <ul style="list-style-type: none"> <li>• Check that the two speakers of the player are working properly,cover one speaker with your hand,and check if the other speaker is sounding</li> <li>• Check whether the disc you put in meets the specifications(P14 ).Our player does not support DTS,which is the audio track of Dolby Disc.Please try another disc(not pirate,burnt,Dolby and Blu-ray discs)to hear whether it will play louder</li> </ul> |
| <p><b>No sound or distorted sound</b></p>   | <ul style="list-style-type: none"> <li>• When headphones are connected, the speakers turn off. Make sure that the DVD is correctly placed and that all cables are securely connected to the appropriate jacks.</li> <li>• Try increasing the volume to 10, and check that "Mute" is enabled.</li> <li>• Check the file format, whether the device supports audio files, and whether the file format is complete and undamaged.</li> </ul>              |
| <p><b>Can't advance through a movie</b></p> | <p>You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.</p>                                                                                                                                                                                                                                                                           |
| <p><b>Other problem</b></p>                 | <p>Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, unplug and replug the power supply. If the problem recurs, disconnect the device from the mains and contact customer service or a repair store.</p>                                                                                                                                                                                   |

# WARRANTY

Our company provides customers with a warrant of **24 MONTHS** from the date of purchase.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at [help@pofotovip.com](mailto:help@pofotovip.com)

 
## WARRANTY EXCLUSION

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
  - Incorrect voltage.
  - Accidents (including liquid or moisture damage)
  - Misuse or abuse of the product
  - Faulty or improper installation
  - Main supply problems including power spikes or lighting damage
  - Infestation by insects
  - Tampering or modification of the product by unauthorized service personnel
  - Exposure to abnormally corrosive materials
  - Insertion of foreign objects into the unit
  - Used with accessories not pre-approved

## Warning

- **English:** Please do not expose the machine to the sun directly or close to the fire, it may change the shape of the machine and the color of the display. It is normal that the machine goes hot after using for a period of time.
- **French:** Veuillez ne pas exposer la machine directement au soleil ou près d'un feu, cela pourrait déformer la machine et altérer la couleur de l'écran. Il est normal que la machine chauffe après une certaine période d'utilisation.
- **German:** Bitte setzen Sie die Maschine nicht direktem Sonnenlicht oder Feuer aus, da dies die Form der Maschine und die Farbe des Displays verändern kann. Es ist normal, dass die Maschine nach einer gewissen Nutzungsdauer heiß wird.
- **Spanish:** Por favor, no exponga la máquina directamente al sol ni cerca del fuego, ya que podría deformarse y cambiar el color de la pantalla. Es normal que la máquina se caliente después de un tiempo de uso.
- **Italian:** Si prega di non esporre la macchina direttamente al sole o vicino al fuoco, potrebbe deformarsi e cambiare il colore del display. È normale che la macchina si riscaldi dopo un periodo di utilizzo.
- **Japanese:** 機械を直射日光や火のそばに置かないでください。機械の形状やディスプレイの色が変わる可能性があります。使用後に機械が熱くなるのは正常です。

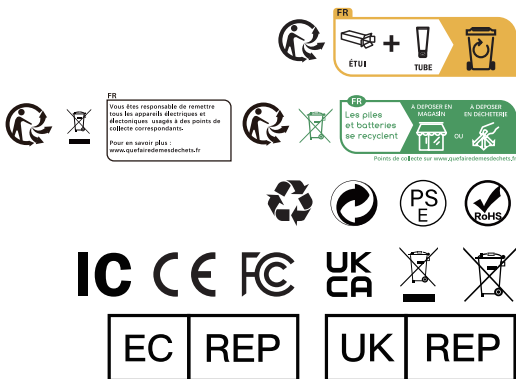

Tiger-Zhou UG (haftungsbeschränkt)  
Leipzig HRB 37896 Shukowstr. 6 04347  
Leipzig, Sachsen, Deutschland  
Tiger-Zhou@web.de  
+4915216791470

Sea&Mew Accounting Ltd  
Electric Avenue Vision 25, London,  
Enfield EN3 7GD  
info@seamew.net  
+447399648608

