



Model: DY227

BAZOOKA SPEAKER



Wireless
connection



1800 mA



Memorycard



Microphone



TF PLAYER



P.M.P.O



FM Tuner



Synchronized
LED Lights



Cautions

1) It is not allowed to connect the external amplifier with the inlet of the speaker for avoiding to damage your speaker system!



2) There's electricity in the speaker and is danger, please do not open the rear cover for avoiding electric shock and influencing warranty!



3) Avoid intensive sunlight, rain and water, do not keep it under hot and damp environment for a long period.



4) Do not put fluid such as vase on the speaker



5) Please unplug, power supply, if it won't be used for a long period



6) Packaging List: Speaker
Power wire User's Manual



Please charge the machine before use if it is not used for over 1 month

Trouble Shooting

● No electricity

First check that the power switch is on (switch is in a state of "ON" to open)
If the above situation, Please turn off the power on Connect the power cord to the machine after charging, or plugged in, let the machine work while charging

● No sound when playing music

A, please check whether the RCA audio line right connected to the machine and the sound source.

B, please check whether the volume was kept to a minimum.

C, whether it is right choice signal source.

D, please check your audio source if there is a fault.

● Memory card input can not read the mobile disk

A, please check your mobile plate is connected with the machine.

B, please check your mobile disk for digital music

C, please check your mobile disk if there is a fault

D. remove the U disk inserted again.


E. first insert U disk boot after normal again.

● Noise of speaker

Speaker has the property of low noise, sometimes the background noise of the music player and computer sound card is several times higher than that of speaker, therefore, please unplug the audio wire of the speaker when check, and the noise of the speaker shall not hear at 0.5m away.

● Antimagnetic of speaker


The speaker adapts strong magnetic speaker, it is possible to cause magnetic field interrupt or magnetization if put the speaker close to the monitor. Then you should

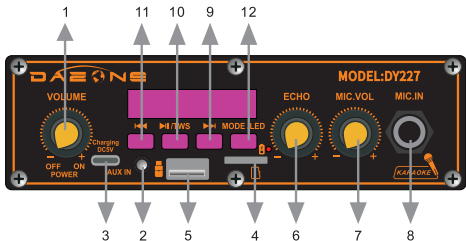

TWS OPERATION

You can connect these two machines through TWS function when you have two machines with same model.

1. Connect one machine to the other machine via Bt, the current machine will be set as the host.
2. Turn on the other machine switch to BT mode, press and hold the "TWS" button on the screen and then the two machines will be connected automatically will show that the connection is complete.
3. Play, pause, next track and previous track control can be carried out by two units. Turn the volume knob on each unit to adjust the volume individually.
4. When to exit the TWS function, press and hold the TWS button on the second unit to disconnect.

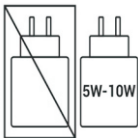

The power delivered by the charger must be between min 5 Watts required by the radio equipment, and max 10 Watts in order to achieve the maximum charging speed.

1. Power ON/OFF / Volume +/- Control
2. AUX Input
3. External DC5V charging port
4. Memory Card Input
5. Memory Card Input
6. ECHO +/- Control
7. Mic volume +/- control
8. Mic input
9. Short press to the next song.
10. Short press to PLAY/PAUSE the music. In BT mode, long press to turn on or turn off TWS function.
11. Short press to the previous song.
12. Short press to the toggle mode. Long press to turn on/turn off the lights

In radio mode:

- * Long press ◀◀ button to scan the previous radio station automatically
- * Short press ◀◀ button to fine tune the current radio station forward
- * Long press ▶▶ button to scan the next radio station automatically
- * Short press ▶▶ button to fine tune the current radio station backward
- * Long press ▶|| buttons to scan and store the whole band radio automatically
- * Press ▶|| buttons continuously to switch and select each radio station

Charging indicator:

- Please plug in the power cable to charge the speaker and the charge indicator is on at the same time.
- Please power off the speaker while it's charging.
- Charge time is about 4 hours.
- 5mA charging current to protect the battery
- Please plug in the power cable to power on the speaker if the battery is damaged.