 


Reemix

# USER MANUAL

# CAN OPENER

Model: GCO001

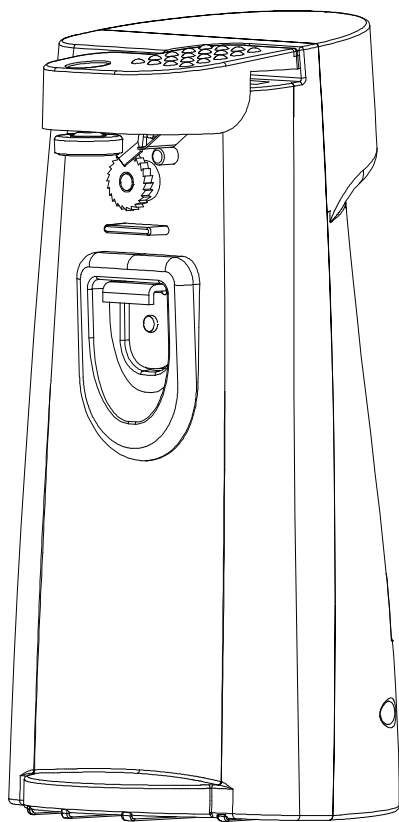

120V~,60Hz 1.5A 70W

**Operating and Safety Instructions**

**FOR INDOOR HOUSEHOLD USE ONLY**

# IMPORTANT SAFEGUARDS

## **Definitions**

- Whenever used, the following identify safety and property damage messages and designate a level of hazard seriousness.
- This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER:**

- Indicates a hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

## **WARNING:**

- Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

## **CAUTION:**

- Indicates a hazardous situation, which, if not avoided, may result in minor/moderate injury.

## **NOTICE:**

- Addresses practices not related to personal injury, such as product and/or property damage.

When using electrical appliances, always follow basic safety precautions, including the following:

## **READ ALL INSTRUCTIONS BEFORE USE**

**⚠ WARNING-- To reduce the risk of fire, electric shock, or serious personal injury:**

- To protect against risk of electrical shock do not put plug or body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.

• Do not use outdoors

Do not let cord hang over edge of table or counter.

• Do not use the product to open pressurized (aerosol-type) cans or bottles.

as an explosion hazard exists.

Do not open cans of flammable liquids such as lighter fluids.

Do not leave the product unattended when it is in use.

• Keep hair, hands, fingers, or any other body parts from entangling with the moving parts of the product while the product is operating.

• Do not drop or insert objects into the openings of the product (except as instructed for scissors); do not block the openings of the product.

- Do not plug or unplug the product into/from the electrical outlet with a wet hand.
- Always place the product on a flat, level, stable surface.

## **SAVE THESE INSTRUCTIONS**

 
### **⚠ WARNING--**

This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

## **KNOW YOUR APPLIANCE PARTS**

### **SAVE THESE INSTRUCTIONS** **FOR HOUSEHOLD USE ONLY**

1. Lever
2. Magnet
3. Blade
4. Drive Wheel
5. Bottle opener
6. Blade Sharpener
7. Cord Storage

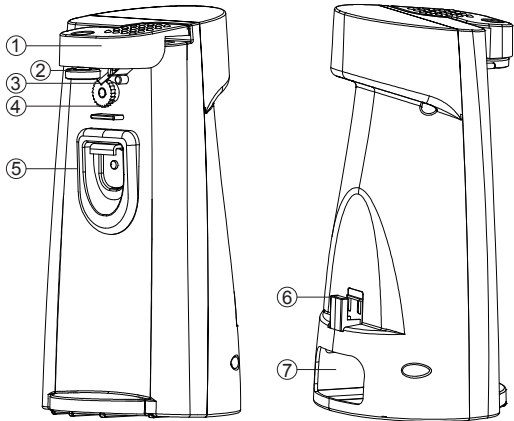

## BEFORE USING:

1. Carefully unpack Can Opener.
2. Wipe with a soft cloth or sponge to remove small particles collected during packing and handling.
3. Attach the magnetic part (used to hold the can in place when cutting) to the front panel of the lever by sliding it down over the 'hook', with the circular surface facing down. Press down firmly in place until top surface is flush with the lever.

## TO ASSEMBLE

**NOTICE:** Ensure the product is securely assembled before plugging it into an electrical outlet.

**⚠ WARNING: The Blade is sharp; handle with care.**

1. Place the product on a flat, level, stable surface and ensure the product is unplugged from the electrical outlet.
2. Insert the Lever/Blade Assembly into the Keyhole in the Motor Housing (see Fig. 1) and then slide the Magnet Assembly into the slot under the Lever until it snaps into place (see Fig. 2).

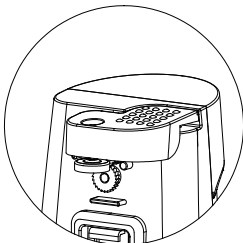 


Fig. 1

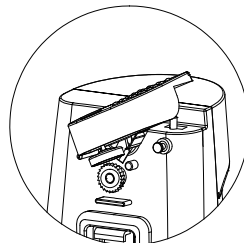 


Fig. 2

**⚠ WARNING:** Do not use this product to open cans of flammable materials.

3.Plug the product into a standard 120-volt AC electrical outlet.

4.Raise the Lever and align the rim of the can with the top of the Drive Wheel.

5.Push the Lever down until the Blade punctures the lid of the can and the Magnet attaches to the can(see Fig.3).

6.Push the Lever further down to activate the Drive Wheel.

7.When the can and lid have been separated, hold the can with one hand and raise the Lever with the other hand to remove the can.

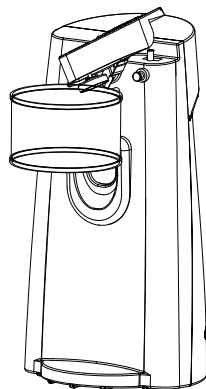 


Fig. 3

**NOTE:** To stop the product during the process, raise the Lever.

8.Carefully remove the lid from the Magnet.

**⚠ WARNING:** Can lids will be sharp; handle with care.

9. Unplug the product from the electrical outlet.

**⚠ WARNING:** Always unplug the product when not in use.

**CAUTION:** Do not place finger underneath the lever where the Cutting Blade and Geared Wheel are located; doing so may cause injury.

**CAUTION:** Never remove the magnet without first unplugging the cord and returning the lever to its flush, horizontal position.

## TO USE KNIFE/ SCISSORS SHARPENER

1. Place Knife Blade lightly in either left or right groove. Draw knife slowly toward you with a slow, even motion.
2. Place Blade in other groove and do the same. Repeat this alternating action 4 or 5 times, from one groove to the other until desired sharpness is achieved.
3. The Knife/Scissors Sharpener can also be used for sharpening scissors. A large groove at the side of the Sharpener is designed especially for scissors. Place one blade of the scissors in the groove, and then draw it toward you slowly and evenly, Repeat with the other Blade.(see Fig.4).

**SPECIAL ATTENTION:** Blades to be sharpened should be clean. Do not sharpen knives that have serrated blades.

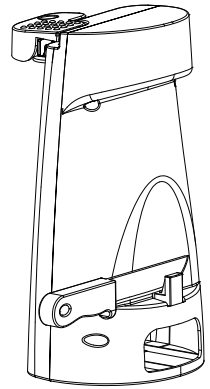 


Fig. 4

## TO USE BOTTLE OPENER

1. Unplug appliance from electrical socket.
2. Place Can Opener on a level surface. To steady, position on hand on the top of the Can Opener.
3. Place bottle cap edge under Opener Flange.

4. Apply pressure on bottle downward until bottle cap pops off.(see Fig.5).

**NOTE:** This bottle opener is not recommended for bottles having "Twist-Off" caps.

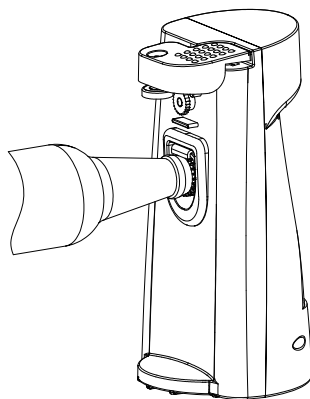 


Fig. 5

## CARE AND MAINTENANCE

**⚠ WARNING:** Always unplug the product from the electrical outlet before cleaning it.

**⚠ WARNING:** The Blade is sharp; handle with care.

- Remove the Lever/Blade Assembly from the Motor Housing, and then clean The Lever/Blade Assembly and the exterior of the Motor Housing with a soft, damp cloth and dry thoroughly.

**NOTICE:** Do not use abrasive cleaners, scouring pads, or a dishwasher to clean any part of the product.

- Push the Power Cord inside the Motor Housing before storing the product in a cool, dry place.

# HOUSEHOLD USE ONLY

**YUYAO HOLON ELECTRICAL APPLIANCE CO., LTD**

Add: SIBEI VILLAGE, SIMEN TOWN, YUYAO, NINGBO, ZHEJIANG,

Facebook Page: <https://www.facebook.com/Reemix.Official/>

Service: [support@reemixvip.com](mailto:support@reemixvip.com)

**Made In China**

