


1. Package Contents

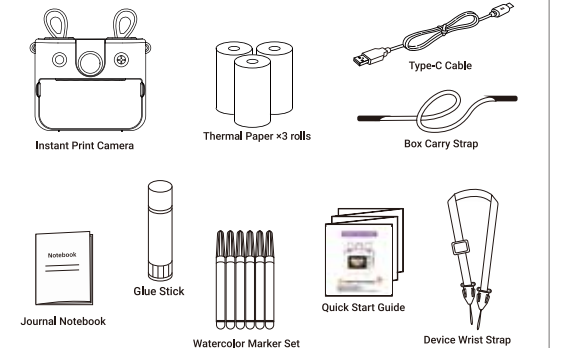


Images provided in this manual are for reference only and may not accurately reflect the actual product due to product updates.

2. Parts Description


A. Front View

- Decorative Ears
- Print Button
- Lanyard Hole
- Display Screen
- Camera (Rotatable 180° for selfies)
- Shutter Button
- Power/HOME Button (Press and hold for 3 seconds: Turn on/off)
- Up Button
- OK Button
- Down Button

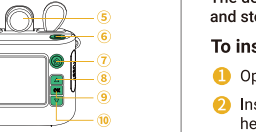


B. Rear View

- Fill Light
- Paper Outlet
- Cover Opening Slot
- Speaker Grille
- Camera (Rotatable 180°)
- Paper Compartment

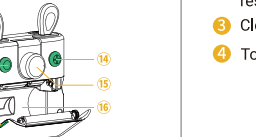

C. Side View

- MicroSD Card Slot
- USB-C Charging Port
- Reset Pinhole

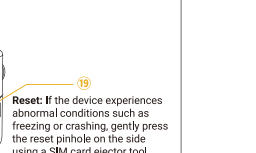


Reset: If the device experiences abnormal conditions such as freezing or crashing, gently press the reset pinhole on the side using a SIM card ejector tool.

3. Inserting the Memory Card


The device has limited built-in storage. Use a MicroSD card to record and store videos, photos, and MP3 files.

To insert the MicroSD card:


- Open the rubber port cover to access the card slot.
- Insert the card with gold contacts facing up. Push firmly until you hear an audible click. The card only fits one way - do not force it if resistance is felt.
- Close the rubber port cover.
- To eject: Gently push the card inward until it springs out.

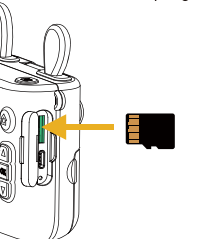


4. Thermal Paper Installation

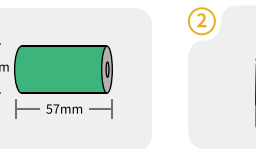


Paper Requirements:
Use thermal paper with diameter ≤ 30mm and width ≤ 57mm.

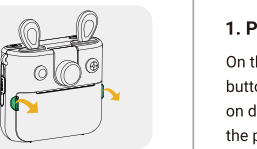

Open Compartment:
Press the cover slot and slide outward following arrow direction.

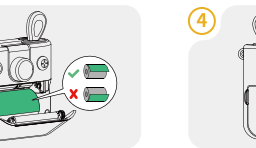

Insert Paper:
Place thermal paper with printing side (heat-sensitive coating) facing up into compartment.

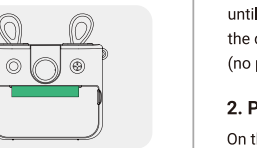


Feed Paper:
Pull paper end through outlet, extend ≈ 10mm beyond paper outlet, then close cover.

NOTE If prints are blank, verify paper orientation - heat-sensitive coating MUST face upward.

5. Print Function

1. Printing in Photo Mode

On the "📷" interface, press the top-left button "📄", when "📄" icon appears on display, instant print mode activates, the photo will automatically print after capturing.

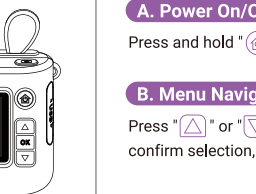


To exit print mode:

Press "📄" again until "📄" icon disappears from display, the device will switch to photo-only mode (no printing).

2. Printing in Gallery Mode

On the "🖼️" interface, select target photo, Press "📄" first, then press "OK" to print selected photo.

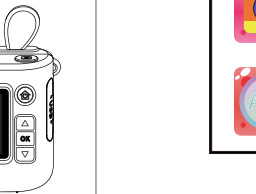


6. Screen Menu & Button Controls

A. Power On/Off

Press and hold "🏠" for 3 seconds.

B. Menu Navigation

Press "⬆️" or "⬆️" to navigate menu options, press "OK" to confirm selection, press "🏠" to return to menu.

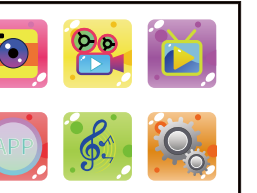

C. Photo/Selfie Mode

- Select "📷" function (rotate camera 180° to activate selfie mode).
- Press "📷" or "OK" to capture image.
- Press "⬆️" and "⬆️" to cycle through settings: Timer/Burst Shot/Frames/Filters.
- Long press "⬆️" to zoom in or "⬆️" to zoom out. In photo printing mode, after the countdown finishes, pressing the up or down button will cancel the printing.
- Press "🏠" to return to previous page.

Fill Light Toggle (Shortcut): press and hold "OK" to turn fill light ON/OFF.

D. Video Recording

- Select "📹" mode, press "📷" or "OK" to start recording.
- Rotate lens 180° to switch to selfie video mode.
- Press "📷" or "OK" again to stop recording.

Fill Light Toggle (Shortcut): press and hold "OK" to turn fill light ON/OFF.

E. Gallery


- Select "🖼️" mode, press "⬆️" or "⬆️" to review saved photos/videos.
- Press "OK" to play/pause video.
- Press "📄" to print photo.
- Press "📷" to delete: press "⬆️" or "⬆️" to select: Delete Current / Delete All / Cancel, press "OK" to confirm selection.

Supported formats: AVI (video), JPG (photo)

F. App Connection

1. Download App

Select "📱" mode, Scan the QR code or search for "Snap&Tag" in your app store to install the application.

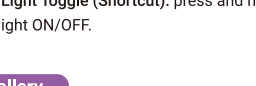

2. App Connection

- Enable Bluetooth on your phone.
- Open the "Snap & Tag" app, tap the top-right corner icon to select your device for Bluetooth pairing.

G. MP3 Player

- Select "🎵" mode, press "⬆️" or "⬆️" to skip tracks.
- Press "OK" to play/pause music.
- Press and hold "⬆️" or "⬆️" to adjust volume.

Music Download: Copy MP3 files to [MP3] folder on SD card. See section 7: PC Connection for details.

WARRANTY CARD

Scan code to register - Free 6 months warranty!



If the product has quality problems or any suggestions, please contact us promptly through the after-sales service e-mail, we will give you a satisfactory answer.

support@orgsta.com

Return and exchange instructions:

Returns and exchanges please ensure that the goods are not affect the sale; we will provide you with as possible after receiving the request.




H. System Settings

1. Select " " to configure:
Post-capture Printing / Print Density / Print Mode / Photo Size / Video Format / Date Stamp / Language / Volume / Factory Reset.

Example: Enabling Fill Light

1. Select " " mode.
2. Press " " to locate "Fill light" option.
3. Press "OK" to access fill light settings.
4. Press " " to select "ON".
5. Press "OK" to confirm settings.
6. Press " " to return to Home.


NOTE: When fill light is active, " " indicator will appear in photo/video UI. Automatically activates during capture and deactivates when recording stops.

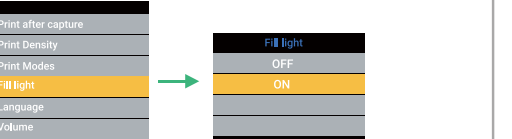

7. PC Connection


1. Insert MicroSD card and power on device.
2. Verify "SD" icon appears on display.
3. Connect camera to computer via USB cable.
4. Open "USB Drive (E:)" on computer to access folders: MP3 / PHOTO / VIDEO

For PHOTO & VIDEO :
Copy photos/videos from camera to computer for backup.
For MP3:
Copy MP3 format music from computer to this folder.
Camera can play these MP3 files.

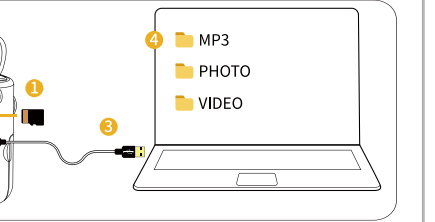

8. Charging Instructions

- Charge promptly when battery is low.
- Inspect cable for damage; discontinue use if damaged.
- The battery is non-replaceable and non-removable.
- Do not charge on textiles (e.g. beds, sofas).
- Disconnect charger after full charge.
- Adult supervision required during charging.

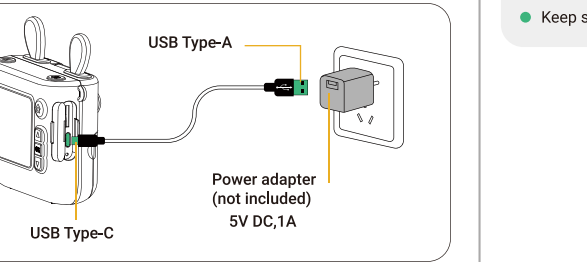

9. Safety Warnings

- For ages 3+
- Adult supervision required under age 6.
- Do not allow children/animals to chew on the device.
- Never point at eyes or put in mouth.
- Avoid direct eye exposure to fill light.
- Keep away from open flames.
- Do not place near heat sources.
- Keep small parts away from children under 3.

10. Print Head Maintenance

Clean print head immediately if:

1. Print output is blurred.
2. Vertical misalignment occurs.
3. Abnormal paper feeding noise.

Cleaning procedure:

1. Turn off the printer power, open the top cover, and remove any paper if present.
2. If printing has just been completed, wait for the print head to cool down completely.
3. Use a soft cotton cloth dipped in anhydrous ethanol (which should be wrung out) to wipe off dust and stains from the surface of the print head's thermal sheet.
4. After the anhydrous ethanol has completely evaporated, close the cover and restart the printer to test printing.

11. Safety Certification



FCC ID: 2BCBZ-Q2 CE ID: 25EP05239E05
UKCA ID:*****

FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CE STATEMENT: This product complies with the requirements of the EU RED Directive 2014/53/EU. Operating frequency range: 2402-2480 MHz, Maximum RF power: -3.74 dBm.

UKCA STATEMENT: This product complies with the UK Radio Equipment Regulations SI 2017 No. 1206. Interference with other equipment should be avoided during use.

Quick Start Guide



Q2 Instant Print Camera

Thank you for choosing our product.
Please read this manual carefully before use.
User Age: Children over 3 years old.
Children under 6 years old should be used under adult supervision.