



Egg Cooking Mode:

Room Temp ↔ Refrigerated
Press and hold **ALL** until the
screen shows F1-F3 mode

Room Temp Mode "Cx" (x=1-3)

Refrigerated Mode "Fx" (x=1-3)

NOTE:

1. Our egg cooker:

- You need to turn on the switch at the back.



- Choose the desired doneness.
- Press the "OK" button to start it successfully.



2. If you find any damage to the products, missing accessories, or inability to start when using any items purchased from us here, please be sure to contact us via email at susteas.shop@gmail.com, and we will address any issues you encounter as soon as we see your message.

SUSTEAS THREE-ZONE EGG COOKER

Quick Start Guide



susteas.shop@gmail.com



Step1:
Add 60ml Water



Step2:
Insert Egg Tray



Step3:
Insert eggs into slots
- Select cook level
Press "OK" to Start

(C1:Soft C2:Medium C3:Hard-boiled)



Step4:
Voice Alerts When Done



Voice Broadcast Function:

Press and Hold "OK"
to Enable or Disable
Audio Prompts



Timing Function:

1. Select zone & egg doneness
2. Turn knob clockwise or counterclockwise
→ Timer on left flashes
3. Press "OK" to Start

Note: 1-9 = 0.5 hr/step | 10-24 = 1 hr/step