

Big Button Corded Phone Instruction Manual



**EASY TO
READ BIG
BUTTONS**

**9 GROUPS OF
SPEED DIAL
MEMORY**

**ADJUSTABLE
VOLUME**

**DESK/WALL
MOUNTABLE**

**HANDS FREE
SPEAKERPHONE**



Big Button Corded Phone

FEATURE LIST:

- Hands-free Speakerphone.
- Handset Volume Control.
- Ringer Volume Control.
- 9 Groups Of Speed Dial Memory.
- Last Number Redial.
- Led In Use Indicator.
- Flash Function.
- 10 groups of two-button memories
- Desktop/Wall Mounting.

INSTALLATION

1. Connect the handset with the jack on the left side of the phone base by the coiled cord.
2. Connect the jack on the back of the phone base with your wall jack by the straight phone line.

Please pick up the handset and you will hear the dial tone, that means the phone is ready for use.

Please Note: This phone is powered by the telephone line. It will work after you complete the above 2 steps. No need any batteries or DC power. It still works when power outage in the house.

OPERATION

RINGER VOLUME OFF/H/L SWITCH



To control the volume of the ringer by switching the **RINGER** button on the back of the phone base. The ringer can be turned off.

HANDSET VOLUME HI/LO SWITCH

To control the volume of the handset by the **HANDSET VOLUME** button on the back of the phone base.

IN USE INDICATOR

Led will be bright when the phone is in use.

RECEIVING A CALL

1. Pick up the handset or press “**SPEAKER**” button when the phone rings.
2. When you finish the phone call, put the handset back on the phone base or press “**SPEAKER**” button again.

MAKING A CALL

1. Pick up the handset or press “**SPEAKER**” button to hear a dialing tone.
2. Dial the number you want to call.
3. Hang up the handset or press “**SPEAKER**” button again if you finish the conversation.



LAST NUMBER REDIAL FUNCTION

Pick up the handset or press the “**SPEAKER**” button, then press “**REDIAL**” button when you hear the dialing tone, the last phone number will be dialed out automatically.

FLASH FUNCTION

-Press and release **FLASH** button.

-Dial number to which call intended.

-When the party answers, announce the call and hang up

If you receive a busy or no answer.

Press and release the **FLASH** button to reconnect the call.

TO STORE PHONE NUMBERS FOR SPEED DIAL

1. Pick up the handset, press **STORE** button and then enter the phone number you want to store.
2. Press **STORE** button again and then press one of (1-9 photo memories) or (0-9) buttons for number location.
3. Replace the handset. When you have finished the above steps, this phone number will have been stored.

TO SPEED DIAL FROM STORED NUMBER

1. Pick up handset (or press **SPEAKER** button).
2. Press the correct memory location (1-9 photo memories)



Then the telephone number will be dialed out automatically.

3. Press AUTO and press the correct memory location (0-9)

Then the telephone number will be dialed out automatically.

WALL MOUNTABLE

When use it as wall-mounted, put the handset aside, slide the adjustable hook upwards to remove it from the slot. Rotate the adjustable hook by 180 degrees, then replace the adjustable hook into the slot until it locks into position. The handset will can stay on the phone base.

IMPORTANT NOTES

Telephone connections.

The voltage on the network is classified as TNV-3

(Telecommunication Network Voltages, as defined in the standard EN60950). Following a power cut, the call in progress as well as the date and time settings is lost.

Safety precautions

- Do not allow the handset to come into contact with liquids or moisture.
- Do not open the handset or base unit. This could expose you to high voltages.






- There is a slight chance that your product could be damaged by an electrical storm. We recommend that you unplug the product from the telephone socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- It is recommended that this product is not used near intensive care medical equipment or by persons with pacemakers. You'd better keep the phone and pacemaker at least 10 inch when operating this phone.
- This product can interfere with electrical equipment such as answering machine, television, radio and computers if placed too close. We recommend that you position the base unit at least one meter from such appliances.
- Canadian ISED and FCC Compliance Statements:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning! This Class B digital apparatus complies with Canadian ICES-003.



Installation Drawing Instructions

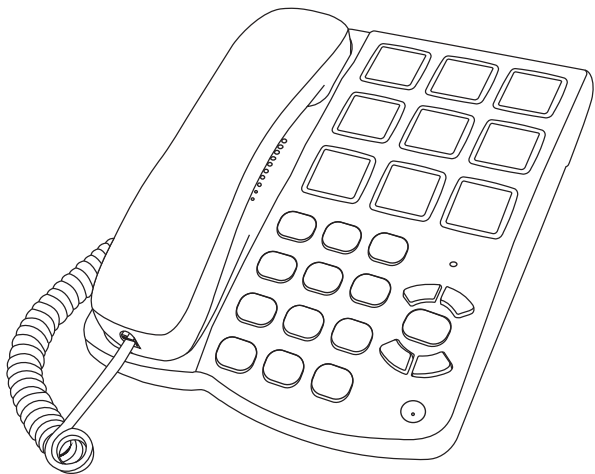


MODEL:LD-858HF

1



 
2

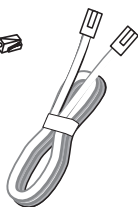


ACCESSORIES:

- 1) coiled cord – connect handset with the base.
- 2) Line cord--connect base to the wall outlet.


 
WALL MOUNT POSITION.

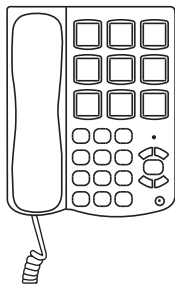


DESK POSITION.

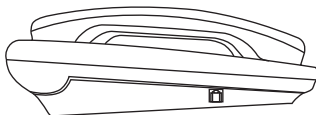 


SIDE VIEW OF BASE

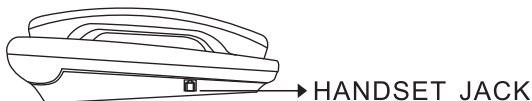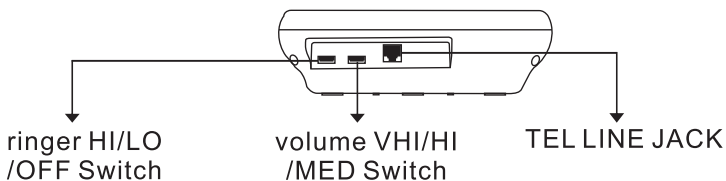  

DESCRIPTION OF COMPONENTS

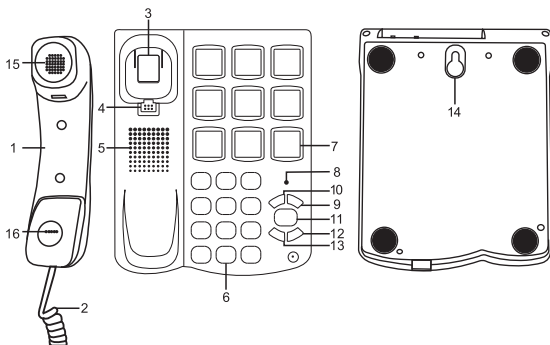 

1	HANDSET	9	STORE
2	HANDSET CORD	10	AUTO
3	HOOK SWITCH	11	SPEAKER
4	WALL MOUNTABLE	12	REDIAL
5	SPEAKER	13	FLASH
6	NUMERIC KEYPAD	14	WALL MOUNTABLE HOLE
7	9 single key memories	15	HIGH FIDELITY RECEIVER
8	IN USE	16	MICROPHONE

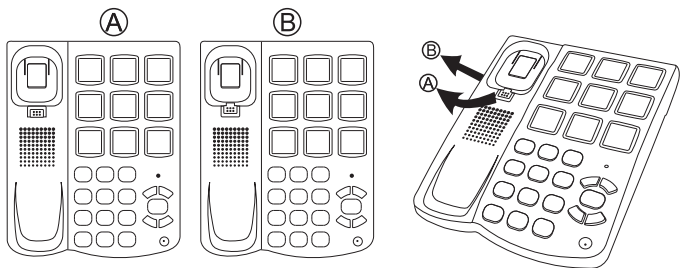 

A) Tongue position for desk use.

B) Tongue position for wall mount.

From (A) to (B) or (B) to (A), remove the tongue and turn 180° degrees to install to the wall button

INSTALLATION:

To attach cord

Install handset coiled cord

 
Use coiled cord to insert the modular , Plug into the cradle jack on the bottom of the cradle ,and Plug the headset jack on the bottom of headset(As shown).




COILED CORD

For desk Top USE:

- Use straight long cord
- Simple insert either plug into the modular jack in the telephone base(On bottom)
- Tuck cord into the prefitted slot
- Insert the other end into the wall jack.(Base Board jack)

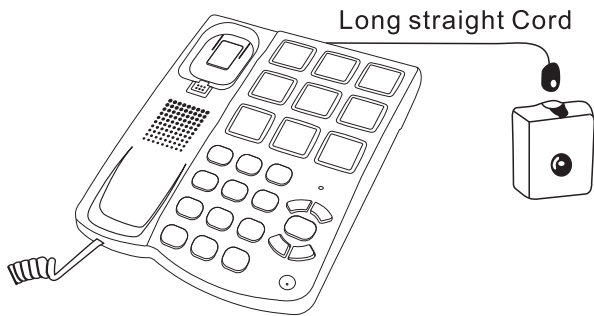

Telephone wall use

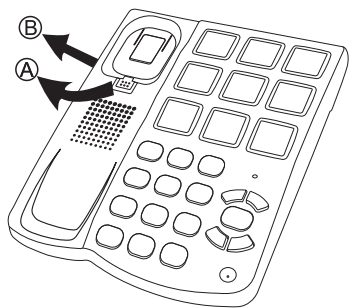 

Adjust the wall hanging button to position(B),
and the phone can be hung on the wall for use