


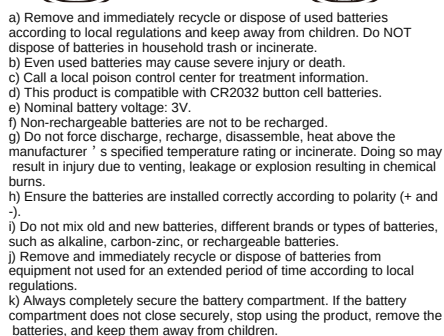

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

It is important to note that this equipment does not create, use, or emit radio frequency energy and therefore does not require a license under the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The user is cautioned that any changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the warranty.

- "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- "Even used batteries may cause severe injury or death."
- "Call a local poison control center for treatment information."
- "The compatible battery type: CR2032".
- "The nominal battery voltage: DC 3V"
- "Non-rechargeable batteries are not to be recharged."
- "Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."
- "Ensure the batteries are installed correctly according to polarity (+ and -)."
- "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

正面



As shown in Figure ①, take out the insulation sheet as per the arrow direction.

As shown in Figure ②, use the crowdriver and put the screws into the holes on the back of the remote control and then tighten the screw clockwise to fix the remote control battery cover.



As shown in Figure ①, take out the battery cover as per the arrow direction;

As shown in Figure ②, place the button battery with the positive side facing up (shown in Figure A) flatly into the round shape of the remote control.

As shown in Figure ③, fit the battery cover to the groove on the back of the remote control ;

As shown in Figure ④, use the screwdriver and place the screws in the holes on the back of the remote control and then tighten the screw clockwise to fix the remote control battery cover.



反面

材质：70克复印纸

