



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

CORDLESS Electric Food Warming Tray



Model No.

486000

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- **WARNING: Misuse of the appliance could cause personal injury.**



HEALTH AND SAFETY

- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance has an element which may be subject to residual heat after use.
- Keep the appliance and its cord out of reach of children.
- This appliance is not intended to be operated on an extension cable or by means of an external timer or a separate remote control system.
- Do not place the extension cord in a position where it can be pulled by children or animals or tripped over.



HEALTH AND SAFETY

LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat heat resistant surface.
- Do not use the appliance outdoors or near water.
- **IMPORTANT! Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.**
- **WARNING! Do not use underneath cupboards.**

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Never leave the appliance connected to the socket outlet when not in use..
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

PERSONAL SAFETY

- **WARNING! Do not touch the top of the appliance or other hot parts during or after use, use handles. The heating element surface is subject to residual heat after use.**
- To protect against the risk of electrical shock do not put appliance in water or in any other liquid.
- Do not touch hot surfaces. Use oven gloves or a cloth when moving.

OTHER SAFETY CONSIDERATIONS

- Do not switch on the appliance when it is upside down or laid on it's side.
- Do not operate with a damaged cordset or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.



HEALTH AND SAFETY



**CAUTION!
HOT
SURFACE!**

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.


ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current). Should the fuse in the mains plug require changing, replace it with a fuse of the same rating.

WARNING: This appliance must be earthed.



PRODUCT OVERVIEW

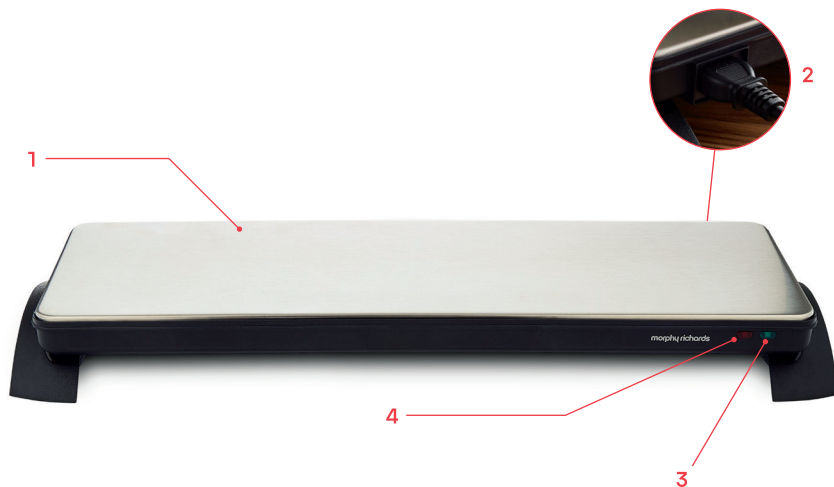

- | | |
|-----------------|---------------------------------|
| 1. Heated Tray | 3. Green ready to use indicator |
| 2. Power socket | 4. Red heating indicator |

BEFORE FIRST USE

Before first use, remove all packaging.

Note: There may be a faint smell when using the Warming Tray for the first time but this is quite normal and will fade with use.



USING YOUR WARMING TRAY

WARNING! The appliance will get hot during use.

1. Place the Heated Tray on a firm, flat surface that can withstand temperatures of up to 60 degrees Centigrade for extended periods.
2. Plug the cordset into the Warming Tray, ensuring it is **FIRMLY** in place. Connect the plug to the mains power supply.
3. The red indicator light (4) will illuminate and the tray will start heating up.
4. When the tray reaches the optimum temperature of 130°C, the green indicator light (3) will illuminate (the red indicator also stays lit). This takes approximately 8-10 mins. The tray can be unplugged at this point and will stay hot for up to 1 hour.
5. While the tray can be used in corded or cordless mode, it is not recommended to keep the tray plugged in for more than 2 hours in any 6 hours period.
6. After use, unplug the appliance from the mains power supply and allow to cool thoroughly before storing.

WARNING: Never attempt to move the heated tray while the appliance is still hot or if food is still on its surface. To do so poses a scalding risk.

Note:

- The warming tray can be used outdoors in cordless mode in dry weather.
- Food warmed on the tray **MUST** be pre-cooked and already hot as this appliance is not designed for heating from cold or frozen.
- Any meat dishes must be thoroughly cooked first. Do not place raw meat on the warming tray.
- When you have finished using the appliance, unplug from the mains power supply and allow to cool for approximately 2 hours before storing.



USING YOUR WARMING TRAY

- Any containers used must be able to withstand 150°C for extended periods. Most metal or ceramic containers will be suitable. Some plastic trays may be unsuitable for use with this appliance. Always check the label or information supplied with plastic trays for temperature limits.
- To keep the tray surface clean and protected from spills, put a layer of paper kitchen towel on the surface before placing containers of food on it. Don't use tin foil to line the whole cooking surface, as it interferes with the temperature control system.

CLEANING AND MAINTENANCE

- Clean the heating surface with a soft cloth moistened in a mild detergent solution. Dry with paper kitchen towel.
- Do not use any abrasive cleaning agents or allow water to spill or seep into the appliance.
- Never immerse the warming tray or cordset in water or any other liquid.
- Store in a cool, dry place.

CAUTION: Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.



TROUBLESHOOTING

Problem	Solution
No Power.	Try another socket.
	Ensure the cordset is attached securely to the warming tray.
	Change the fuse in the plug.
Indicator lights aren't on.	Ensure the cordset is attached securely to the warming tray.

SPARE PARTS

Part Number	Description	Qty per Product	Key Number
32000	Cordset	1	6



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



WT486000MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

