

PRECAUTIONS

- Do not use any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened with a mild soap and water solution.
- Must escape from burning and impact.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- If the sound becomes low or distorted, replace all the batteries with new. Do not use old and new batteries together.
- If the set is not used for a long time, remove all the batteries to prevent possible battery leakage

SPECIFICATIONS

FM 1: 87-108MHZ

FM 2: 64-87MHZ

AM : 522-1620KHZ

SW1-9: 4.75-22.0MHZ

DC IN: 5V/300mA

DC : 3V (UM3 AA 1.5V X2)

Skype: radiwow

TikTok: XHDATAradio

YouTube: Xhdata Radio

Facebook: Xhdata Radios

Web: www.xhdata.com.cn

WhatsApp: +86 18025193267

E-mail: xhdatacn@gmail.com




MADE IN CHINA

XHDATA

D-219


Operating Manual

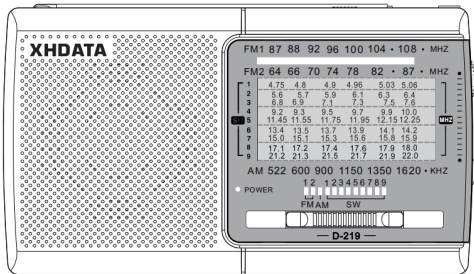

FM1-2/AM/SW1-9

11 BANDS WORLD RECEIVER

FUNCTION OF KEYS

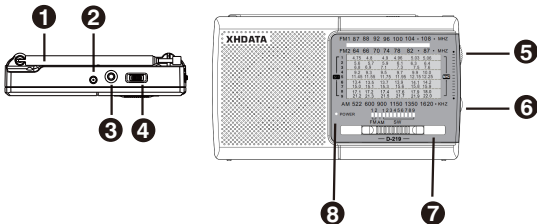

- 1** Antenna
- 2** Dc jack (5V)
- 3** Earphone jack
- 4** Power on/off
- 5** Tuning knob
- 6** Volume button
- 7** Band selector(FM/AM/SW1-9)
- 8** Power light

USING THE RADIO

1. POWER ON/OFF .VOLUME

- Turn the radio on by switch the power on/off switch (4).
- Use the volume knob(6)to adjust the volume.

2. LISTEN TO FM

- Select the FM band by using the band selector switch(7).
- Use the tuning knob(5),tune the radio to the desired frequency.

3. LISTEN TO AM/SW1-9

- Select the desired band(AM/SW1-9) by using the band selector switch(7).
- Turn the tuning knob(5) to the desired frequency.

4. ANTENNA

- For AW,the receiver uses the internal antenna for the AM band.
- Rotate the reveiver for best reception.
- For FM/SW,fully extend the antenna (1) and rotate it for the best reception.