



EN


OPERATOR'S MANUAL

Xtream Cordless Pressure Washer

20V MAX* | 3.0 Ah | 350 PSI

Model X20-PRESSURE-3A

Form No. ASP-X20-PRESSURE-3A-880E-M (MSTR)

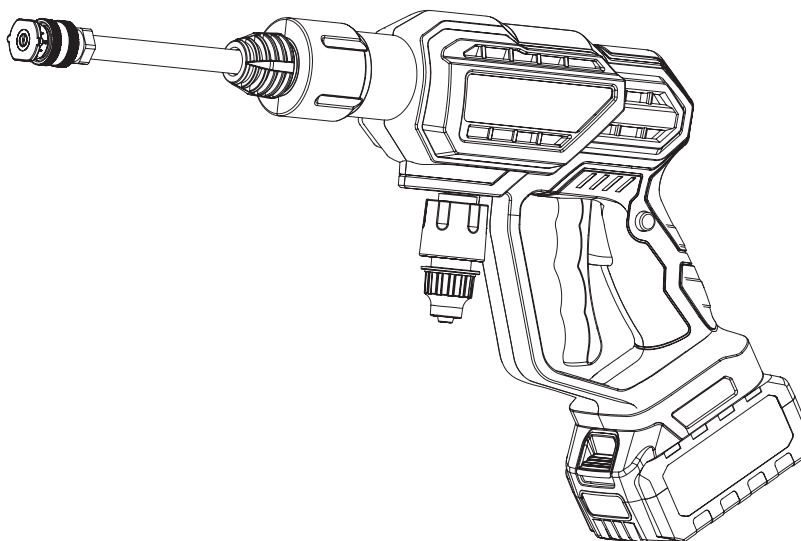**THANK YOU FOR YOUR PURCHASE!****SCAN
REGISTER
ONLINE TODAY**

- ✓ ACTIVATE YOUR **1 YEAR WARRANTY**
- ✓ RECEIVE **90 DAYS BONUS COVERAGE**
- ✓ VISIT **SHOPJOE.COM/REGISTER**

Place UPC sticker here

Failure to register your product purchase will not diminish your warranty rights. For more information visit shopjoe.com



UPGRADE YOUR COVERAGE AT SHOPJOE.COM/REGISTER

FOR UP TO 2, 3, OR 4 YEARS OF TOTAL TOOL COVERAGE

When we say we stand behind our product, we mean it! Now you can blow, mow, cut, saw or tend to any other yard task with confidence, knowing that if there is a problem with your tool within the warranty period, we will gladly solve it.

HAS YOUR SNOW JOE
EXPERIENCE LEFT
YOU SMILING? 😊

TELL YOUR FRIENDS AND TAG US!

We love to hear your feedback! Share your experience by writing comments and reviews on shopjoe.com, or connect with us on social media!



@SNOWJOECO

#GOWITHJOE

OR HAS SOMETHING
LEFT YOU LESS
THAN SATISFIED? 😞

WE'RE SORRY ABOUT THAT!

Our friendly customer service team is ready to help you with any issues you may have.

**CALL US**

1-866-225-9723



For fastest response

CHAT WITH USSHOPJOE.COM/CHAT

Original instructions.

© 2026 Manufactured for All Season Power LLC.

Snow Joe®, Sun Joe®, Aqua Joe® and Auto Joe® are registered trademarks used under license from Weather Brands LLC.

New Castle, DE 19720

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 20V; nominal voltage under typical load is 18V.

SAVE THESE INSTRUCTIONS



Xtream Cordless Pressure Washer

20V MAX* | 3.0 Ah | 350 PSI

Model X20-PRESSURE-3A

Form No. ASP-X20-PRESSURE-3A-880E-M (MSTR)

IMPORTANT!

Safety Instructions

All Operators Must Read These Instructions Before Use

Read all the instructions contained in this manual. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to another person, make sure to provide these operating instructions. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

⚠ DANGER! This indicates a hazardous situation, which, if not followed, will result in serious injury or death.

⚠ WARNING! This indicates a hazardous situation, which, if not followed, could result in serious injury or death.

⚠ CAUTION! This indicates a hazardous situation, which, if not followed, could result in minor or moderate injury.

Improper use of the machine will invalidate the warranty, relieve the manufacturer of all liabilities. The user will consequently be liable for all and any damage or injury to himself/herself or others.

General Safety

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this machine.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

1. Work area safety – Cluttered, dark areas invite accidents.

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate machines in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Machines create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a machine.** Distractions can cause you to lose control.

⚠ CAUTION! – Exercise caution to avoid slipping or falling. Wear protective footwear that will protect your feet and improve your footing on slippery surfaces.

2. Electrical safety

- a) **Machine plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) machines.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose machines to rain or wet conditions.** Water entering a machine will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a machine outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a machine in a damp location is unavoidable, use a RESIDUAL CURRENT DEVICE (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a machine. Do not use a machine while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating machines may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or BATTERY pack, picking up or carrying the tool.** Carrying machines with your finger on the switch or energizing machines that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the machine on.** A wrench or a key left attached to a rotating part of the machine may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the machine in unexpected situations.

- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- g) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second under the influence of drugs, alcohol, or other medication.

4. Machine use and care

- a) **Do not force the machine. Use the correct machine for your application.** The correct machine will do the job better and safer at the rate for which it was designed.
 - b) **Do not use the machine if the switch does not turn it on and off.** Any machine that cannot be controlled with the switch is dangerous and must be repaired.
 - c) **Disconnect the plug from the power source and/or remove the BATTERY pack, if detachable, from the machine before making any adjustments, changing accessories, or storing machines.** Such preventive safety measures reduce the risk of starting the machine accidentally.
 - d) **Store idle machines out of the reach of children and do not allow persons unfamiliar with the machine or these instructions to operate the machine.** Machines are dangerous in the hands of untrained users.
 - e) **Maintain machines and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the machine's operation. If damaged, have the machine repaired before use.** Many accidents are caused by poorly maintained machines.
 - f) **Use the machine, accessories and tool bits etc. In accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the machine for operations different from those intended could result in a hazardous situation.
 - g) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.
- #### 5. BATTERY tool use and care
- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of BATTERY pack may create a risk of fire when used with another BATTERY pack.
 - b) **Use machine only with specifically designated BATTERY packs.** Use of any other BATTERY packs may create a risk of injury and fire.
 - c) **When BATTERY pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the BATTERY terminals together may cause burns or a fire.
 - d) **Under abusive conditions, liquid may be ejected from the BATTERY; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the BATTERY may cause irritation or burns.
 - e) **Do not use a BATTERY pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, EXPLOSION or risk of injury.
 - f) **Do not expose a BATTERY pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 266 °F/130 °C may cause explosion.
 - g) **Follow all charging instructions and do not charge the BATTERY pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the BATTERY and increase the risk of fire.

6. Service

- a) **Have your machine serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the machine is maintained.
- b) **Never service damaged BATTERY packs.** Service of BATTERY packs should only be performed by the manufacturer or authorized service providers

Pressure Washer Safety Warnings

- **WARNING! Risk of Injection or Injury** – Do not direct discharge stream at persons.
- **Stay alert** – Watch what you are doing. Use common sense. Do not operate the Pressure Washer when you are tired, or under the influence of alcohol or drugs.
- **Do not overreach** – Keep proper footing and balance at all times.
- **Avoid unintentional starting** – Do not carry the machine with your finger on the trigger while the battery pack is attached. Make sure the switch is off before installing the battery pack.
- **Use safety glasses** – Also use safety footwear, snug-fitting clothing, protective gloves, hearing and head protection.
- **Check the water temperature** – This pressure washer is not meant to pump hot water. **NEVER** connect it to a hot water supply as it will significantly reduce the life of the pump. Follow the maintenance instructions specified.
- **Store indoors** – **NEVER** store the pressure washer outdoors or where it could freeze. The pump could be seriously damaged. Know how to stop the Pressure Washer and bleed pressures quickly. Be thoroughly familiar with the controls.
- Do not spray electrical apparatus and wiring.
- Know how to stop the product and bleed pressures quickly. Be thoroughly familiar with the controls.
- Follow the maintenance instructions specified in the manual.

 **WARNING!** Do not use this appliance without reading this instruction manual.

 **WARNING!** This appliance has been designed for use with cleaning agents that are recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the appliance.

 **WARNING!** Do not use the appliance within range of persons unless they are wearing protective clothing.

 **WARNING!** High-pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, pets, live electrical equipment, or the appliance itself.

- Do not direct the jet at yourself or others in order to clean clothes or footwear.
- **Risk of explosion** – Do not spray flammable liquids.
- **Disconnect the tool** – Disconnect the battery before performing any maintenance task.
- To ensure appliance safety, use only original replacement parts from the manufacturer or those approved by the manufacturer.

 **CAUTION!** To prevent damage to the appliance, do not allow it to operate dry. Before starting the appliance, make sure that it has a proper and stable supply of water.

 **WARNING!** Water that has flowed through backflow preventers is considered to be non-potable.

 **WARNING!** During cleaning, maintenance or when replacing parts, the battery must be disconnected from the machine.

 **WARNING!** High-pressure hoses, fittings, and couplings are important for the safe operation of the appliance. Use only hoses, fittings, and couplings recommended by the manufacturer.

- **Check for damaged parts** – Do not use the appliance if the supply cord or other important parts of the appliance are damaged (e.g. safety devices, high-pressure hoses, trigger gun).
- Keep the machine on a stable, flat surface during operation, handling, transportation, and storage. Sudden overturn of the machine can cause bodily injury.
- In the event of an accident or breakdown, switch off the machine immediately. (If contact with detergent occurs, rinse with an abundance of clean water.)

General Safety Warnings For Battery Pack

- a) Do not dismantle, open or shred battery pack.
- b) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.

- c) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or fire.
- d) Do not remove battery pack from its original packaging until required for use.
- e) Do not subject battery pack to mechanical shock.
- f) In the event of battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- g) Observe the plus (+) and minus (–) marks on the battery pack and equipment and ensure correct use.
- h) Do not use any battery pack which is not designed for use with the equipment.
- i) Keep battery pack out of the reach of children.
- j) Seek medical advice immediately if a cell or battery has been swallowed.
- k) Always purchase the battery pack recommended by the device manufacturer for the equipment.
- l) Keep battery pack clean and dry.
- m) Wipe the battery pack terminals with a clean dry cloth if they become dirty.
- n) Battery pack needs to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- o) Do not leave battery pack on prolonged charge when not in use.
- p) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- q) Battery pack gives its best performance when it is operated at normal room temperature 59 ~ 77 °F (15 ~ 25 °C).
- r) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.
- s) Recharge only with the charger specified by the manufacturer. Do not use any charger other than that specifically provided for use with the equipment. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- t) Retain the original product literature for future reference.
- u) Use only the battery pack in the application for which it was intended.
- v) Remove the battery pack from the equipment when not in use.
- w) Dispose of properly.

Safety Symbols


The following table depicts and describes safety symbols that may appear on this product. Read, understand and follow all instructions on the machine before attempting to assemble and operate.

Symbols	Descriptions	Symbols	Descriptions
	READ THE OPERATOR'S MANUAL(S) – Read, understand, and follow all instructions in the user manual(s) before attempting to assemble and operate.		SAFETY ALERT – Indicates a precaution, a warning, or a danger.
	WARNING! Do not expose the unit to rain or wet conditions. Keep dry.		WEAR EYE AND HEARING PROTECTION – For protection against injury, wear ear defenders and safety goggles.
	To reduce the risk of injury, user must keep all bystanders at least 49 ft (15 m) away.		Machine not suitable for connection to the potable water mains.
	Wear safety gloves during use to protect hands.		Wear non-slip footwear that will protect your feet and improve your footing on slippery surfaces.
	Store indoors. Never store the pressure washer outdoors. If the pump freezes, permanent damage may result.		Indoor use only. Only use battery charger indoors.

Know Your Xstream Cordless Pressure Washer

Read the owner's manual and safety instructions carefully before operating the pressure washer. Compare the illustration below to the cordless pressure washer in order to familiarize yourself with the location of the various controls and adjustments. Save this manual for future reference.

1. ON/OFF trigger
2. Handle
3. Battery dock
4. Safety button
5. Air inlet
6. Mode button
7. Cordless pressure washer body
8. Spray wand
9. Hose quick connector
10. 20V* ECOSHARP® lithium-ion charger
11. Charging connector
12. Water filter
13. 3/4" Garden hose adapter
14. Detergent bottle with foam Cannon
15. 20V* ECOSHARP® 3.0 Ah lithium-ion battery
16. Push lock button
17. Charge level button
18. 16.4 ft Siphon hose
19. 6-IN-1 Power nozzle
20. 0° Jet spray nozzle
21. 15° Spray nozzle
22. 40° Spray nozzle
23. 3/8" Siphon hose adapter
24. Hard shell case

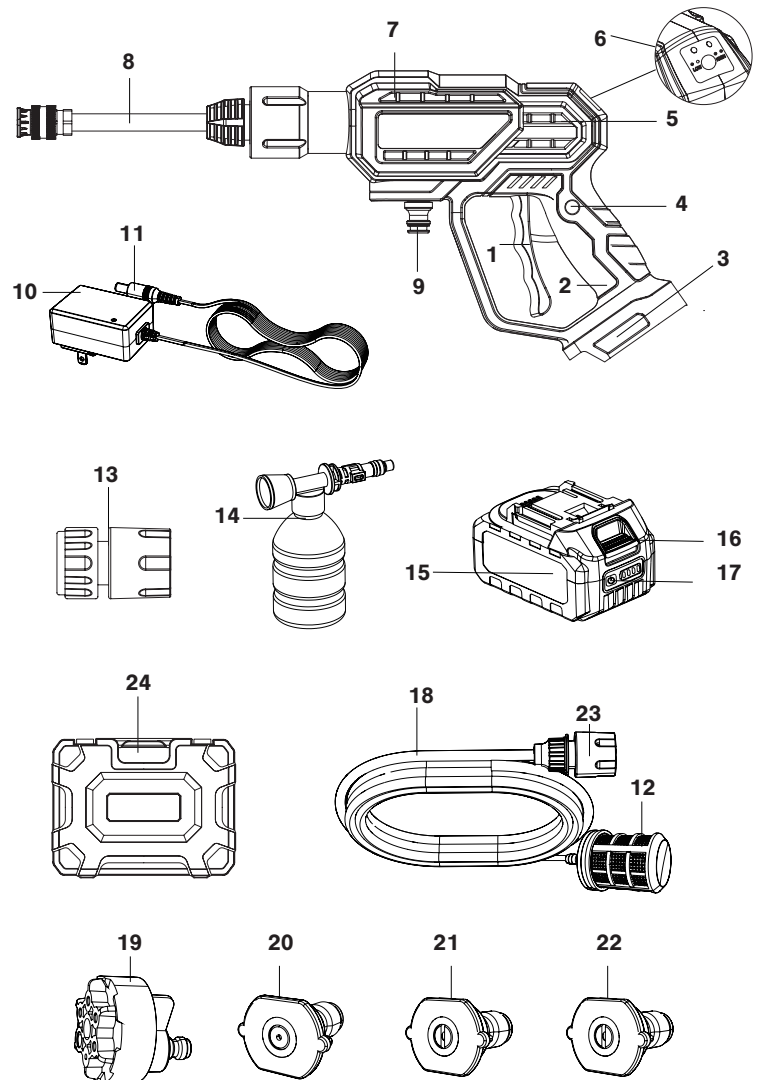

Technical Data

Motor type	Brushless
Motor	220 W
Output Pressure	350 PSI
Water Flow	0.9 GPM
Max Inlet Pressure	0.69 Mpa
Battery Voltage	20V D.C.
Battery Capacity	3.0 Ah

Charger Input	100V - 240V 50/60 HZ, 0.8 A
Charger Output	21V $\approx$ 0.75 A
Charge Time Max	4 - 5 hours
Net Weight	3.48 lbs (1.58 kg)
Gross Weight	8.27 lbs (3.75 kg)
Product Dimensions	19.8 in. (L) $\times$ 3.16 in. (W) $\times$ 10.55 in. (H) (Assembled)

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 20V; nominal voltage under typical load is 18V.

Unpacking

Carton Contents

- Cordless pressure washer body
- Spray wand
- 0° Jet Spray nozzle
- 15° Spray nozzle
- 40° Spray nozzle
- 16.4 ft Siphon hose with 3/8" siphon hose adapter and water filter
- Detergent Bottle with Foam Cannon
- 6-IN-1 Power nozzle
- 3/4" Garden Hose adapter
- X20 Series 20V* 3.0 Ah ECOSHARP® lithium-ion battery
- X20 Series 20V* ECOSHARP® lithium-ion charger
- Hard shell case
- Manual

***DISCLAIMER:** Initial no-load voltage, when fully charged, peaks at 20V; nominal voltage under typical load is 18V.

1. Carefully remove the Pressure washer and check to see that all of the above items are supplied.
2. Inspect the product carefully to make sure no breakage or damage occurred during shipping.

NOTE: Do not discard the shipping carton and packaging material until you are ready to use your Pressure washer. The packaging is made of recyclable materials. Properly dispose of these materials in accordance with local regulations.

3. If you find damaged or missing parts, DO NOT return the unit to the store. Please call the All Season Power customer service center at 1-866-225-9723.

IMPORTANT! The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. These items can be swallowed and pose a suffocation risk!

Battery Pack Operation

The equipment is powered by a Lithium-ion battery. The battery pack is completely sealed and maintenance free. The battery pack is equipped with a Charge level button for checking the charge level. Simply press the push button to read off the battery charge level from the LEDs of the battery indicator.

Battery Charge Level Indicator

There are 4 indicator lights: 25%, 50%, 75%, 100%

Battery Indicator Lights

The battery features 4 LED indicator lights to show the remaining charge:

- 1 light on – 25% charge
- 2 lights on – 50% charge
- 3 lights on – 75% charge
- 4 lights on – 100% (fully charged)

Charger Operation

⚠ WARNING! Charge only X20 Series 20V* 3.0 Ah ECOSHARP® lithium-ion battery pack with its compatible X20 Series 20V* ECOSHARP® lithium-ion charger. Other types of chargers may cause personal injury and damage. To reduce the risk of electric shock, do not allow water to flow into the charger's AC/DC plug.


When to Charge the X20 Series 20V* 3.0 Ah ECOSHARP® Lithium-ion Battery

NOTE: The X20 Series 20V* 3.0 Ah ECOSHARP® lithium-ion battery pack does not develop a "memory" when charged after only a partial discharge. Therefore, it is not necessary to run down the battery pack before inserting the charger plug.

- Use the battery indicator lights to determine when to charge your X20 Series 20V* 3.0 Ah ECOSHARP® lithium-ion battery pack.
- You can "top-off" your battery pack's charge before starting a big job or after a long day of use.


Charging the Battery

1. Press the push lock button on the battery to pull it out of the equipment (Fig. 1).

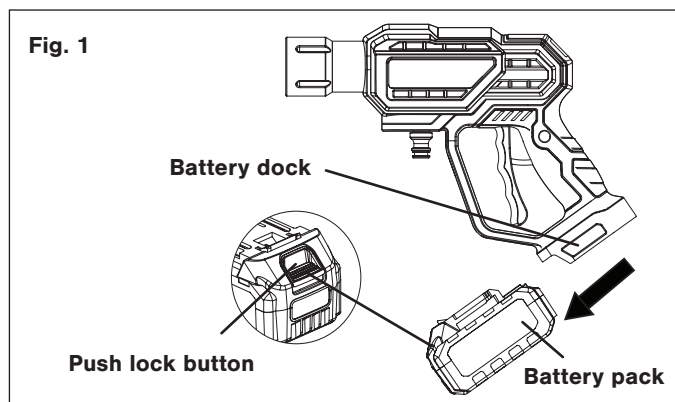

2. Before charging, use the rating plate label on the charger to confirm the voltage from the power outlet is compatible. Then, plug the charger adapter into an appropriate AC power outlet. Connect the charger connector into the charge socket of the battery to start charging (Fig. 2).

Fig. 2

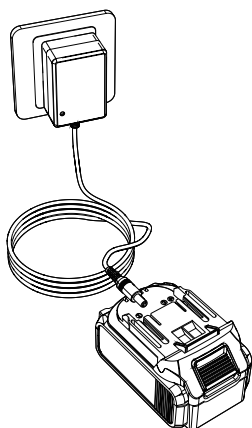

Insert the charger connector into the battery charging port

3. The battery will take approximately 4–5 hours to fully charge. During the charging process, the indicator light of the charger is red. When the indicator light of the charger turns green, the charger should be unplugged immediately.

CAUTION! FIRE HAZARD. When disconnecting the charger from the battery, be sure to unplug the charger from the outlet first, then disconnect the charger from the battery.

4. Timely recharging of the battery will help prolong the battery's life. You must recharge the battery pack when you notice a drop in the equipment's power.

IMPORTANT! Never allow the battery pack to become fully discharged as this will cause irreversible damage to the battery.

Assembly

WARNING! To avoid serious personal injury, read and understand all safety instructions provided.

WARNING! Do not insert battery until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

WARNING! Before performing any maintenance, make sure battery is removed. Failure to heed this warning could result in serious personal injury.

WARNING! To prevent serious personal injury, make sure the switch is set to the OFF position, the battery is removed, and the rotating parts have fully stopped before attaching or detaching the hoses.


To order genuine replacement parts or accessories for the Sun Joe® Xtream Cordless Pressure Washer, please visit shopjoe.com or contact the All Season Power customer service center at 1-866-225-9723.

Wand Assembly

How to install

Fit the spray wand into the sprayer body firmly, and rotate it clockwise until the two parts are completely locked (Fig. 3).

Fig. 3

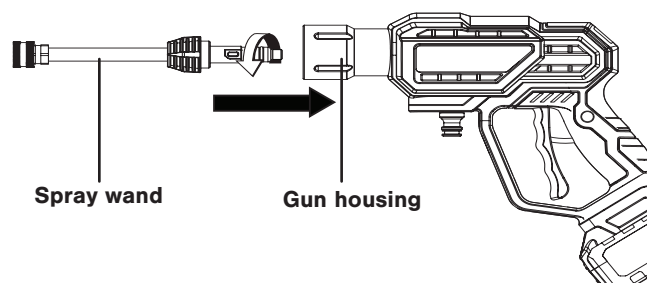

How to remove

Push the spray wand toward the sprayer body, then rotate it counterclockwise to detach it from the body.

WARNING! To reduce the risk of injury, it is not recommended to disassemble the gun housing. Contact your Snow Joe® + Sun Joe® dealer or the All Season Power customer service center for all repairs.

Connecting Water Sources

The pressure washer can be connected with the spigot by a regular garden hose with the included 3/4" Garden Hose adapter, and can be connected with fresh water or bucket water with the included siphon hose.


CAUTION! The pressure washer must only be used with clean (fresh) water; use of unfiltered water containing corrosive chemicals will damage the pressure washer.

WARNING! When connecting with fresh water (lake, spring, pond) make sure to use the equipped siphon hose. The siphon hose has a filter on the end, which will filter out dirt from fresh water sources.

WARNING! The intake water temperature must not exceed 104°F/40°C.


1. Connect to siphon hose with the pressure washer, pull down the collar of the 3/8" Siphon Hose adapter and fit it onto the hose quick connector until it clicks into place. Release the collar to lock the hose in place (Fig. 4).

Fig. 4

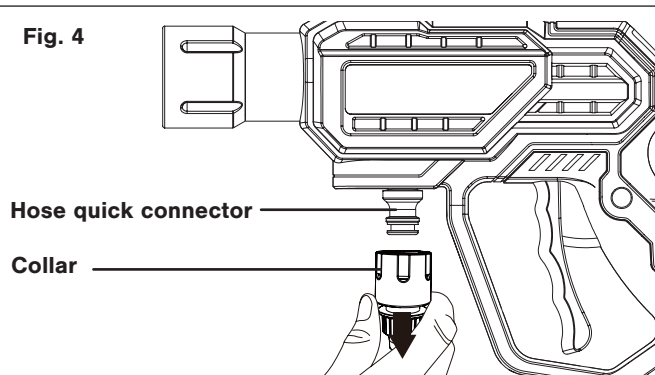


NOTE: Make sure the hose is connected securely. Gently pull the hose connection to confirm it won't come off.

- Drop the other end with the filter into a bucket (Not included) of water or into fresh water. Adjust the floater's position up or down as needed to ensure the filter remains submerged below the surface of the water (Fig. 5).

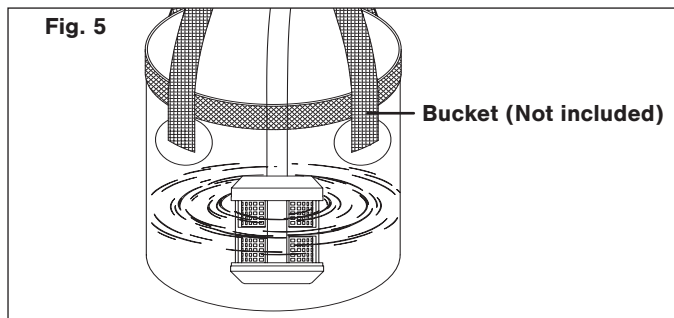


To Connect with Spigot

- Pull down the collar of the 3/4" garden hose adapter, then fit it onto the hose quick connector until it clicks into place. Release the collar to secure the connector. Finally, attach a 3/4" US standard garden hose (Not included) to the hose adapter (Fig. 6).

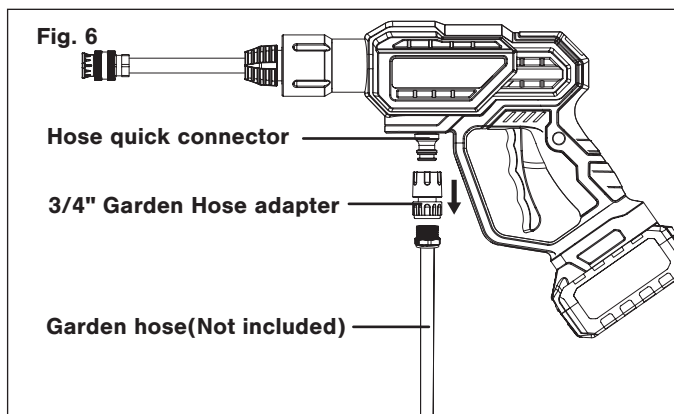

NOTE: Make sure the hose is connected securely. Gently pull the hose connection to confirm it's securely in place.

- Connect the 3/4" connector end of the garden hose to the faucet (Fig. 7).

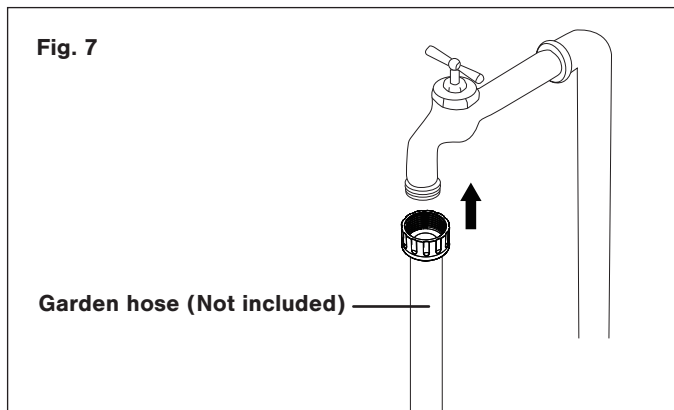

⚠ WARNING! Keep hose away from sharp objects. Bursting hoses may cause injury. Examine hoses regularly and replace if damaged. Do not attempt to mend a damaged hose.

⚠ WARNING! Water that has flowed through back flow preventers is considered to be non-potable.


Working with Detergents

When cleaning with the pressure washer, some cleaning tasks can be solved with water alone, but for most tasks cleaning with detergent allows for more effective dirt removal.


For additional cleaning power, the unit comes equipped with a detergent spray bottle.

⚠ WARNING! Use only detergents specifically designed for use with pressure washers, such as Sun Joe® HOUSE + DECK WASH (SPX-HDC1G), Sun Joe® SNOW FOAM AUTO WASH (SPX-FCS1G), or Sun Joe® HEAVY DUTY CLEANER (SPX-APC1G). **DO NOT USE** household detergents, acids, alkaline solutions, bleaches, solvents, flammable material, or industrial grade solutions. These could damage the pressure washer. Many detergents may require mixing prior to use. Prepare the cleaning solution as instructed on the solution bottle.

- Remove the detergent bottle with foam cannon from the hard shell case. Unscrew and remove the foam cannon cap with detergent suction tube from the detergent bottle.
- Fill the detergent bottle with detergent designed specifically for use with pressure washers and replace the foam cannon cap on the detergent bottle (Fig. 8).

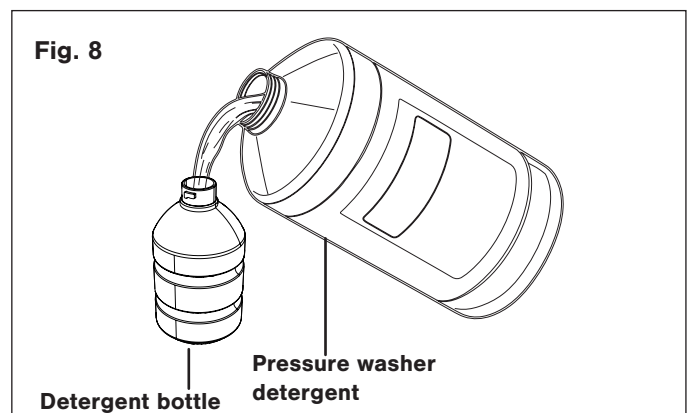

- Fit the detergent bottle into the sprayer body firmly, and hold the plastic cap and rotate it clockwise until the two parts are completely locked (Fig. 9).

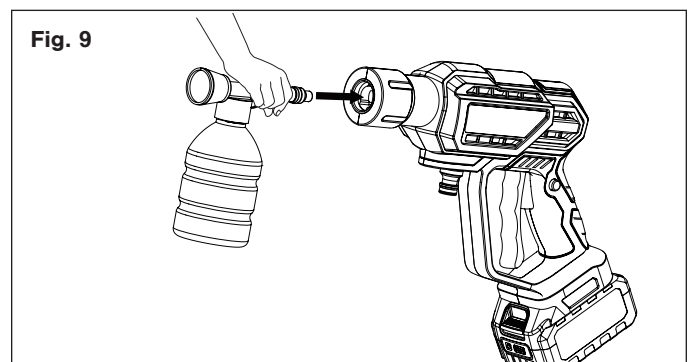

4. Apply detergent from the bottom to the top of the dry surface to be cleaned. Applying detergent in this manner will dissolve dirt most effectively.

NOTE: Wetting the surface first is not recommended as it dilutes the detergent and reduces its cleaning ability.

⚠ CAUTION! Always test the detergent in an inconspicuous area before use.

5. Allow the detergent to remain on the surface for a short time before rinsing with the pressure washer. Do not allow the detergent to dry on the surface.

⚠ CAUTION! Damage may occur to painted surfaces if the detergent is allowed to dry on them. Wash and rinse a small section at a time. Avoid working on hot surfaces or in direct sunlight.

⚠ IMPORTANT! NEVER USE:

- Bleach, chlorine products, and other corrosive chemicals
- Liquids containing solvents (e.g. paint thinners, gasoline, oils)
- Tri-sodium phosphate products
- Ammonia products
- Acid-based products

These chemicals will harm the unit and will damage the cleaning surface.

Operation


Starting + Stopping

⚠ CAUTION! Starting, stopping, and restarting a DC motor repeatedly within a few seconds can generate a great deal of heat and damage the motor. To protect the life of your cordless Pressure Washer, always wait at least five seconds after stopping before restarting the Pressure Washer.


⚠ WARNING! Do not insert battery until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

⚠ WARNING! Before performing any maintenance, make sure battery is removed. Failure to heed this warning could result in serious personal injury.

1. Push the safety button so it is protruding out as shown in fig. 10 to put the pressure washer in the locked position.

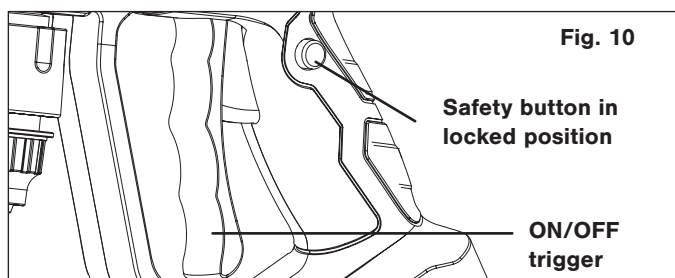


2. Insert the battery into the battery dock until it clicks to lock it into position (Fig. 11).

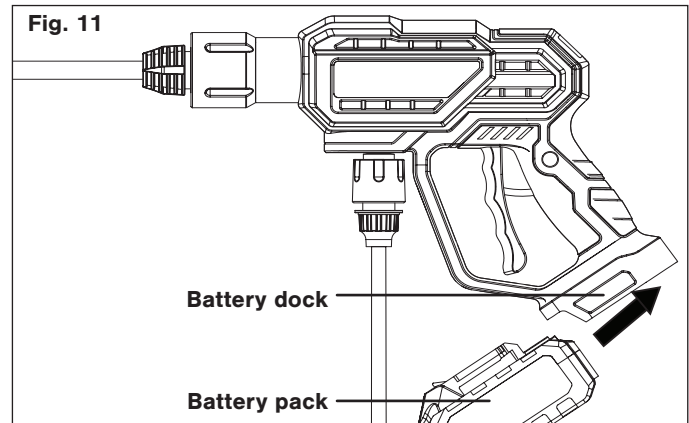


⚠ CAUTION! When the battery is hot after use, put it in a cool place for 30 minutes to 1 hour before charging with the charger for better full-charge performance.

3. Depress the safety button (Fig. 12) until it clicks to unlock the machine, squeeze the ON/OFF trigger to start operation. Hold the ON/OFF trigger for a few seconds to stabilize water flow.

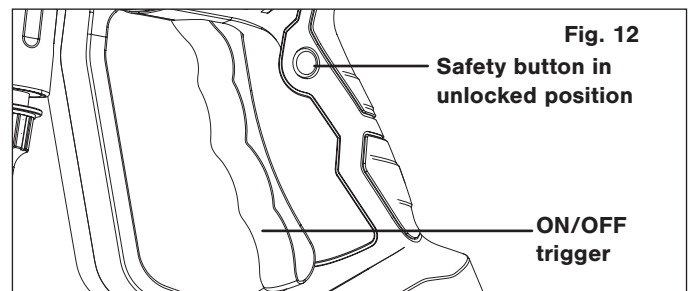


4. Release the ON/OFF trigger to turn off the device, For long idle periods, shift safety button to locked position (Fig. 13).

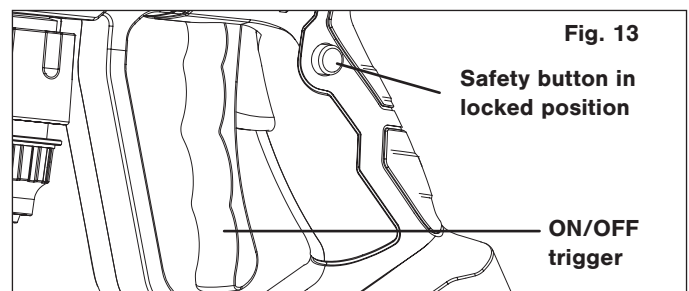

Flow Adjustment

This pressure washer features two flow modes. Press the mode button to switch between high and low water flow to suit different cleaning tasks (Fig. 14).

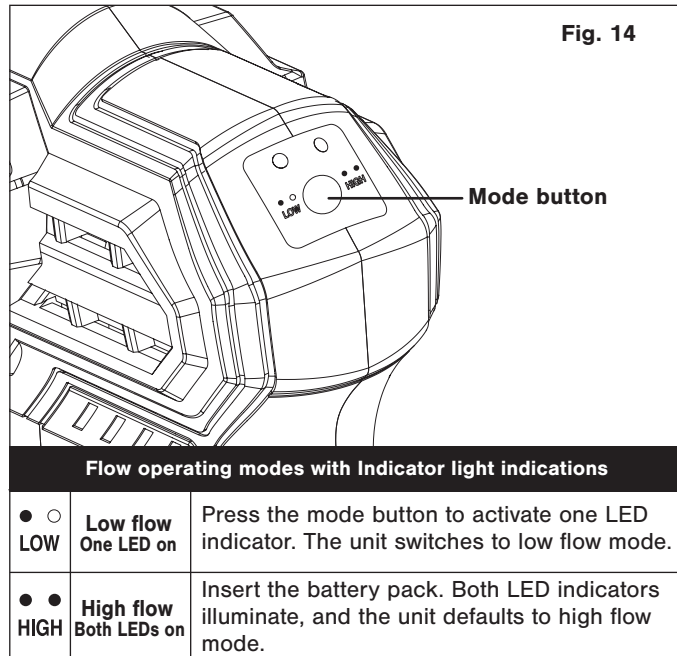

NOTE: The LED indicators only indicate the selected flow mode. After about 1 minute of inactivity, all LED indicators automatically turn off. The unit reverts to high flow mode upon restart.

Operating Tips

⚠ WARNING! Only use the pressure washer during daytime or under adequate artificial lighting.

- When operating the spray gun, stand with stable footing, grip the gun handle firmly with your dominant hand, and use your other hand to stabilize the gun as needed.
- Wear personal protective equipment during your work session. This includes boots, safety glasses/goggles, ear defenders, long pants and a long-sleeve shirt.
- Make sure the pressure washer nozzle is not directed at anybody or any loose debris before starting the unit.
- Verify that the unit is in good working condition. Make sure the tubes are in place and secure.
- Keep a firm grip on the unit handle while in use.
- To reduce the risk of hearing loss associated with increased sound levels, hearing protection is required.
- Operate power equipment only at reasonable hours – not early in the morning or late at night when people might be disturbed. Comply with times listed in local ordinances. Usual recommendations are 9:00 am to 5:00 pm, Monday through Saturday.


Using the 6-IN-1 Power Nozzle or Spray nozzles

Before beginning any cleaning task, determine the best spray setting for the job. The multi-spray nozzle has 6 different spray patterns: ☐ rinse pattern (for plant watering), ☐ soap pattern (for soap cleaning), fill bucket with water-diluted detergent, then select this soap pattern. 40° (for gentle cleaning), 25° (for all-purpose cleaning), 15° (for tough jobs), and 0° (for spot cleaning or hard-to-reach areas).


⚠ CAUTION! NEVER change spray pattern without stopping the pressure washer and the battery removed.

⚠ WARNING! High-pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, pets, live electrical equipment, or the appliance itself.

1. Turn off the pressure washer, remove the battery.
2. To connect the spray nozzles or 6-IN-1 Power nozzle with the pressure washer, pull down the collar of spray wand and fit it onto the adapter of spray nozzle. Release the collar to lock the spray nozzle in place. Replace the nozzles according to your actual cleaning needs (Fig. 15).

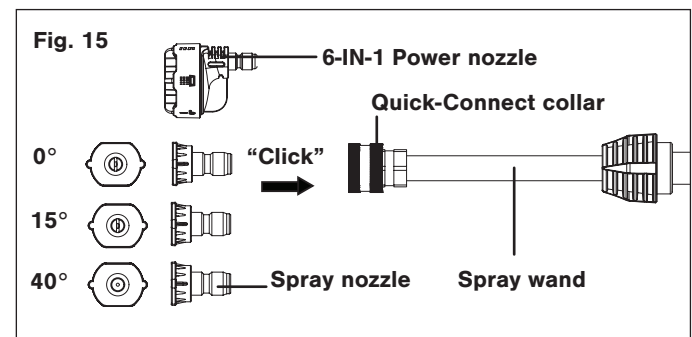

3. Twist the 6-IN-1 Power nozzle collar to align the symbol of the desired spray pattern with the mark on the nozzle. Select the right spray pattern for the job (Fig. 16).

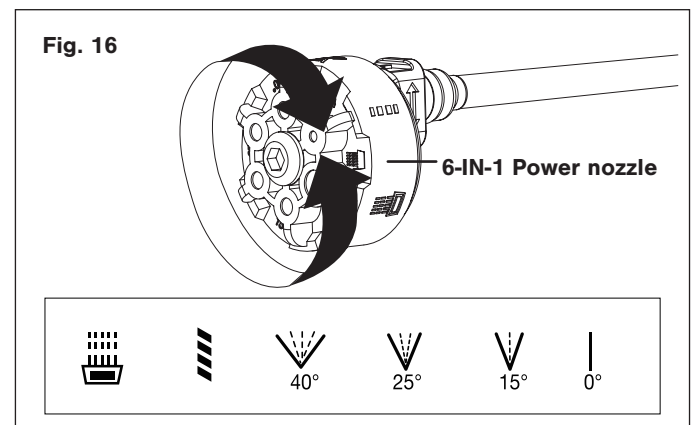

- i) The 0° intense-jet nozzle (red) is an extremely powerful nozzle that delivers a high-pressure, pencil-point jet stream. It is used to cut heavy dirt deposits in a small, concentrated area.

NOTE: Care should be used when choosing the right nozzle to avoid permanently gouging wood or damaging fragile surfaces.

- ii) Use the 15° fan-tip nozzle (yellow) for intense cleaning jobs on hard surfaces. This nozzle should only be used in areas that can withstand the high-pressure from this nozzle.
 - iii) Use the 40° wide-spray tip nozzle (gray) to clean items such as cars, trucks, boats, patio furniture, or lawn equipment.
4. Insert the battery and start the machine. Start at the top of the area to be rinsed and work your way down, making sure to overlap your strokes.

WARNING!

- Adjust the nozzle to the appropriate pressure mode before starting cleaning: low pressure for delicate surfaces (cars, furniture), high pressure for stubborn dirt (concrete, driveways).
- Maintain a distance of 6-12 in. (15-30 cm) between the nozzle and the cleaning surface to balance cleaning effect and avoid surface damage.
- After each use, drain residual water from the hose and pump, then wipe the unit dry to extend service life.
- Start with low pressure when cleaning new/unknown surfaces to test for damage before full-scale cleaning.
- Avoid continuous operation for over 30 minutes; pause the unit for 5-10 minutes to prevent overheating of internal components.

Shutting Down

1. Release the ON/OFF trigger, shift safety button to lock mode. Remove the battery.
2. Remove the siphon hose out from the bucket/fresh water or turn off the water source.
3. Disconnect the siphon/garden hose connection on the pressure washer.

 **WARNING!** Turn off the water supply and squeeze the trigger to depressurize the unit. Failure to do so could result in personal injury due to discharge of high-pressure water.

Storage

 **CAUTION!** Always store your pressure washer in a location where the temperature will not fall below 32°F (0°C). The pump in this machine is susceptible to permanent damage if it freezes. **FREEZE DAMAGE IS NOT COVERED BY THE WARRANTY.**

- Store the pressure washer indoors in a dry, covered area where it is not subject to adverse weather conditions.
- It is important to store this product in a frost-free area.
- Always empty water from all hoses, the pump, and the detergent bottle before storing.

 **CAUTION!** The use of a pump protector is recommended to prevent cold weather damage during storage over the winter months.



Winterizing + Long-Term Storage

If you must store your pressure washer in a location where the temperature falls below 32°F (0°C), you can minimize the chance of damage to your machine by utilizing the following procedure:

- Disconnect all water connections.
- Turn on the machine for a few seconds until the remaining water in the pump exits. Turn off immediately.
- Do not allow the high-pressure hose to become kinked.
- Store the machine and accessories in a room that does not reach freezing temperatures.
- Do not store near a furnace or other sources of heat that may dry out the pump seals.
- Operate the pressure washer with non-corrosive/non-toxic anti-freeze, a pump saver, or a pump protector before storing for the winter.

 **WARNING!** Before reusing, completely flush the unit out with clear water. Anti-freeze products can damage paintwork, so you must ensure there is no anti-freeze left in the system before using it again.

⚠ CAUTION! Before working on the pressure washer, remove the battery from the compartment. To ensure good performance, check and clean the water inlet filter on the end of the siphon hose. Remove and disassemble the filter and rinse all components with warm water to prevent any foreign matter from clogging the pump (Figs. 17 – 18).

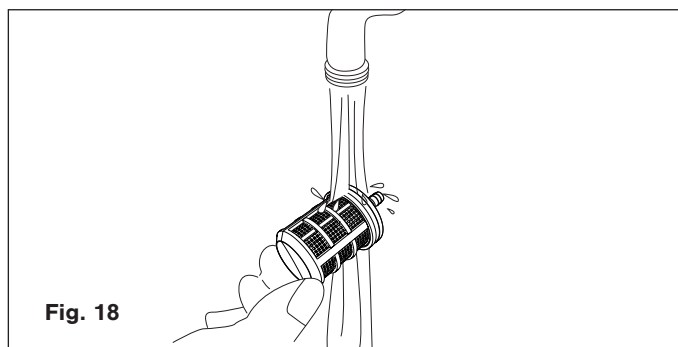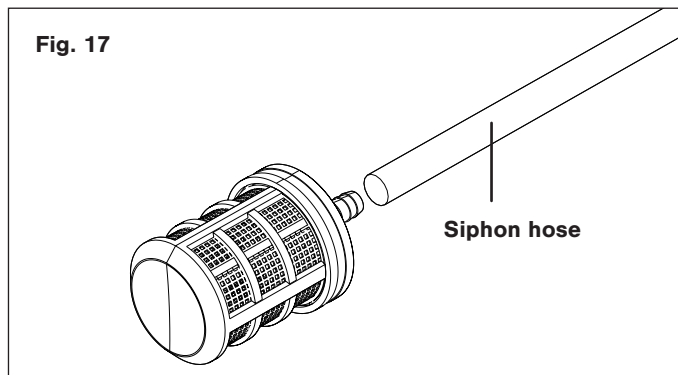

Disposal

Recycling the Cleaner

- Do not dispose of appliances as unsorted municipal waste. Use separate collection facilities.
- Contact your local government agency for information regarding the collection systems available.
- If appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of charge.

Recycling + Disposal

The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is functioning properly. Recycle the package afterwards or keep it for long-term storage.

Battery Caution + Disposal

Always dispose of your battery packs according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

⚠ CAUTION! Even discharged battery packs contain some energy. Before disposing, use electrical tape to cover the terminals to prevent the battery packs from shorting, which could cause a fire or explosion.

⚠ WARNING! To reduce the risk of injury or explosion, never burn or incinerate a battery pack even if it is damaged, dead, or completely discharged. When burned, toxic fumes and materials are emitted into the surrounding atmosphere.

1. Batteries vary according to device. Consult your manual for specific information.
2. Install only new batteries of the same type in your product (where applicable).
3. Failure to insert batteries in the correct polarity, as indicated in the battery compartment or manual, may shorten the life of the batteries or cause batteries to leak.
4. Do not mix old and new batteries.
5. Do not mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel Cadmium, Nickel Metal Hydride, or Lithium-Ion) batteries.
6. Do not dispose of batteries in fire.
7. Batteries should be recycled or disposed of as per state and local guidelines.

Service and Support

If your Sun Joe® Xstream Cordless Pressure Washer requires service or maintenance, please call the All Season Power customer service center at 1-866-225-9723.



Model and Serial Numbers

When contacting the company, reordering parts, or arranging service from an authorized dealer, you will need to provide the model and serial numbers, which can be found on the decal located on the housing of the unit. Copy these numbers into the space provided below.

Record the following numbers from the housing or handle of your new product:																			
Model #:																			
X	2	0	-	P	R	E	S	S	U	R	E	-	3	A					
Serial #:																			

Optional Accessories

  ⚠ WARNING! ALWAYS use only authorized Snow Joe® + Sun Joe® replacement parts and accessories. NEVER use replacement parts or accessories that are not intended for use with pressure washer. Contact All Season Power if you are unsure whether it is safe to use a particular replacement part or accessory with your pressure washer. The use of any other attachment or accessory can be dangerous and could cause injury or mechanical damage.

Accessories	Item	Model
① 	Spray Tip Barrel	X20-XTREAM-STB
② 	3/4" Garden Hose Adapter	X20-XTREAM-34AD
③ 	Detergent Bottle with Foam Cannon	X20-XTREAM-FOAM
④ 	16.4 FT Siphon Hose with 3/8" Siphon Hose Adapter and water filter	PSC-HOSE
⑤ 	6-IN-1 Power Nozzle (multi-spray)	PSC-PNOZ
⑥ 	Spray Nozzle Pack – 0° Jet (red), 15° Fan (yellow), 40° Wide - spray (gray)	PSC-NOZPK
⑦ 	X20 Series 20V* ECOSHARP® 3.0 Ah Lithium-ion Battery	20V-BATT-3A
⑧ 	X20 Series 20V* ECOSHARP® lithium-ion Charger	HC1610-2100750

NOTE: Accessories are subject to change without any obligation on the part of All Season Power. Accessories can be ordered online at shopjoe.com or via phone by contacting the All Season Power customer service center at 1-866-225-9723.

Troubleshooting

Problem	Possible Cause	Solution
Unit will not turn on	a) Battery not installed or discharged	a) Reinstall battery until it clicks; fully recharge using compatible X20 Series 20V* ECOSHARP® Lithium-ion Charger (HC1610-2100750)
	b) ON/OFF trigger not fully pressed	b) Press the ON/OFF trigger all the way down until it engages
	c) Battery protective cutoff triggered	c) Remove battery and allow unit to cool completely before reinserting. Do not press switch repeatedly while cutoff is active
Low water pressure or weak spray	a) Water filter (item #12) clogged	a) Remove and rinse water filter with warm water; inspect for debris before each use
	b) Air inlet vents (item #5) blocked	b) Clear debris from air inlet vents to restore proper motor cooling and output pressure
	c) Siphon hose not fully seated or leaking	c) Re-seat siphon hose; pull collar down, fit connector, release to lock. Gently pull to confirm it will not come off
	d) Battery low	d) Recharge battery before use; low charge reduces pump output pressure
Unit runs but no water output / pump not priming	a) Siphon hose filter not submerged	a) Adjust floater position so filter end remains fully submerged in water source
	b) Air lock in pump	b) Trigger unit for several seconds until steady water flow is established
	c) Hose quick connector not fully locked	c) Pull collar down, seat connector fully, release collar. Confirm connection is secure
	d) Water source empty or shut off	d) Confirm bucket contains water or spigot is fully open before operating
Water leaking from hose or connections	a) Hose quick connector not locked	a) Re-seat connection: pull collar down, fit adapter, release collar. Gently pull to verify lock
	b) Garden hose adapter not tightened	b) Twist garden hose adapter firmly until secure (Fig. 6 in manual)
	c) Siphon hose or connector damaged	c) Inspect hose for cracks or wear before each use. Do not attempt to repair a damaged hose — replace it

Problem	Possible Cause	Solution
Spray nozzle not changing pattern / collar stuck	a) Battery not removed before changing nozzle	a) Turn off unit and remove battery completely before rotating nozzle collar or swapping nozzle tips
	b) Nozzle collar not fully aligned	b) Align symbol of desired spray pattern with the mark on the nozzle, then twist collar firmly to lock
	c) Nozzle tip not fully locked into spray tip barrel	c) Pull collar of spray tip barrel down, seat nozzle adapter fully, release collar. Confirm nozzle will not pull off
Unit shuts off during use	a) Battery depleted or overheated	a) Recharge battery; or remove battery and allow unit to cool at least 5 minutes before restarting
	b) Air inlet vents (item #5) clogged	b) Remove battery; clean air inlet vents with a brush or compressed air before resuming
	c) Continuous operation exceeded 30 minutes	c) Pause unit for 5–10 minutes to prevent overheating of internal components (per manufacturer operating tip)
Battery will not charge	a) Battery too hot or cold	a) Allow battery to reach room temperature (41°F–105°F / 5°C–40.5°C) before charging
	b) Incorrect supply voltage	b) Verify supply voltage matches charger rating (100–240V AC, 50/60 Hz)
	c) Battery not charged in over 12 months	c) Battery may have suffered irreversible damage from exhaustive discharge and should be replaced
Short runtime	a) Battery not fully charged or cold	a) Fully charge battery (4–5 hours); bring indoors to warm to room temperature before use
	b) Battery aged / capacity degraded	b) Replace battery when runtime falls noticeably; use Sun Joe® 20V-BATT-3A replacement

Only a company specialist may be able to correct faults that cannot be rectified with the aid of this table. Please call the All Season Power customer service department at 1-866-225-9723.



OUR CUSTOMER PROMISE + LIMITED WARRANTY

ABOVE ALL ELSE, All Season Power, LLC (“All Season Power”) is dedicated to you, our customer. We strive to make your experience as pleasant as possible. Unfortunately, there are times when a Snow Joe®, Sun Joe®, Aqua Joe® or Auto Joe® product (“Product”) does not work or breaks under normal operating conditions. We think it’s important that you know what you can expect from us. That’s why we have a Limited Warranty (“Warranty”) for our Products.

OUR WARRANTY:

All Season Power warrants new, genuine, powered and non-powered Products to be free from defects in material or workmanship when used for ordinary household use for a period of one year from the date of purchase or delivery by the original, end-user purchaser when purchased from All Season Power or from one of All Season Power’s authorized sellers with proof of purchase. Because All Season Power is unable to control the quality of its Products sold by unauthorized sellers, unless otherwise prohibited by law, this Warranty does not cover Products purchased from unauthorized sellers. If you have any questions about how to buy from an authorized seller, chat with us at shopjoe.com/support or call us at **1-866-225-9723**. If your Product does not work or there’s an issue with a specific part that is covered by the terms of this Warranty, All Season Power will elect to either (1) send you a free replacement part, (2) replace the Product with a new or comparable product (which may include a refurbished, like-new product) at no charge, or (3) repair the Product. How cool is that!

PRODUCT REGISTRATION:

All Season Power strongly encourages you to register your Product. You can register online at shopjoe.com/register, by chatting with us at shopjoe.com/support or calling our Customer Service Department at **1-866-225-9723**. Failure to register your Product will not diminish your warranty rights. However, registering your Product will allow All Season Power to better serve you with any of your customer service needs.

WHO CAN SEEK LIMITED WARRANTY COVERAGE:

This Warranty is extended by All Season Power to the original purchaser and original owner of the Product.

WHAT IS NOT COVERED?

This Warranty does not apply if the Product has been used commercially or for non-household or rental applications. This Warranty also does not apply if the Product was purchased from an unauthorized seller. This Warranty also does not cover cosmetic changes that do not affect performance. Wearing parts like belts, augers, chains and tines are not covered under this Warranty, and can be purchased at shopjoe.com or by calling 1-866-225-9723.



We encourage you to use **CERTIFIED AUTHENTIC** Snow Joe®, Sun Joe®, Aqua Joe® + Auto Joe® replacement parts + accessories. Damage caused by the use of any other parts + accessories on your Product will not be covered under the warranty. Genuine parts + accessories can be found and purchased at shopjoe.com by entering the model number of your product.

When you register your powered or non-powered Product with All Season Power at shopjoe.com/register, you will receive an additional 90 days of warranty coverage. In addition, you will have the option of purchasing extended warranty coverage beyond the standard 1-year manufacturer’s warranty. Choose from two, three, or four years of extended coverage through Extend, Inc. Additional charges apply. When you Go With Joe®, you’re not just buying an extended warranty; you’re buying total peace of mind to know that you can rely on our top-notch tools, top-tier customer support, complete product coverage + no hassle return policy. Chat with us at shopjoe.com/support or call us at **1-866-225-9723** 7 days a week 10AM-6PM EST. We’ve got you covered!

There are no warranties which extend beyond those stated herein. **ANY IMPLIED WARRANTIES THAT MAY BE APPLICABLE TO PRODUCTS, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.** Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

UNDER NO CIRCUMSTANCES SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF THIS LIMITED WARRANTY, BREACH OF CONTRACT OR STRICT LIABILITY. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



IMPORTANT NOTICE ABOUT YOUR RIGHTS - PLEASE READ
ARBITRATION AGREEMENT

THIS ARBITRATION AGREEMENT ("AGREEMENT") SHALL GOVERN THE MANNER BY WHICH ANY CLAIMS AGAINST US REGARDING THIS PURCHASE AND/OR USE OF OUR PRODUCTS SHALL BE RESOLVED. THIS AGREEMENT SETS FORTH IMPORTANT LEGAL RIGHTS. PLEASE READ THIS AGREEMENT CAREFULLY.

BY PURCHASING OUR PRODUCTS FROM US OR ANY THIRD PARTY, YOU UNDERSTAND AND AGREE THAT ANY DISPUTE BETWEEN YOU AND US CONCERNING SUCH PRODUCT SHALL BE SETTLED BY BINDING INDIVIDUAL ARBITRATION IN ACCORDANCE WITH THE TERMS OF THIS AGREEMENT AND AS SUCH YOU WAIVE YOUR RIGHT TO PARTICIPATE IN OR REPRESENT A CLASS OF CONSUMERS IN SUCH DISPUTES. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MUST RETURN THE PRODUCT WITHIN (30) DAYS OF YOUR RECEIPT OF THIS PRODUCT.

GOVERNING LAW; ASSENT

This Agreement shall be governed by the Federal Arbitration Act, 9 U.S.C. §§ 1 et seq., and, to the extent state law is applicable, the laws of the State of Delaware, without regard to conflict of laws principles. By retaining the Product beyond thirty (30) days from the date of receipt, you acknowledge that you have read, understood, and agreed to be bound by this Agreement. If you do not agree to this Agreement, you must return the Product within thirty (30) days of receipt for a full refund of the purchase price.

I. RESOLUTION BY BINDING ARBITRATION.

Any Claim or dispute between you and us, or any of our subsidiaries or affiliates, agents or representatives arising out of or relating in any way to the Product or this Agreement shall be resolved through final, binding arbitration. This arbitration obligation applies regardless of whether the claim or dispute involves a tort, fraud, misrepresentation, product liability, negligence, violation of a statute, or any other legal theory. You specifically acknowledge and agree that you waive your right to bring a lawsuit based on such claims or disputes and to have such lawsuit resolved by a judge or jury. Notwithstanding the foregoing, either party may seek emergency injunctive or other equitable relief from a court of competent jurisdiction solely to prevent irreparable harm pending arbitration, without waiving any right to arbitration of the underlying dispute.

II. WAIVER OF CLASS PARTICIPATION.

All arbitrations under this Agreement shall be conducted on an individual (and not a class-wide) basis, and an arbitrator shall have no authority to award class-wide relief. You acknowledge and agree that this Agreement specifically prohibits you from commencing arbitration proceedings as a representative of others or joining in any arbitration proceedings brought by any other person. You also acknowledge and agree that you are giving up your right to serve as a representative, as a private attorney general, or in any other representative capacity, and/or to participate as a member of a class of claimants in any lawsuit filed against us and/or related third parties.

III. ARBITRATION PROCEDURES.

A. Before commencing any arbitration proceedings under this Agreement, you must first present the claim or dispute to us by calling our Representative toll free at 1-866-225-9723 and providing all requested information. You may be required to provide us with a written statement setting forth the nature of your claim or dispute. We shall have forty-five (45) days from the receipt of such call (or written statement) to resolve such claim or dispute ("Resolution Period"). If your claim or dispute is not resolved within the Resolution Period, you may commence arbitration proceedings in accordance with the terms of this Agreement.

B. The arbitration of any claim or dispute under this Agreement shall be conducted pursuant to the AAA Consumer Arbitration Rules then in effect (“AAA”). These rules and procedures are available by calling the AAA or by visiting its web site at www.adr.org.

C. The arbitrator shall not conduct class arbitration; that is, the arbitrator shall not allow you to serve as a representative, as a private attorney general, or in any representative capacity for others in the arbitration.

D. The arbitration of any claim or dispute under this Agreement shall be conducted in New York County, New York State; provided, however, that for claims of \$25,000 or less, you may elect to conduct the arbitration by telephone or videoconference, in which case no in-person appearance shall be required.

E. MASS ARBITRATION. If twenty (20) or more similar claims are filed against us within any ninety (90) day period (“Mass Filing”), the AAA shall administer the Mass Filing in a coordinated proceeding. The AAA shall select up to ten (10) claims to serve as bellwether proceedings, which shall be resolved first. The results of the bellwether proceedings shall not be binding on remaining claimants but may be used by the parties to facilitate resolution. No additional claims in the Mass Filing shall be administered or arbitrated while the bellwether proceedings are pending. All applicable statutes of limitations shall be tolled during any period of abeyance under this section. This provision shall not limit your individual right to arbitration.

F. ALTERNATE ADMINISTRATOR. If the AAA is unable or unwilling to administer a claim under this Agreement, JAMS, Inc. (“JAMS”) shall serve as the arbitration administrator pursuant to its Consumer Arbitration Minimum Standards then in effect, available at www.jamsadr.com.

IV. COSTS.

All administrative expenses of the arbitration proceedings commenced under this Agreement shall be as follows:

A. If the claim or dispute that is the subject of the arbitration proceedings is less than five thousand dollars (US \$5,000), your financial responsibility for the administrative costs shall not exceed One Hundred Dollars (\$100);

B. If the claim or dispute that is the subject of the arbitration proceedings is between five thousand dollars (US \$5,000) and fifty thousand dollars (US \$50,000), your financial responsibility for administrative costs shall not exceed Three Hundred Dollars (\$300); and

C. If the claim or dispute that is the subject of the arbitration proceedings exceeds \$50,000, your financial responsibility for administrative costs shall be in accordance with the Commercial Fee Schedule provided by the AAA.

D. Each party shall pay the fees and costs of its own counsel, experts and witnesses.

V. SMALL CLAIMS.

If a claim is within the jurisdiction of a small claims court, either party may choose to take the claim to that court instead of arbitration. Any dispute that cannot be adjudicated within the jurisdiction of a small claims tribunal shall be resolved by binding arbitration as described in and in accordance with the terms of this Agreement. Any appeal of a judgement from a small claims tribunal shall be resolved by binding arbitration under the terms of this Agreement.

VI. SEVERABILITY.

If any provision of this Agreement is declared or found to be unlawful, unenforceable or void, such provision will be ineffective only to the extent that it is found unlawful, unenforceable or void, and the remainder of the provision and all other provisions shall remain fully enforceable.

All Season Power LLC
794 School House Road
New Castle, DE 19720

Implemented: January 2026

