

HTC
无线蓝牙耳机71

产品规格
型号: HTC NE71

蓝牙
范围: ≈ 10m
版本: 6.0

喇叭
直径: 12mm
阻抗: 32Ω

耳机功率
输入: 5V=35mA
电池容量: 35mAh
使用时间: ≈ 4小时
充电时间: ≈ 1.5小时

充电仓功率
输入: 5V=400mA
输出: 5V=70mA
电池容量: 400mAh
充电时间: ≈ 2小时
充电仓充满电时, 能给耳机充电约3次

快速入门指南
使用的请阅读使用说明书
HTC NE71

物品清单

部件

取出耳机并配对

如何佩戴耳机

开机和关机

连接到蓝牙设备

基本操作

功能操作

如何清除蓝牙配对历史记录

充电仓基本操作

多功能按键功能

图标介绍

充电仓显示屏功能介绍

音乐播放

AI翻译

寻找耳机

游戏

系统设置

表盘

背景壁纸

时间设定

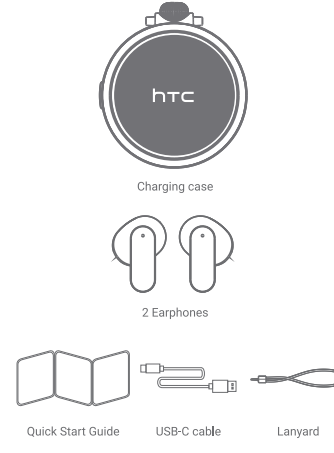
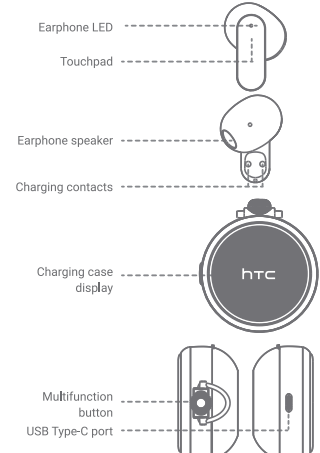
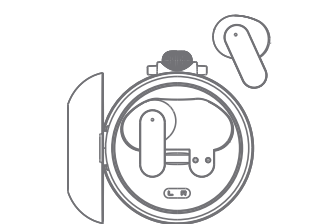
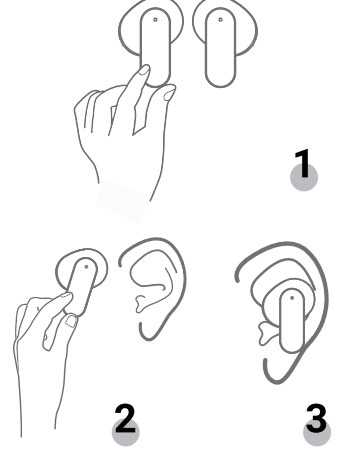
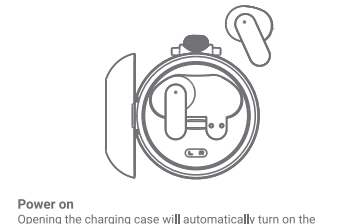
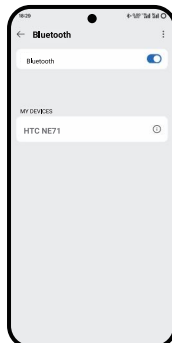
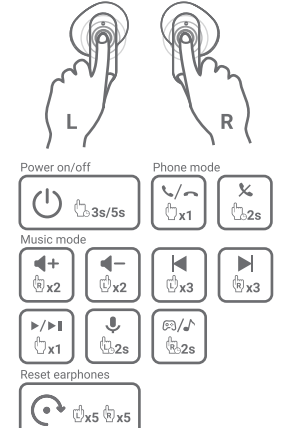
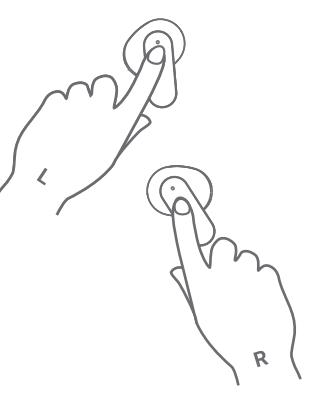
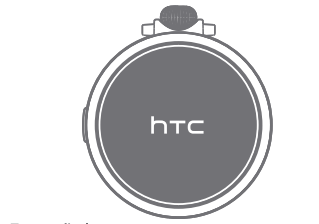
 
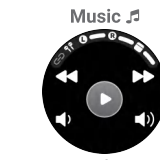
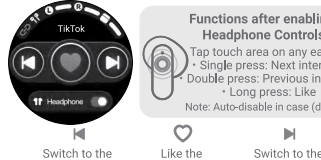
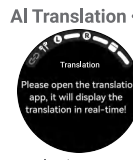
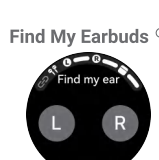
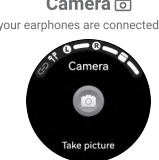
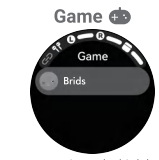
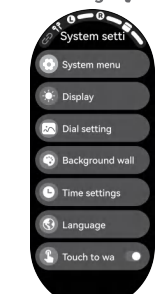
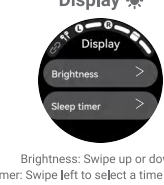
产品中有有害物质名称及含量

重要安全说明

售后服务电话: 4009933981

法律声明

HTC

htc Wireless Earphones 71  Quick Start Guide HTC NE71	Product Specifications Model: HTC NE71 Bluetooth Range: ~ 10 m Version: 6.0 Speaker Diameter: 12 mm Impedance: 32 Ω Earphone power Input: 5 V~35 mA Battery capacity: 35 mAh Battery life: ~ 4 hrs Charging time: ~ 1.5 hrs Charging case power Input: 5 V~400 mA Output: 5 V~70 mA Battery capacity: 400 mAh Charging time: ~ 2 hrs Earphone recharges: 3 charges (when case is fully charged)	What's in the box 	Components 	Take out and pair the earphones  If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode. Note: - If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. - If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.	How to put on the earphones 	Power on and off  Power on Opening the charging case will automatically turn on the earphones. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case and closing the case will automatically turn them off. Unconnected state to manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.																																																																			
Connect to Bluetooth device  On your device, turn on Bluetooth and choose to connect to "HTC NE71".	Basic operations 	Key functions - Play/Pause: Tap either earphone once. - Volume up: Tap the right earphone twice. - Volume down: Tap the left earphone twice. - Play previous track: Tap the left earphone three times. - Play next track: Tap the right earphone three times. - Answer/End call: Tap either earphone once. - Reject call: Press and hold either earphone for two seconds. - Activate voice assistant: Press and hold the left earphone for two seconds. - Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode). - Note: Mode switching is disabled when you're using a single earphone only. - Headphone Controls (Doxyin Interface: P16) Indicator LEDs <table border="1"> <thead> <tr> <th>Earphone LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking white and cyan</td> <td>Both earphones: Powered on Single earphone: Unpaired</td> </tr> <tr> <td>Off</td> <td>Paired or fully charged</td> </tr> </tbody> </table>	Earphone LED	Status	Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired	Off	Paired or fully charged	How to reset the earphones If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history. 	Case display: Basic operations  Turn on display - Open the charging case lid. - Double-tap the earbud display. - Press the multifunction button once. Turn off display Press the multifunction button twice to turn off the display. The display automatically turns off after 30 seconds of inactivity. Note: Initial activation required for first-time use. Do any of the following: - Charge the charging case via the USB Type-C port. - Press and hold the multifunction button for three seconds.	Multifunction button operations  Status Icons Guide <table border="1"> <thead> <tr> <th>Icon</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Solid red</td> <td>APP Not Connected</td> </tr> <tr> <td>Solid green</td> <td>APP Connected</td> </tr> <tr> <td>Up arrow</td> <td>Status</td> </tr> <tr> <td>Solid red</td> <td>Case not connected to earphones</td> </tr> <tr> <td>Solid blue</td> <td>Case connected to earphones, earphones not connected to phone.</td> </tr> <tr> <td>Solid white</td> <td>Case connected to earphones, earphones paired to phone.</td> </tr> <tr> <td>Green lightning icon</td> <td>Earphone Charging</td> </tr> <tr> <td>Solid white</td> <td>Earphone in case (Case Closed)</td> </tr> <tr> <td>Down arrow</td> <td>Status</td> </tr> <tr> <td>Solid green</td> <td>Charging case is being charged</td> </tr> </tbody> </table>	Icon	Status	Solid red	APP Not Connected	Solid green	APP Connected	Up arrow	Status	Solid red	Case not connected to earphones	Solid blue	Case connected to earphones, earphones not connected to phone.	Solid white	Case connected to earphones, earphones paired to phone.	Green lightning icon	Earphone Charging	Solid white	Earphone in case (Case Closed)	Down arrow	Status	Solid green	Charging case is being charged	Multifunction button operations <table border="1"> <thead> <tr> <th>Status</th> <th>Operation</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>Screen-off</td> <td>Single press</td> <td>Screen-on</td> </tr> <tr> <td>Screen-saver</td> <td>Double press</td> <td>Screen-off</td> </tr> <tr> <td>Screen-on</td> <td>Single press</td> <td>Confirm/Enter</td> </tr> <tr> <td></td> <td>Double press</td> <td>Return</td> </tr> <tr> <td></td> <td>Rotate clockwise</td> <td>Slide down</td> </tr> <tr> <td></td> <td>Rotate CCW</td> <td>Slide up</td> </tr> <tr> <td></td> <td>Rotate clockwise</td> <td>Previous track</td> </tr> <tr> <td></td> <td>Rotate CCW</td> <td>Next track</td> </tr> <tr> <td></td> <td>Single press</td> <td>Play/Pause</td> </tr> <tr> <td></td> <td>Rotate clockwise</td> <td>Previous video</td> </tr> <tr> <td></td> <td>Rotate CCW</td> <td>Next video</td> </tr> <tr> <td></td> <td>Single press</td> <td>Like</td> </tr> </tbody> </table> Press once: Turn the screen on. Press twice: Turn the screen off. Press three times: Link earphones to charging case. Press and hold for two seconds: Open the system menu (About, Factory reset, Restart and Power off). Press and hold for ten seconds: Power on when frozen (to reset).	Status	Operation	Function	Screen-off	Single press	Screen-on	Screen-saver	Double press	Screen-off	Screen-on	Single press	Confirm/Enter		Double press	Return		Rotate clockwise	Slide down		Rotate CCW	Slide up		Rotate clockwise	Previous track		Rotate CCW	Next track		Single press	Play/Pause		Rotate clockwise	Previous video		Rotate CCW	Next video		Single press	Like
Earphone LED	Status																																																																								
Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired																																																																								
Off	Paired or fully charged																																																																								
Icon	Status																																																																								
Solid red	APP Not Connected																																																																								
Solid green	APP Connected																																																																								
Up arrow	Status																																																																								
Solid red	Case not connected to earphones																																																																								
Solid blue	Case connected to earphones, earphones not connected to phone.																																																																								
Solid white	Case connected to earphones, earphones paired to phone.																																																																								
Green lightning icon	Earphone Charging																																																																								
Solid white	Earphone in case (Case Closed)																																																																								
Down arrow	Status																																																																								
Solid green	Charging case is being charged																																																																								
Status	Operation	Function																																																																							
Screen-off	Single press	Screen-on																																																																							
Screen-saver	Double press	Screen-off																																																																							
Screen-on	Single press	Confirm/Enter																																																																							
	Double press	Return																																																																							
	Rotate clockwise	Slide down																																																																							
	Rotate CCW	Slide up																																																																							
	Rotate clockwise	Previous track																																																																							
	Rotate CCW	Next track																																																																							
	Single press	Play/Pause																																																																							
	Rotate clockwise	Previous video																																																																							
	Rotate CCW	Next video																																																																							
	Single press	Like																																																																							
Case display: Feature overview Lock screen  Swipe to unlock the screen. Menu (Gear style)  Tap an item to access its options.	Music  Make sure your earphones are connected to your phone and the TikTok app is open. For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch. TikTok  Functions after enabling Headphone Controls - Tap touch area on any earbud: Single press: Next interface; Double press: Previous interface; Long press: Like. - Note: Auto-disable in case (default). Switch to the previous video Like the current video Switch to the next video This feature only works with the TikTok app and may not be compatible with all phone models.	AI Translation  Displays translated content synchronized with the connected app. Equalizer  Switch between the preset equalizer settings. Voice Assistant  Tap to activate your phone's voice assistant.	Find My Earbuds  Tap L or R, depending on which earbuds you want to find. Tap again when you find the earbuds to stop the beep. Camera  Make sure your earphones are connected to your phone. Tap to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models.	Game  Birds: Tap the screen to navigate the bird through the obstacles. Settings  Tap an item to access its options.	System menu  Check device details, perform a factory reset, restart, or power it off. Display  Brightness: Swipe up or down. Sleep timer: Swipe left to select a time for the screen to turn off when left idle.	Dial setting																																																																			