

# SerenLife



**SLFNST65AS**

**omni-directional  
oscillating fan**

---

**user manual**

visit our website



**SCAN ME**

[serenlifehome.com](http://serenlifehome.com)

# PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

## Table of Contents

|                                  |    |
|----------------------------------|----|
| FEATURES AND TECHNICAL SPECS     | 03 |
| IMPORTANT SAFETY INSTRUCTIONS    | 04 |
| PRODUCT OVERVIEW                 | 05 |
| CONTROL PANEL                    | 05 |
| USING THE REMOTE CONTROL         | 06 |
| BATTERY REPLACEMENT INSTRUCTIONS | 06 |
| ASSEMBLY INSTRUCTIONS            | 07 |
| OPERATION INSTRUCTIONS           | 07 |
| TROUBLESHOOTING                  | 08 |
| CLEANING AND MAINTENANCE         | 09 |
| REGISTER PRODUCT                 | 09 |

**Please note:** The images of the product, accessories, and user interface in this manual are for reference only. The actual product may differ slightly.

### CALIFORNIA PROP 65 WARNING

#### **WARNING:**

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

## **WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



## Unique Elements:

- Pure Copper DC Motor
- Ambient Lighting

## Features:

- 90° Vertical and 60° Horizontal Oscillation for Even Room Cooling
- 45W DC Motor Delivers 510 CFM for Efficient Drying and Air Circulation
- 6 Adjustable Speed for Personalized Airflow
- 12-hour Timer for Automatic Shut-off
- Wind Blade Ambient Light with Calming LED Glow
- LED Control Panel
- Remote Control Function
- Integrated On/Off Button
- Minimal Assembly Required
- Quiet Operation (≤50 dB) for Minimal Disruption
- Compact and Sleek Design
- Manual and Remote Controls for Convenience
- Ideal for Home, Office, Bedroom, or Living Room Use

## What's in the Box:

- Oscillation Fan
- Remote Control

## Construction Materials:

- Body: Durable PP (Polypropylene) Plastic
- Fan Blades: High-quality PP Plastic
- Base: Anti-slip Rubber Feet for Stability

## Technical Specs:

- Speed Settings: 6
- Modes: F1, F2, F3, F4, F5, F6
- Rated Power: 45W
- Voltage: 120V, 60Hz
- Airflow: 510 CFM
- Oscillation: 90°Vertical and 60°Horizontal Oscillation
- Noise Level: ≤50 dB at Low Speed
- Timer: 12-hour Programmable Timer for Auto Shut-off
- Wind Blade Ambient Light: Soft LED Lighting for a Calming Effect
- Power Cord Length: 5 ft.
- Battery-Operated Remote Control Requires (1) × 'CR2025' Battery, (1) Battery Included
- Airflow Volume: 200 m³/h
- Plug Type: US 2-prong Plug
- Item Weight: 8.05 lbs
- Product Dimensions (L x W x H): 12.9 x 12.9 x 44.3 Inches

 
**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING OR MAINTAINING THIS FAN**  
**KEEP THIS MANUAL FOR FUTURE REFERENCE**

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using electrical appliances, basic safety precautions should always be followed:**

1. To avoid electric shock, do not immerse the appliance, its plug, or power cord in water or any other liquid.
2. This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed in the safe use of the appliance and understand the hazards involved. Children must not play with the appliance.
3. Always disconnect the power plug when the fan is not in use, when moving it, or before cleaning or performing maintenance. When disconnecting, hold the plug and pull it directly from the outlet. Never pull the cord.
4. Do not place the fan or any part of it near open flames, cooking appliances, or other heating sources. Avoid contact with the guard while the fan is in operation.
5. Always use the fan on a dry, level surface.
6. Do not install the fan on a wall or suspend it from the ceiling.
7. Do not operate the fan if the guard is not properly installed.
8. Do not insert objects or allow fingers to enter the fan guard or come into contact with moving parts.
9. If the power cord or any component of the appliance is damaged, it must be replaced with a special cord or components supplied by the manufacturer or a similarly qualified person.
10. Ensure the appliance is powered off before removing the protective guard.
11. The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities unless supervised or instructed by a responsible person.
12. Cleaning and user maintenance must not be performed by children without supervision.


# PRODUCT OVERVIEW

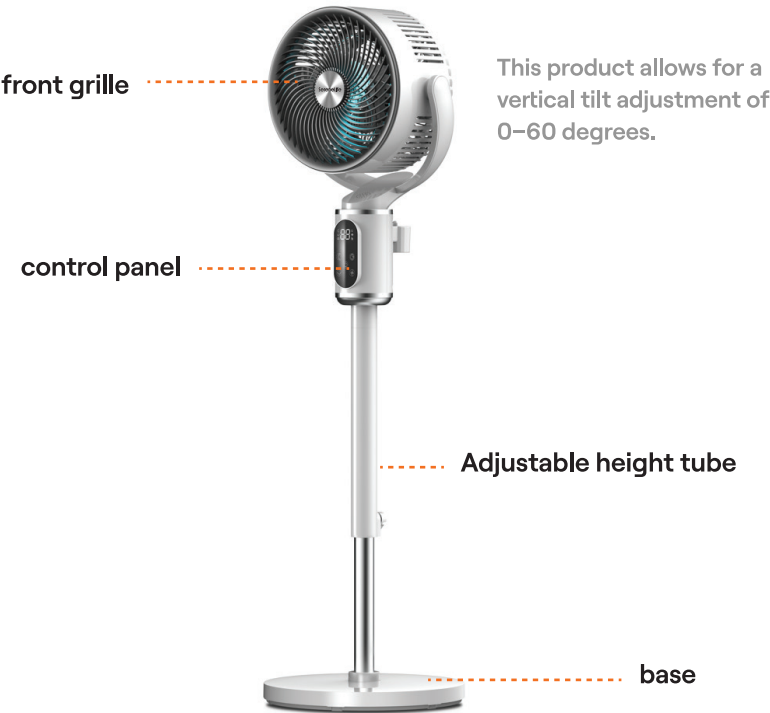

## CONTROL PANEL

The control panel includes:

 - 1. Power button
- 2. Speed settings
- 3. Timer function
- 4. Vertical Oscillation control
- 5. Horizontal Oscillation control
- 6. Mode
- 7. Display screen

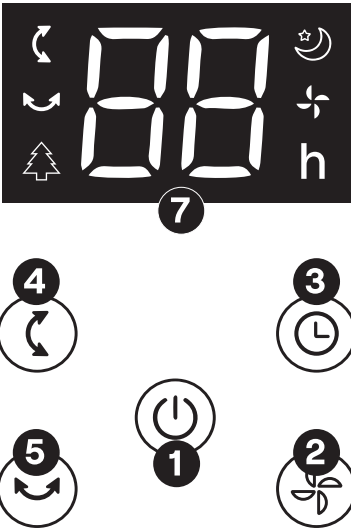


## USING THE REMOTE CONTROL

Before using the remote control, remove the insulation film from the battery compartment.


### Button Functions:

 - Power On/Off
- Speed Adjustment
- Oscillation Control
- Timer Setting
- Mode Control

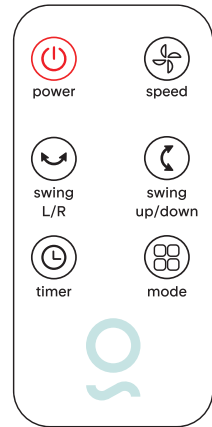

## BATTERY REPLACEMENT INSTRUCTIONS

 1. Open the battery compartment.
2. Insert the battery with the correct polarity.
3. Close the compartment securely.

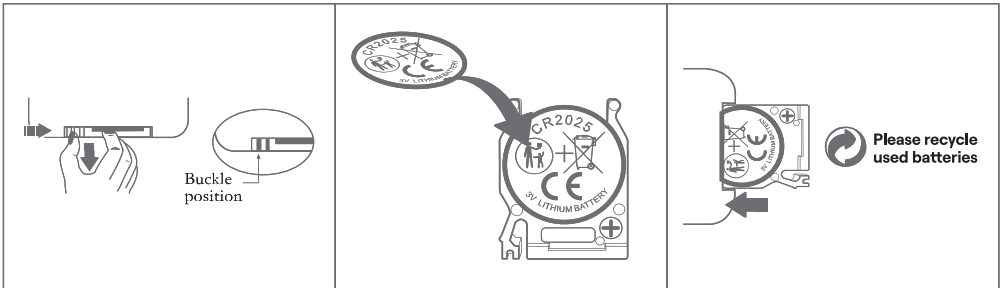


### Precautions for the Remote Control:

1. Do not charge this battery.
2. Keep out of reach of children. Consult a doctor immediately if swallowed.
3. Always point the remote control at the heater's display when operating the heater using the remote control.
4. Keep the remote control away from other electrical appliances to prevent misoperation due to frequency overlap.
5. Using the button on the appliance or the remote control to turn off the product does not completely disconnect it from power. Unplug the product from the wall outlet if it will not be used for an extended period.
6. Remove the batteries from the remote control if the product will not be used for an extended period.

## ASSEMBLY INSTRUCTIONS

 1. Insert the lower tube into the base and secure tightly.
2. Attach the upper tube to the lower tube and adjust the height as needed.
3. Mount the fan head onto the upper tube and ensure it is firmly fixed.
4. Confirm that all parts are securely assembled before operation.

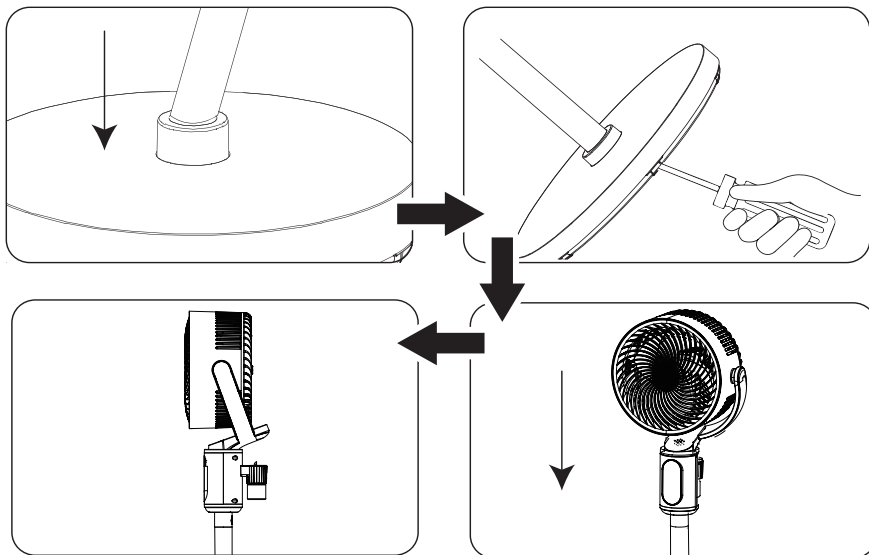

## OPERATION INSTRUCTIONS

### **Vertical and Horizontal Oscillation Button:**

Press the oscillation button to activate side-to-side movement. Press again to stop oscillation.

### **Mode:**

Select your desired mode: **Normal** or **Sleep**.

### **Timer Setting (1-12 Hours):**

Press the timer button to set the desired operating time. Each press increases the timer duration.

### **Speed Settings (Low / Medium / High):**

Press the speed button to cycle through the available fan speeds.

### **On/Off button:**

When you turn on the fan, you will hear a beep. The fan will start at speed F3 by default. Press this button again to put the fan into standby mode.

### **Fragrance Function**

Ensure the fan is powered off and stable. Gently rotate the decorative panel counterclockwise to remove it. Place a few drops of fragrance oil onto the fragrance pad, then reattach the decorative panel to the front grille and rotate clockwise to secure it.

**Caution:** Prevent fragrance oil from contacting any parts other than the fragrance container (e.g., the front grille, rear grille, or decorative panel), as this may cause damage. If contact occurs, clean the area immediately with a dry cloth to remove any residue.

### **Auto Screen Off**

The display will enter sleep mode after 3 minutes of inactivity. Press any button (except the Power button) to wake the display.

### **Memory Function**

This product features a memory function. If the unit is in standby mode but still connected to power, it will remember its last operational settings and resume with those settings when powered on.

## **TROUBLESHOOTING**

### **Fan does not operate**

- **Possible Cause:** Power not connected
- **Solution:** Check the power supply

### **Weak airflow**

- **Possible Cause:** Low speed setting
- **Solution:** Increase the speed

### **Unusual noise**

 
- **Possible Cause:** Loose parts
- **Solution:** Tighten components

## CLEANING AND MAINTENANCE

- Always unplug the unit before cleaning and allow it to cool completely to prevent damage.
- Use a soft cloth dampened with a mild, neutral detergent (wring out excess water) to wipe the fan clean.
- Do not use abrasive tools or solvents that could damage the product's surface.
- Ensure the unit is completely dry and all parts are correctly reinstalled before using it again.

### Cleaning the Fragrance Container and Pad

1. Decorative panel
2. Fragrance container
3. Fragrance pad

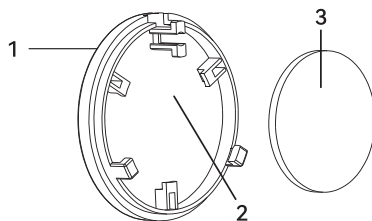

- If the fragrance function has not been used for an extended period, clean the fragrance container and pad before adding new fragrance oil.
- Remove the decorative panel that houses the fragrance container.
- Take out the fragrance pad from the container, rinse it thoroughly with clean water, and let it air dry completely.
- Place the dried fragrance pad back into the fragrance container and reattach the decorative panel to its original position.



**DISPOSAL** Do not dispose of this product with household waste. Please follow local regulations for recycling electrical appliances.

**DECLARATION:** This product complies with applicable safety and environmental regulations.

**IMPORTANT NOTES:** Improper use may result in damage or injury. Always follow installation and operating instructions. The manufacturer is not responsible for damage caused by misuse.

## Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

**Start Here**



[SereneLifeHome.com/pages/register](https://serenelifehome.com/pages/register)



## questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)