

Panasonic®

Operating Instructions (Household use) Rechargeable Shaver

Model No. ES-ALT4B
ES-LT4B

Contents

Safety precautions	4	FAQ	16
Important information	7	Troubleshooting	17
Parts identification	8	Battery life	20
Preparation	8	Removing the built-in rechargeable battery	20
How to use	10	Specifications	21
Cleaning the shaver	13		
Replacing the system outer foil and the inner blades	15		



Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

WARNING

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The supply cord cannot be replaced. If the cord is damaged, the AC adaptor should be scrapped.

- This WET/DRY shaver can be used for wet shaving using shaving lather or for dry shaving. You can use this watertight shaver in the shower and clean with water. The following symbol means suitable for use in a bath or shower.



- Do not use anything other than the supplied AC adaptor for any purpose. Also, do not use any other product with the supplied AC adaptor. (See page 8.)
- The following symbol indicates that a specific detachable power supply unit is required for connecting the electrical appliance to the supply mains. The type reference of power supply unit is marked near the symbol.





Safety precautions


Make sure to follow these instructions.

To prevent accidents, injuries or damage to property, please follow the instructions below.


■ **The following chart indicates the degree of damage caused by improper operation.**


 **DANGER** Indicates a potential hazard that will result in serious injury or death.

 **WARNING** Indicates a potential hazard that could result in serious injury or death.

 **CAUTION** Indicates a potential hazard that could result in minor injury or property damage.

■ **The symbols are classified and explained as follows.**

 This symbol indicates prohibition.

 This symbol indicates requirement that must be followed.

WARNING

► **This product**

This product has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use, leave, or store in a high temperature environment.



- Doing so may cause overheating, ignition, or explosion.

Do not modify or repair.



- Doing so may cause fire, electric shock, or injury.

Contact an authorized service centre for repair (replacement of battery etc).



Never disassemble except when disposing of the product.

- Doing so may cause fire, electric shock, or injury.

► **In case of an abnormality or malfunction**

Immediately stop using and remove the AC adaptor.

- Failure to do so may cause fire, electric shock, or injury.

<Abnormality or malfunction cases>




- **The main unit, adaptor or cord is deformed or abnormally hot.**
- **The main unit, adaptor or cord smells of burning.**
- **There is an abnormal sound during use or charging of the main unit.**

- Immediately request inspection or repair at an authorized service centre.

WARNING


► **Power supply**

-  **Do not connect or disconnect the adaptor to a household outlet with a wet hand.**
- Doing so may cause electric shock or injury.


Do not immerse the AC adaptor in water or wash with water.


Do not place the AC adaptor over or near water filled sink or bathtub.


Never use the appliance if the AC adaptor is damaged or if the power plug fits loosely in a household outlet.

-  **Do not damage the cord or the power plug.**
 - **Do not deface, modify, forcefully bend or pull the cord or the power plug. Also, do not place anything heavy on, twist or pinch the cord.**
- Doing so may cause electric shock or fire due to a short circuit.


Do not use in a way that would exceed the rating of the household outlet or the wiring.

-  - Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.

-  **Fully insert the power plug.**
- Failure to do so may cause fire or electric shock.


-  **Disconnect the AC adaptor when cleaning the main body with water.**
- Failure to do so may cause electric shock or injury.

Regularly clean the power plug and the appliance plug to prevent dust from accumulating.


-  - Failure to do so may cause fire due to insulation failure caused by humidity.

► **Preventing accidents**

Do not place within reach of children or infants. Do not let them use it.

-  - Putting parts or accessories in the mouth may cause an accident or injury.


If oil is consumed accidentally, do not induce vomiting, drink a large amount of water and contact a physician.

-  **If oil comes into contact with eyes, wash immediately and thoroughly with running water and contact a physician.**
- Failure to follow these instructions may result in physical problems.

CAUTION

► **Protecting the skin**

Do not use excessive pressure to apply the system outer foil to your lip or other part of your face.

-  **Do not apply the system outer foil directly to blemishes or injured skin.**
Do not touch the blade section (metallic section) of the inner blade.
- Doing so may cause injury to skin or hand.

CAUTION

Do not forcefully press the system outer foil. Also, do not touch the system outer foil with fingers or nails when in use.



Do not use this product for hair on head or any other part of the body.

- Doing so may cause injury to skin or reduce the life of the system outer foil.



Check the system outer foil for cracks or deformations before use.

- Failure to do so may cause injury to the skin.

► Note the following precautions

Do not allow metal objects or trash to adhere to the power plug or the appliance plug.



- Doing so may cause electric shock or fire due to a short circuit.



Do not share your shaver with your family or other people.

- Doing so may result in infection or inflammation.

Disconnect the adaptor from the household outlet when not charging.



- Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.

Handling of the removed battery when disposing



DANGER

- The rechargeable battery is exclusively for use with this appliance. Do not use the battery with other products.
 - Do not charge the battery after it has been removed from the product.
 - Do not throw into fire or apply heat.
 - Do not hit, disassemble, modify, or puncture with a nail.
 - Do not let the positive and negative terminals of the battery get in contact with each other through metallic objects.
 - Do not carry or store the battery together with metallic jewellery such as necklaces and hairpins.
 - Do not use or leave the battery where it will be exposed to high temperatures, such as under direct sunlight or near other sources of heat.
 - Never peel off the tube.
- Doing so may cause overheating, ignition, or explosion.



WARNING

After removing the rechargeable battery, do not keep it within reach of children and infants.



- The battery will harm the body if accidentally swallowed.

If this happens, consult a physician immediately.

If the battery fluid leaks out and comes in contact with the eyes, do not rub the eyes, and thoroughly rinse with clean water, such as tap water.



- Failure to do so may cause eye injury.

Consult a physician immediately.

CAUTION

If the battery fluid leaks out and comes in contact with the skin or clothes, rinse off with clean water, such as tap water.



- Failure to do so may cause inflammation.

Important information

- Treat yourself to wet lather shaves for at least three weeks and notice the difference. Your Panasonic WET/DRY shaver requires a little time to get used to because your skin and beard need about a month to adjust to any new shaving method.
- Keep both the inner blades inserted. If only one of the inner blades is inserted, the shaver may be damaged.

- If you clean the shaver with water, do not use salt water or hot water. Do not soak the shaver in water for a long period of time.
- Charge the appliance correctly according to these Operating Instructions. (See page 8 "Charging the shaver".)
- This appliance contains battery that is only replaceable by skilled persons. Please contact an authorized service centre for the details of repair.

Note the following precautions

► When using

- Do not bring the system outer foil into contact with hard objects.
Doing so may damage the system outer foil as it is very thin and deforms easily.
- Do not drop or hit against other objects.
Doing so may cause injury.

► When storing

 
- Store the shaver in a place with low humidity after use.
Failure to do so may cause malfunction due to condensation or rust.
- Be sure to place the protective cap on the shaver when carrying around or storing.
Failure to do so may cause injury to skin or reduce the life of the system outer foil.

► When cleaning

- Do not dry using heat from a dryer or other appliance.
Doing so may cause malfunction or deformation of the parts.

- Do not leave the shaver exposed to direct sunlight with the foil frame detached. Doing so may deteriorate the waterproof rubber and degrade waterproof function, which may cause to malfunction.

Parts identification

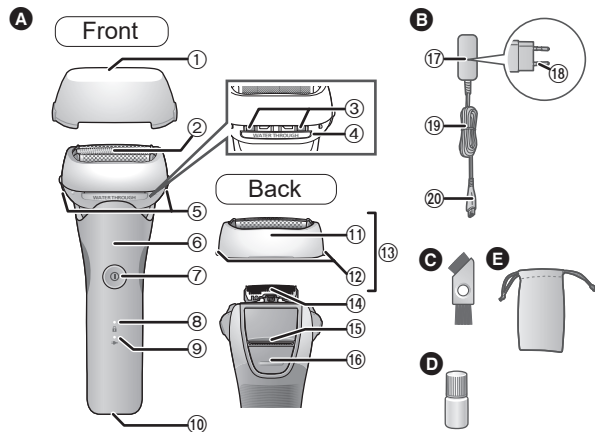

A Main body

- ① Protective cap
- ② System outer foil
- ③ Water inlets
- ④ Cleaning shutter
- ⑤ Foil frame release buttons
- ⑥ Finger rest

⑦ Power switch

To turn the shaver on and off and also lock and unlock the power switch.

- ⑧ Switch lock lamp (🔒)
- ⑨ Charge status lamp (➔)

- ⑩ Appliance socket
- ⑪ Foil frame
- ⑫ System outer foil release buttons
- ⑬ Outer foil section
- ⑭ Inner blades
- ⑮ Trimmer
- ⑯ Trimmer handle

B AC adaptor (RE7-87)

- ⑰ Adaptor
- ⑱ Power plug
- ⑲ Cord
- ⑳ Appliance plug

Accessories

C Cleaning brush

D Oil

E Travel pouch

ES-ALT4B


Preparation

Charging the shaver

- Turn the shaver off.
- Wipe off any water droplets on the appliance socket.

- 1 Insert the appliance plug into the shaver.**
- 2 Plug in the adaptor into a household outlet.**

- Check that the charge status lamp (➔) is glowing.
- Charging is completed after approx. 1 hour.

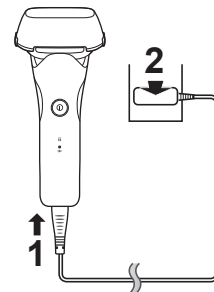

3 Disconnect the adaptor after charging is completed and the charge status lamp (→) turns off.




Note

You cannot operate the shaver while charging.

Quick charge

Even though the battery runs out, you can shave once after 3-minute charge.

(This will differ depending on usage.)

<p>While charging</p>  <p>The charge status lamp (→) glows red.</p>	<p>After charging is completed</p>  <p>The charge status lamp (→) turns off.</p>	<p>Abnormal charging</p>  <p>The charge status lamp (→) will blink twice every second.</p>
--	---	---

- After charging is completed, turning the power switch ON with the shaver plugged in will cause the charge status lamp (→) to light up and then turn off after 5 seconds.
This shows that the shaver is fully charged.
- When charging the shaver for the first time or when it has not been in use for more than 6 months, the charging time may change or the charge status lamp (→) may not glow for a few minutes. It will eventually glow if kept connected.

- Recommended ambient temperature for charging is 10 °C – 35 °C. It may take longer to charge or the battery may fail to charge properly in extremely high or low temperatures.

The charge status lamp (→) will blink twice every second when there is a problem with charging.
Charge the shaver within the recommended ambient temperature range.

- The shaver can be used for approximately 2 weeks with a full charge. (Based on one 3-minute dry-shave usages per day in an ambient temperature range of 20 °C – 30 °C.)

The number of usable days varies depending on the following conditions.

- Beard thickness
- Pressure applied to the skin
- Usage of wet shaving
- Usage in shaving foam mode
- If there is noise from the radio or other sources while using or charging the appliance, move to a different location to use the appliance.

How to use

► Usable facial cleansers, etc.

		Shaving	Shaving foam mode
Shaving agent	Shaving foam	✓	—
	Shaving gel	✓	✗
	Shaving cream	✗	✗
Facial cleanser	Facial cleansing foam (without scrubbing compounds)	✓	✓
	Facial cleansing foam (with scrubbing compounds)	✗	✗
	Facial soap	✓	✗
Body soap etc.	Liquid	✓	✓
	Foam	✓	—

- Do not use anything other than above listed shaving agent/facial cleanser/body soap etc. as these may cause the blades to clog, or be unable to make foam.


Making foam in shaving foam mode

It is easier to make foam this way than by hand.

- 1 Take an appropriate amount of facial cleanser etc. in the palm of your hand.**



- 2 Add an appropriate amount of water or hot water.**

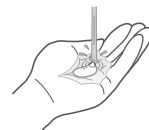


- 3 Check that the cleaning shutter is closed and hold the power switch for 2 seconds or more to switch to shaving foam mode.**



The switch lock lamp (🔒) and charge status lamp (➡) blink alternately.




- The shaving foam mode ends after 15 seconds. The shaver can then be used to shave.
- To stop using the shaving foam mode and start shaving, press the power switch once.

- When the switch lock lamp () blinks after the power switch is pressed, the shaver will not operate as it is locked. Hold the power switch for more than 2 seconds to unlock. (See page 13.)

4 Press the blades gently in the palm of your hand, mix the facial cleanser etc. around and move the blades up and down to make foam.

- If there is insufficient foam, add slightly more water, hot water or facial cleanser etc. to make it easier to create foam.

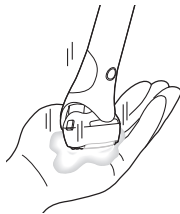

► Notes

- Do not use shaving agent (excluding foam), facial cleansing foam (with scrubbing compounds) or soap as these may cause the blades to clog, or be unable to make foam.

Shaving beard

- Before shaving, check that the cleaning shutter is closed.

1 Press and shave.


- The “shaving sensor”, which automatically adjusts the power depending on the beard thickness, will operate. It will shave with high power on areas where the beard is heavy, and reduce the power on areas where the beard is thin, to reduce burden on the skin.



Tips for better shaving


Apply the whole system outer foil perpendicularly against the skin and shave by slowly gliding the shaver over the face against the grain of the beard.


- The beard under the chin and around the throat can be shaved better by stretching the skin so the beard will stand.
- To prevent damaging the system outer foil, do not shave with only a part of the system outer foil.

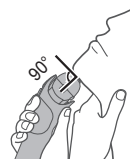

2 Press when finished.

When the battery capacity is low


The charge status lamp () blinks once every second when operating the shaver. The appliance beeps twice after switched off.

• You can shave 2 to 3 times after the charge status lamp () blinks. (This will differ depending on usage.)



► Using the trimmer


Slide the trimmer handle up. Place at a right angle to your skin and move downwards to trim your sideburns.

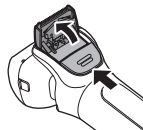

► Tips for better usage

Apply the trimmer edge perpendicular to skin gently and move downward slowly.

Trimming sideburns

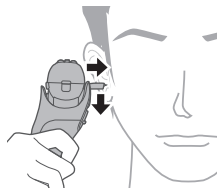

Pre-shave of long beards




► Notes



- After wet shaving, wash the main body with water and apply oil to the system outer foil.
- Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal.
- The shaving sensor may not respond depending on the type and quantity of the shaving gel or the quantity of the foam. This is not abnormal.
- The appliance may not operate in an ambient temperature lower than approximately 5 °C.
- To prevent erroneous operation, place your fingers on the finger rest while using the shaver.

Operation and display of the switch lock

► Locking the power switch

1. Press  once and then release.
 - The shaver starts operating.





2. Hold  for more than 2 seconds.
 - The switch lock lamp () will light up for 5 seconds and turn off.
 - The shaver will stop operating.




3. Release .




► Unlocking the power switch

1. Hold  for more than 2 seconds.
 - The switch lock lamp () will turn off.



2. Once the shaver starts operating, release .



- The power switch is locked when the switch lock lamp () blinks for 5 seconds and the shaver does not operate even though the power switch is pressed.

Cleaning the shaver

We recommend cleaning the shaver after each use.

Cleaning with water

- Turn the shaver off and disconnect the AC adaptor.

1. With the cleaning shutter closed, apply some hand soap and some water to the system outer foil.
2. Turn the shaver on and make foam for a few seconds.



There are two ways to clean the shaver, depending on the actual dirt level.

To remove light dirt


3. Slide the cleaning shutter until it clicks.
- The water inlets of the shaver head are opened.



4. Pour running water into the water inlets and rinse thoroughly, and then turn off.
- Pour running water into both water inlets.



- Rinse with water and shake up and down several times to remove the water, and then close the cleaning shutter.

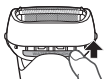

To remove heavy dirt

3. Turn the shaver off and remove the outer foil section. (See page 15.)
4. Clean the shaver and the outer foil section with running water.



- Rinse with water and shake up and down several times to remove the water.

5. Wipe off any drops of water with a dry cloth.

6. Dry the outer foil section, the shaver, and the trimmer completely.
- Allow the shaver to dry in the shade, avoid direct sunlight.



7. Lubricate the shaver.

It will keep the movement of the blade smooth and maintain a comfort shave.

1. Apply one drop of oil to each of the system outer foils.
2. Raise the trimmer and apply a drop of oil.
3. Switch the shaver on, and run it for approximately five seconds.
4. Switch off the shaver, and wipe off any excess oil from the system outer foil with a soft cloth.



► Notes

- Do not use any kitchen or bathroom detergents other than hand soap. Doing so may cause malfunction.
- Do not wipe with thinners, benzine, alcohol etc. Doing so may cause malfunction, cracking or discoloration of the parts.
- Be careful not to hit the main body on the sink or any other object while draining the water. Failure to do so may cause malfunction.


Cleaning with the brush

Remove the outer foil section and the inner blades.
(See this page.)

Do not use any brush other than the supplied one.


► Cleaning with the long brush

Clean the foil frame, system outer foil, the main body and the trimmer using the long brush.

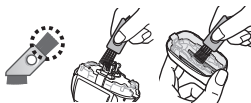

► Cleaning with the short brush

- Clean the inner blades using the short brush by moving it in direction as illustrated.
- Do not move the short brush perpendicularly against the blades as it will damage the inner blades and affect their sharpness.

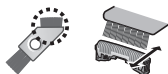


Replacing the system outer foil and the inner blades

system outer foil	once every year
inner blades	once every two years


► Removing the outer foil section

Press the foil frame release buttons and lift the outer foil section upwards.

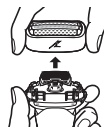


► Attaching the outer foil section

After turning the foil frame mark (⤵) to the front, securely attach the outer foil section to the shaver until it clicks.

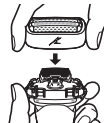


► Replacing the system outer foil

1. Press the system outer foil release buttons and pull down the system outer foil.
 - Do not press the system outer foil release buttons with excessive force. Doing so may bend the system outer foil, preventing complete attachment to the foil frame.
2. Align the foil frame mark (⤵) and the system outer foil mark (△) and securely attach together until it clicks.

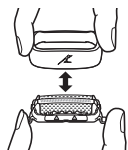

► Replacing the inner blades

1. Remove the inner blades one at a time.
2. Insert the inner blades one at a time.

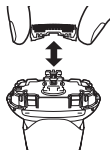

► Note

Do not throw away the foil frame.

► Replacement parts

Replacement parts are available at your dealer or Service Centre.

Replacement parts for ES-ALT4B/ES-LT4B	System outer foil and inner blades	WES9013
	System outer foil	WES9087
	Inner blades	WES9068
Lubrication oil		WES003P

FAQ

Question	Answer
Will the battery deteriorate if not used for an extended period of time?	► The battery will deteriorate if not used for over 6 months, so make sure to perform a full charge at least once every 6 months.
Can I charge the shaver after every use?	► The battery used is a lithium-ion, so charging after every use will have no effect on battery life.
Why should the adaptor be disconnected after charge?	► Charging the battery for more than 1 hour will not affect battery performance, but disconnect the adaptor for safety and to save energy.
What is the constituent of the dedicated oil?	► Constituent of the oil is liquid paraffin.
Why does the appliance beep twice after switched off?	► The sound indicates that the battery capacity is running low. Please charge the appliance.

Troubleshooting

Perform the following actions.
If the problems still cannot be solved, contact the store where you purchased the unit or a service centre authorized by Panasonic for repair.

Problem	Action
The power switch does not turn ON.	▶ Unlock the switch lock. (See page 13.)
The power will not switch to OFF.	▶ Press the power switch twice while using in shaving foam mode.

Problem	Action
The shaving sensor does not respond.	▶ Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal.
	▶ The shaving sensor may not respond depending on the type and quantity of the shaving gel. This is not abnormal.
	▶ The shaving sensor may not respond when the remaining battery capacity is low. If this happens, recharge the shaver.
	▶ Apply oil. (See page 14.) ▶ The shaving sensor may not respond when there is not enough oil on the blades.

Problem	Action
The shaving sensor responds even though the shaver is not in contact with the skin.	<p>Clean the beard trimmings from the shaver. When the shaver is very dirty, first use the cleaning brush to remove beard trimmings. Or, remove the foil frame and wash with water. (See page 14.)</p> <p>▶</p> <p>Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades:</p> <p>▶ System outer foil: Approximately 1 year Inner blades: Approximately 2 years</p>
Foam cannot be made in shaving foam mode.	<p>▶ Making foam may be difficult depending on the type of facial cleansers etc., so adjust the amount of water or facial cleanser.</p>
Foam made in shaving foam mode contains shavings.	<p>▶ Before making foam, cleanly rinse off any shavings. (See page 13.)</p>

Problem	Action
The shaver cannot be charged.	<p>▶ The recommended temperature for charging is 10 °C – 35 °C. If charged at a temperature other than the recommended temperature, the shaver may take longer to charge or may not charge at all.</p>
Operating time is short even after a full charge.	<p>▶ The shaver can be used for about 2 weeks on a full charge assuming dry-shaving for 3 minutes per day. However, the usable number of days may be reduced depending on how the shaver is used (for example, use in shaving foam mode, wet shaving, or use in low temperatures).</p> <p>▶ Apply oil.</p> <p>▶ When the number of operations per charge starts to decrease, the battery is nearing the end of its life.</p>

Problem	Action
Shaver does not operate even after charging.	▶ Use the appliance in an ambient temperature approximately 5 °C or higher.
	▶ The battery has reached the end of its life.
	▶ The shaver will not operate with the AC adaptor connected. Please use the shaver after it has been sufficiently charged and the AC adaptor disconnected.
The driving sound changes while shaving.	▶ The shaving sensor is operating. The sound changes depending on the beard thickness.
Makes a loud sound.	▶ Apply oil. The blades will not move smoothly when there is no oil on the blades, requiring more power.
	▶ The shaver makes a high-pitched sound due to the linear motor drive. This does not indicate a problem.
	▶ Confirm that the blades are properly attached.
	▶ Clean the system outer foil with the brush.

Problem	Action
The odor is getting stronger.	▶ This can be improved by cleaning every time after shaving.
Shavings fly out in all directions.	▶ This can be improved by cleaning every time after shaving.
	▶ Clean the inner blades with the brush when shavings are adhering to the inner blades.
	▶ Confirm that the cleaning shutter is firmly closed.
System outer foil gets hot.	▶ Apply oil.
	▶ Replace the system outer foil if it is damaged or deformed. (See page 15.)
You do not get as close a shave as before.	▶ Apply oil.
	▶ This can be improved by cleaning every time after shaving.
	▶ Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades:
	▶ System outer foil: Approximately 1 year Inner blades: Approximately 2 years

Problem	Action
The shaver cannot be properly cleaned even after water is poured from the water inlets.	When the shaver is very dirty, first use the cleaning brush to remove beard trimmings. Or, remove the foil frame and wash with water. (See page 14.)

Battery life

The life of the battery is 3 years. The battery in this shaver is not intended to be replaced by consumers. Have the battery replaced by an authorized service centre.

Removing the built-in rechargeable battery


Remove the built-in rechargeable battery before disposing of the shaver.

The battery is to be disposed of safely. Please make sure that the battery is disposed of at an officially designated location if there is one.

This figure must only be used when disposing of the shaver, and must not be used to repair it. If you dismantle the shaver yourself, it will no longer be waterproof, which may cause it to malfunction.

- Remove the shaver from the AC adaptor.
- Press the power switch to turn on the power and then keep the power on until the battery is completely discharged.

- Perform steps ① to ⑤ and lift the battery, and then remove it.
- Take care not to short circuit the positive and negative terminals of the removed battery, and insulate the terminals by applying tape to them.

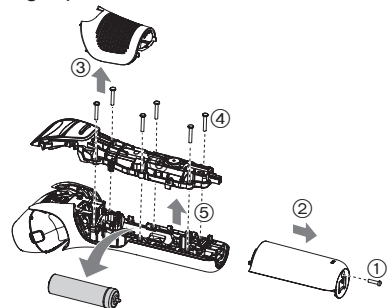

For environmental protection and recycling of materials

This shaver contains a Lithium-ion battery. Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

Specifications

Power source	See the name plate on the AC adaptor. (Automatic voltage conversion)
Motor voltage	3.6 V ---
Charging time	Approx. 1 hour
Airborne Acoustical Noise	In shaving mode: 60.0 (dB (A) re 1 pW) In trimmer mode: 64.0 (dB (A) re 1 pW)

This product is intended for household use only.

For more information about the energy efficiency of the product, please visit our website, www.panasonic.com, and enter the model number in the search box.

Disposal of Old Equipment and Batteries Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol)

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Panasonic Corporation
<https://www.panasonic.com>
© Panasonic Corporation 2023