



## **37" Bluetooth Wireless Sound Bar**

*User's Guide for Model ITB376B v3555-01*

For the most up-to-date version of this User's Guide, go to [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

# Safety Instructions & Warnings

---

## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



## FCC Warnings

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

---

## Battery Warnings

- **WARNING:** Do not ingest the battery, Chemical Burn Hazard.
- If the remote control supplied with this product contains a coin/button cell battery and the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside and part of the body, seek immediate medical attention.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION**  
RISQUE D'ÉLECTROCUTION  
NE PAS OUVRIER

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



**WARNING :** Risk of cancer and reproductive harm from exposure to DEHP.  
See [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# Overview

---

## Features & Specifications

 
- 37" length
- Supports Bluetooth
- Wireless range: 60 ft.
- 2 channel stereo sound
- Digital volume control
- Full-function remote
- AUX In (3.5mm audio input)
- USB play
- HDMI IN (ARC)
- Remote learning

## Includes

- Remote control with 2 AAA batteries
- HDMI cable
- AC/DC power adapter
- Wall-mount hardware
- User's Guide


# Overview

## Power

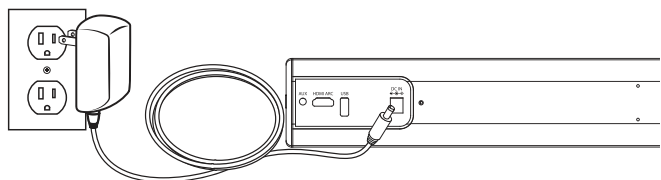

Connect the AC/DC power adapter to the DC power input on the soundbar then plug into a standard power outlet.

## Speaker Controls (Right Side)

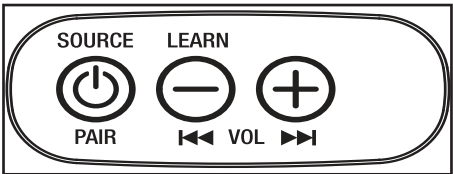 


**Source/Power/Pair**  
Press to turn the unit ON  
Press and hold to turn the unit OFF.  
When on, press to switch between HDMI, USB, Aux In, and Bluetooth modes.  
Press twice to disconnect from Bluetooth devices.

**Learn/Previous/Volume -**  
Press to adjust volume down.  
Press and hold to skip tracks in Bluetooth and USB modes.  
In standby mode, press to enter remote learning mode.

**Previous/Volume +**  
Press to adjust volume up.  
Press and hold to skip tracks in Bluetooth and USB modes.

## Speaker Inputs - Detail

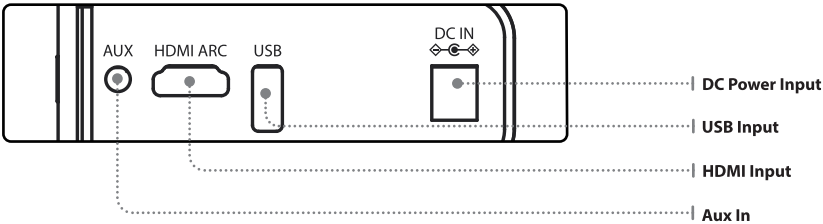 

## LED Indicator Meanings

| Source or Setting   | LED Indicator Color |
|---------------------|---------------------|
| Power Off           | Red                 |
| Bluetooth Pairing   | Flashing Blue       |
| Bluetooth Connected | Blue                |
| USB                 | Purple              |
| HDMI                | White               |
| Aux In              | Green               |

# Remote

**Power**  
Press to power the unit on or off.

**BT**  
Press to enter Bluetooth mode

**HDMI**  
Press to enter HDMI mode

 
**Bass**  
Press to increase/decrease  
bass levels.

**Prev**  
In Bluetooth or USB mode, press  
to go back to the previous track.

**Volume +/-**  
Press to adjust the volume.

**Play/Pause**  
Press to play or pause  
a chapter or track.

**EQ**  
Press to cycle sound balance  
modes between Music,  
Movie, and Dialog, mode.

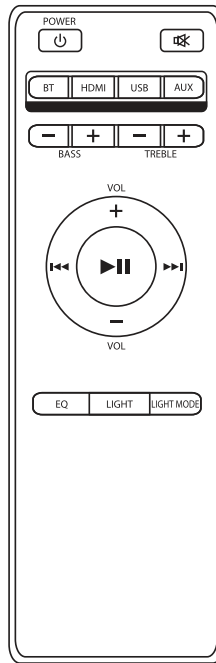

**Mute**  
Press to mute the volume.  
Press and hold for 5 seconds to  
turn voice prompts ON/OFF.

**USB**  
Press to enter USB mode  
(with USB drive inserted).

**Aux**  
Press to enter AUX mode.

**Treble**  
Press to increase/decrease  
treble levels.



**Skip**  
In Bluetooth or USB mode,  
press to go to the next track.

**Light**  
Press to turn LED lights on/off.

**Light Mode**  
Press to cycle through  
LED light effects.

## Remote Batteries

  Requires 2 AAA-size batteries (included).

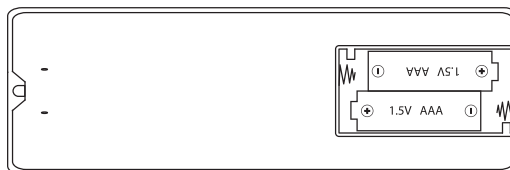

# Media Playback

---

## Pairing a Bluetooth Device for the First Time

1. When powered on, the soundbar will enter Bluetooth Mode automatically. To enter Bluetooth Mode from another mode, press the **Source/Power/Pair** button on the sound bar or press the **BT** button on the remote. A voice will say, "Bluetooth", and the LED indicator will slowly flash blue. When pairing, remain within 3 feet of the Bluetooth device.
2. Using the controls on your Bluetooth device, select **ITB376** in the Bluetooth Settings to pair. If need be, refer to the user's manual for your specific device for more information.
3. When successfully paired, a voice will announce, "Bluetooth is connected", and the LED indicator will turn solid blue. Audio from the connected Bluetooth device will now be heard through the soundbar.
4. Use the soundbar controls or the connected Bluetooth device to play, pause, and adjust the volume level.
5. After initial pairing, the soundbar will automatically connect to the last Bluetooth device used when powered on.

**Note:** If your device should become unpaired, the soundbar will beep. Press the **Source/Power/Pair** button on the soundbar two times to manually enter to Pairing Mode.

## HDMI (ARC)

Requires an HDMI cable (included).

1. Connect the **HDMI cable** from the **HDMI Input** on the soundbar and the **HDMI (ARC) Output** on a tv or other audio transmitter.
2. Press the **Source/Power/Pair** button on the soundbar until setting the source to HDMI mode, or press the HDMI button on the remote.

**Note:** The TV must have ARC capabilities to support HDMI ARC. Check that the HDMI Output connection chosen supports ARC.

If there is no sound when your TV is connected to the soundbar please check the TV audio settings for the audio output and select the correct HDMI port setting, if necessary.

## Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In** on the soundbar and the audio output/headphone jack on an audio device.
2. Press the **Source/Power/Pair** button on the soundbar until setting the source to Aux Mode, or press the AUX button on the remote.
3. Use the controls on the connected device to select and play audio.

**Note:** If the playback volume through the soundbar is low, make sure the volume level on your connected device is turned up.

## USB

Supports USB drives up to 32GB.

1. Insert a USB drive into the **USB Input** on the soundbar.
2. Press the **Source/Power/Pair** button on the soundbar until setting the source to USB Mode, or press the USB button on the remote.
3. Use the controls on the soundbar or remote to select and play audio.

 
# Placement Instructions

## Placement.

- Place in a well-ventilated area to avoid a heat hazard.
- If placing the soundbar in an enclosed space, allow 2–3 inches of space between the top, sides, and rear of the soundbar and any nearby walls or shelves

## Attach Mounting Bracket

1. Remove the included screws from the back of the soundbar, then align the holes on the bracket to those holes.
2. Using a screwdriver, attach the bracket to the soundbar. Make sure the bracket is firmly in place, but be careful not to overtighten and damage the soundbar.

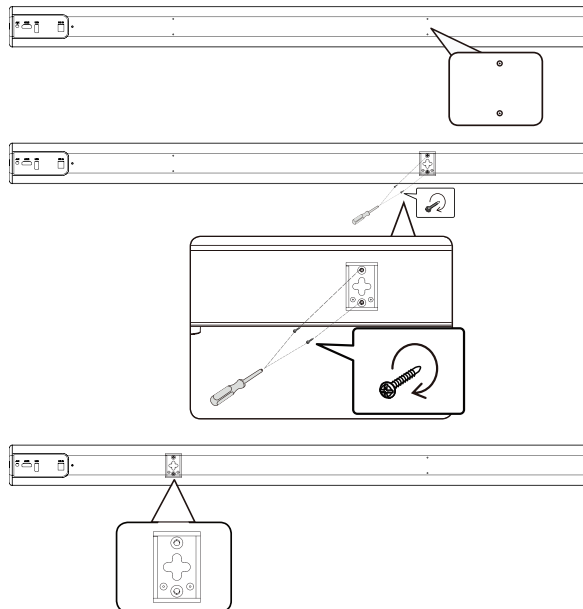

## Mounting on a Wall

This soundbar includes a mounting template for easy installation. Requires 2 wall anchors (for brick and concrete walls) and 2 screws (included).

1. Use a stud finder to locate studs behind the wall.
2. Line up the drill holes on mounting template to the wall studs and mark this spot.
3. Attach the screws to the wall depending on the wall material
  - **(Drywall)** Drill or screw the screws directly into the drill hole marks, leaving about 3mm or 1/8 inch distance between the screw head and the wall.
  - **(Brick or Concrete)** Pre-drill holes into the drill hole marks. Then, insert the wall anchors into the drilled holes using a hammer. Then, drill or screw the screws into the wall anchors, leaving about 3mm or 1/8 inch distance between the screw head and the wall.
4. Align the bracket on the back of the soundbar with the screws on the wall and slide the soundbar into place.

# Learning Remote

---

## What Is the Learn Feature?

The Learn feature captures remote commands from your television remote, and teaches your soundbar to operate when these commands are pressed. Power, volume and mute are a few examples of commands that the bar speaker can learn.

## Using the Learn Feature

1. With the power Off (standby mode), press the **Learn/Previous/Volume-** button on the soundbar. The indicator light will flicker red.
2. Press the button you want to program on the included remote. The indicator light will turn blue, signaling that the unit is ready to learn the command.
3. Press the corresponding button on your desired remote. The indicator light will then turn green.
4. When the green light turns off, the button command is saved.
5. The programmed button on your desired remote will now be able to control your sound bar.
6. After the soundbar has learned the new command, the indicator light will flicker red again. The soundbar is now ready to learn the next command.
7. To exit the learn feature, press the **Learn/Previous/Volume-** button once or leave the soundbar idle for 25 seconds.

### Notes:

- The learned command will save to any button you press on your desired remote. For example, if you want to program the Volume +function but select the Volume - button on your desired remote, the Volume - button will implement the Volume + function on the soundbar.
- It is necessary to program each button separately.
- If you enter a function that cannot be programmed, the indicator light will begin flashing yellow.
- To clear all learned commands, hold the **Learn/Previous/Volume-** button for five seconds while powered off. The indicator light will flash red once. The soundbar will no longer respond to any previously programmed remote commands.

# Troubleshooting

---

| Issue                             | Possible Solution                                                                                                                                                                                                        |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Soundbar will not turn on</b>  | <ul style="list-style-type: none"><li>• Adapter loose or not connected, check connection.</li><li>• Soundbar is in standby, press the power button again on the unit or remote.</li></ul>                                |
| <b>No or weak sound</b>           | <ul style="list-style-type: none"><li>• Check volume level on the soundbar and on the connected device, adjust if needed.</li><li>• Soundbar not set to correct input source, check and change the input mode.</li></ul> |
| <b>Sound distortion/rattle</b>    | <ul style="list-style-type: none"><li>• Check the volume level on the soundbar and on the connected device, lower if needed.</li><li>• Check for dust or foreign objects in the speaker.</li></ul>                       |
| <b>Remote control not working</b> | <ul style="list-style-type: none"><li>• Remote out of range, point the remote within the remote sensor range, 16 feet and +/- 30 degrees.</li><li>• Batteries are drained, replace with new batteries.</li></ul>         |
| <b>Bluetooth not working</b>      | <ul style="list-style-type: none"><li>• Bluetooth device out of range, move closer to the soundbar.</li><li>• Previous device connected, check previously connected devices and unpair if necessary.</li></ul>           |

# Customer Support

---

## Contact Information

**Website:** [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)

**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

**Phone Support:** 1-888-999-4215

## Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

## International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at:

**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

Copyright © 2025 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



***Protect for Today  
Sustain for Tomorrow***



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

## 技术要求

- 1.名称：293#SR250C-37-30 说明书
  - 2.尺寸：148\*210MM(12P骑马钉)
  - 3.材质：80G书写纸
  - 4.颜色：单黑印刷
  - 5.数量：1台/说明书
- 禁止包装含矿物油