

POFOTO

User Manual Portable CD Player



Model PD30

POFOTO, Empowering Senses, Elevating Moments.

 if you have any questions, please contact: help@pofotovip.com

V2

Limited-time offer!

Within **7 days** of receiving the product, you can get a free 12 months warranty extension (for a total of **24 months** of coverage) by sending your order number to our official email or by scanning the QR code below.

Benefits	Before	After the Upgrade
Warranty period	12 Months	24 Months ↑
Return and exchange period	30 Days	60 Days ↑
Customer service response time	Within 24 hours (Working day)	Within 12 hours (Working day) ↑
After-sales support	Working Day	Working Day



Contact Us: help@pofotovip.com

Customer Service



2 Years Free
Warranty



60 Days Money-Back
Guarantee



Free Accessories Warranty



Lifetime Customer Support

Scan Here to Learn More



Operation Videos



User Manual



Technical Support

WARRANTY AND SUPPORT

WARRANTY

Please send your Amazon Order to **help@pofotovip.com** to **Register 2 Years Warranty** .

WHAT IS COVERED BY THIS WARRANTY?

For help warranties the product hardware problem and accessories contained in the original packaging against manufacturing defects for 2 Years from the date you bought your product.

WHAT IS NOT COVERED BY THIS WARRANTY?

This warranty does not apply to damage caused by accident, abuse, misuse, fire, liquid contact, earthquake or any other external cause.

Especially the cracked/broken screen that is damaged by the external force is not included in the warranty.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	I
WHAT'S IN THE BOX.....	4
USEFUL TIPS	5
INTERFACES INTRODUCTION.....	7
PANEL INTRODUCTION.....	8
REMOTE CONTROL INTRODUCTION.....	10
BATTERY INSTALLATION	14
LCD DISPLAY INTRODUCTION.....	15
MODE INTRODUCTION	17
TROUBLESHOOTING	20
SPECIFICATIONS	21
WARRANTY.....	22
WARRANTY EXCLUSION	22
FCC COMPLIANCE STATEMENT.....	23
WARNING.....	24

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully before use.
- Keep this manual for future reference.
- Always follow basic safety precautions when using electrical products.
- Use only the recommended power adapter.
- To avoid personal injury, risk of fire or damage to the unit, ensure that the voltage of the main power source matches that of the unit.
- Disconnect immediately and contact us in case of unusual smell or noise.
- This product contains a lithium-ion battery. Improper use may result in overheating, fire, explosion, or personal injury.
- Follow the battery safety and usage instructions.
- Keep batteries away from children and pets.
- To prevent the risk of electrocution, do not use in rain or damp environments, such as bath tubs, kitchens, swimming pools, and the like.
- Do not touch with wet hands.
- Keep this device away from extremely hot or cold places. Do not expose the unit to heat sources.
- Do not expose the unit, battery, or remote control to excessive direct heat (sunshine, fire, etc.).
- Ensure that the device is not exposed to risk of splashing and dripping and that no objects filled with liquids is placed near or on the device.
- Do not expose to high humidity, dust or smoke.
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- Do not place the CD player near heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not drop or throw the device, or subject it to strong vibrations or collisions.

- To avoid damage to the cornea, DO NOT look directly or expose yourself to the CD player laser lens or laser beam.
- To avoid damage to the player lens, ensure that the inserted disc isn't broken, distorted or mended.
- Disconnect all cables before cleaning.
- Do not use polishing cloth, abstergents, any type of propellant or chemical detergent (alcohol, benzene, etc.) to clean your device.
- The power cord should not be walked on or pinched, particularly where it exits the device or where it connects to the plug.
- Do not operate this device with a damaged cord or plug, or after it malfunctions or has been damaged in any manner.
- Unplug the product during lightning storms or when unused for long periods of time.
- Do not block the ventilation holes.
- Keep magnetic objects such as speakers, away from the unit.
- Avoid excessive volume levels to prevent hearing damage.
- When using with earphones, ensure that the volume is at its lowest prior to adjusting to your liking to avoid damaging your eardrum. It isn't recommended listening to audio at a high volume level for extended periods of time.
- Supervision is required when using around children.
- To prevent fire or electrocution, DO NOT use the power cord with an extension cord, power cord strip or multi-plug wall-mounted outlet unless the prongs can be fully inserted into the socket.
- Please contact us immediately at help@pofotovip.com if any issues arise or if you have any questions.
- This set features an optical laser beam system in the CD mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to the eye. Use of controls, adjustments or procedures other than those specified herein may result in hazardous laser light beam

exposure. This compact disc player should not be adjusted or repaired by anyone except qualified service personnel.

- This user manual is for reference only. No further notice is available for modifications of the information contained therein. Features and design of this device are subject to change without notice.

PLEASE NOTE: POFOTO does not accept liability for interference in the unit caused by means of unauthorized modifications. Tampering with the internal systems by any means will void the warranty.


WHAT'S IN THE BOX




Portable CD Player x1




Remote Control x1

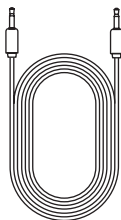

AUX Cable x1

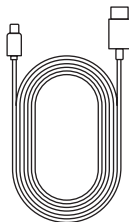

Type-C Cable x1

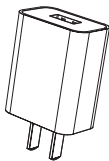

USB Adapter x1

USEFUL TIPS

1. Battery

Please recharge the battery for at least 4.5 hours before initial use. If you connect this player to DC power, you can use it directly.

Note: The charging indicator light on the panel will glow red while charging and will turn green when charging is complete.

2. Power Switch

Slide the power switch on the rear of the CD player to the "ON" position to turn it on after connecting to the mains power supply. Slide it to the "OFF" position to turn the player off completely.


3. Laser Pickup

There is a protective card inside the player. Please remove this card before inserting a disc. **DO NOT** touch the laser pickup or other internal components with your hands.



4. LCD Screen

If you find scratches on the screen, simply remove the screen protector.

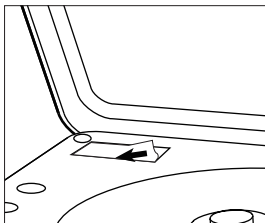

5. Support Format

Supported Disc Formats (Disc Types): CD, CD-R, CD-RW, CD-G

Supported Audio Formats (File Types): CD-DA, MP3, WMA


6. About Standby Mode

CD player is set to enter standby mode following 15 minutes of no activity. To wake the CD player from standby, you can either:

Press the power button  on the remote, or locate the play/pause button  on the panel and hold it down for 2 seconds.


7. About Maintenance

- Wipe the unit with a soft, dry cloth.
- Use eyeglass cleaner to remove stubborn dirt from the transparent lid.
- Do not use alcohol, paint thinner, or benzene for cleaning.
- Do not press on the panel LCD screen or drop the product from a height.
- This unit is not waterproof. To prevent moisture damage, do not place containers with liquids (e.g., vases, flower pots) near the unit or expose it to dripping, splashing, rain, or humidity.

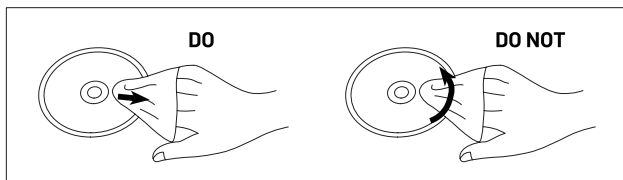


- To clean discs, wipe with a damp cloth and then dry immediately.
- Do not attach labels or stickers to any discs (This may cause disc warping, making it unusable).
- Do not write on the discs with a ball-point pen or any other writing tool.
- To protect discs from scratches and dirt, return them to their cases or cassettes when not in use.
- Do not use discs that are severely deformed, cracked, or irregularly shaped (e.g., heart-shaped).

INTERFACES INTRODUCTION

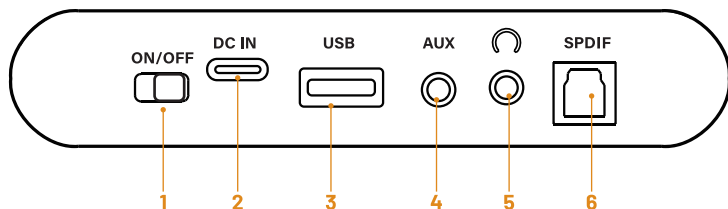

1	POWER ON/OFF	To turn the unit ON or OFF.
2	DC IN JACK	Connect the power adapter to the DC IN port to power the unit.
3	USB JACK	Insert a USB drive to play audio content.
4	AUX IN JACK	Connect other audio output device to the AUX IN port via a 3.5mm audio cable.
5	HEADPHONES JACK (3.5mm Audio Interface)	Insert headphones into the headphone jack for private audio listening.
6	SPDIF JACK	Connect the device's SPDIF jack to your home audio system via an optical cable to achieve lossless transmission of CD audio.


PANEL INTRODUCTION

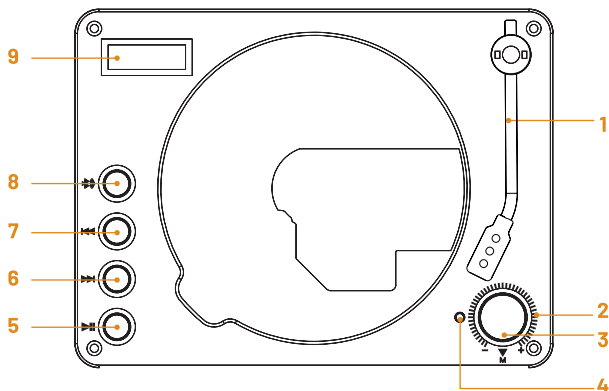

1	Play/Stop Lever	Slide the lever to the left to play audio from the CD. Slide the lever to the right to stop playback and allow the CD to be removed.
2	Volume Adjustment	Turn clockwise to increase volume, counterclockwise to decrease.
3	Mode Switching	Press the  button vertically downward briefly to cycle through CD mode, USB mode, AUX IN mode, Bluetooth Receiver mode and FM mode.
4	Charging Indicator Light	The charging indicator light of the panel will glow red while charging and will turn green when charging is complete.
5	Play/Pause	In CD, USB, Bluetooth Receiver mode or Bluetooth Transmitter mode press briefly to play/pause audio. In FM radio mode, press briefly to switch stations.

6	Next	In CD, USB, Bluetooth Receiver or Bluetooth Transmitter mode, press briefly to skip to the next track. In FM radio mode: Press briefly to increase the frequency step by step. Press and hold to start an automatic backward scan; the device will search in the direction of increasing frequency and automatically save stations with a signal.
7	Previous	In CD, USB, Bluetooth Receiver or Bluetooth Transmitter mode, press briefly to skip to the previous track. In FM radio mode: Press briefly to decrease the frequency step by step. Press and hold to start an automatic forward scan; the device will search in the direction of decreasing frequency and automatically save stations with a signal.
8	Bluetooth Transmitter	In CD mode, briefly press to search for and pair with nearby enabled Bluetooth audio devices. This allows the CD audio to be streamed wirelessly to the connected device for playback.
9	LCD Display	The LCD display shows playback mode, track information, volume status, and radio frequency.


REMOTE CONTROL INTRODUCTION

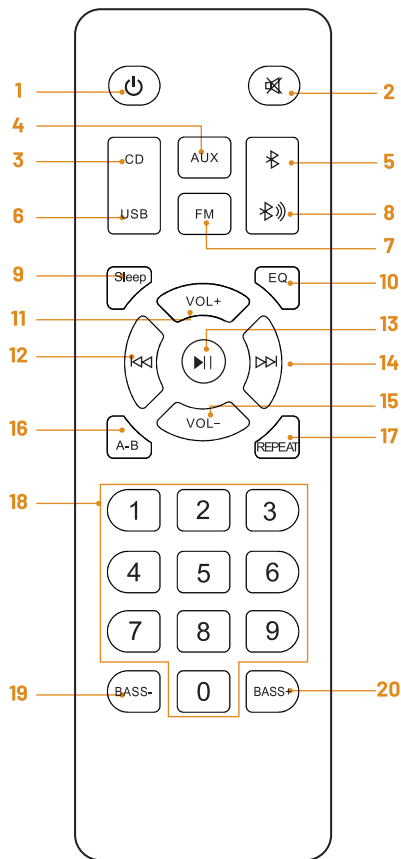

1		Turn on/off standby mode (low-power state). For complete power off, slide the back switch from ON to OFF.
2		Enable/Disable the sound output.
3	CD	Press to switch to the CD mode.
4	AUX	Press to switch to AUX IN mode
5		Press to switch to Bluetooth Receiver mode.
6	USB	Press to switch to USB mode.
7	FM	Press to switch to FM mode.
8		Press to switch to Bluetooth Transmitter mode.
9	Sleep	Press to activate sleep mode for 30/45/60/90 minutes or deactivate sleep mode.
10	EQ	Press to activate EQ sound mode: cycle through BBS/POP/Jazz/Rock/Classic presets.
11	VOL+	Press to increase the volume, with a maximum volume of 30.
12		In CD, USB, Bluetooth Receiver or Bluetooth Transmitter mode, press briefly to skip to the previous track. In FM radio mode: Press briefly to decrease the frequency step by step. Press and hold to start an automatic forward scan; the device will search in the direction of decreasing frequency and automatically save stations with a signal.
13		In CD, USB, Bluetooth Receiver mode or Bluetooth Transmitter press briefly to play/pause audio. In FM radio mode, press briefly to switch stations.

14		In CD, USB, Bluetooth Receiver or Bluetooth Transmitter mode, press briefly to skip to the next track. In FM radio mode: Press briefly to increase the frequency step by step. Press and hold to start an automatic backward scan; the device will search in the direction of increasing frequency and automatically save stations with a signal.
15	VOL-	Press to decrease the volume, with a minimum volume of 0.
16	A-B	In CD, USB, Bluetooth Transmitter mode, press to set A-B repeat playback. The first press sets the starting point A, the second press sets the ending point B, and the third press turns off repeat playback.
17	REPEAT	In CD, USB, Bluetooth Transmitter mode, press to cycle through playback modes: Single Repeat, All Repeat, Random Play, or Repeat Off.
18	Numeric Keypad 0~9	In CD, USB or Bluetooth Transmitter mode, press a number to play the corresponding track. In FM mode, press a number to switch to the corresponding station.
19	BASS-	Press to reduce the bass effect.
20	BASS+	Press to reduce the bass effect.

» RANGE OF USE

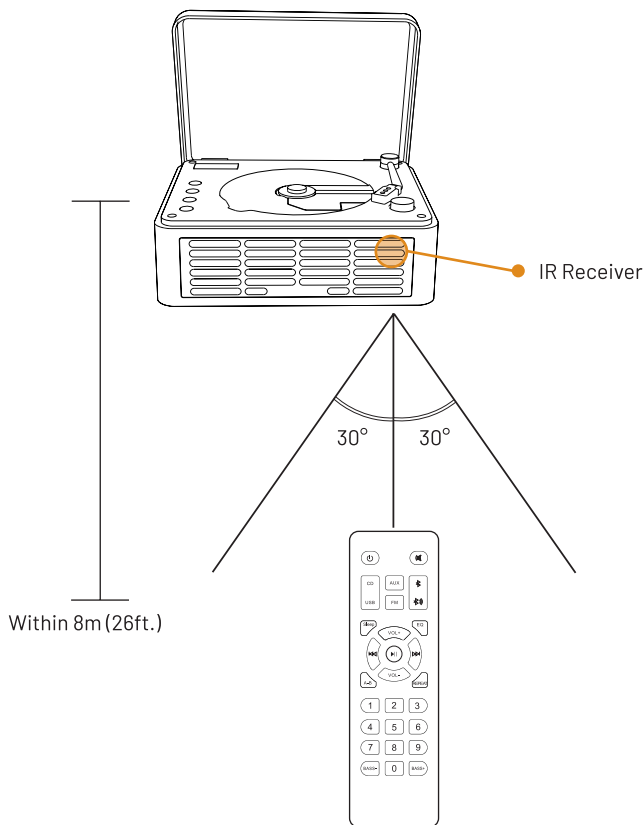


The distance and angles are approximate.


Within 8m (26ft.) in front,

Within 30 degrees angle either left or right.


BATTERY INSTALLATION

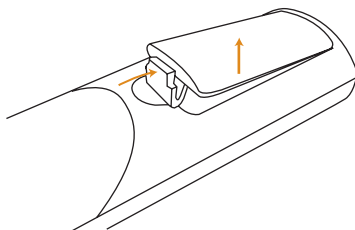

Press the marked area in the direction of the arrow, then lift the battery compartment cover upward.

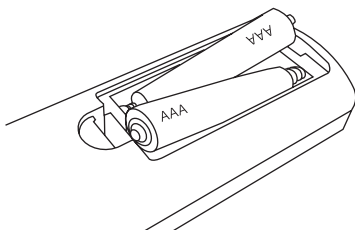

Insert two AAA batteries as shown in the diagram. (Batteries not included in package)

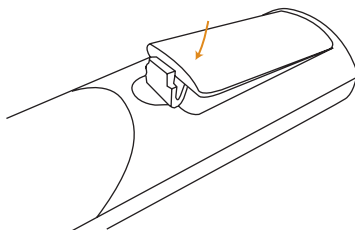

Press downward firmly as shown to lock the battery compartment cover.

LCD DISPLAY INTRODUCTION

	In CD mode.
	In USB mode.
	In AUX IN mode.
	In Bluetooth Receiver mode.
	In FM mode.
	In CD mode, when the lever is on the right side, "OPEN" is displayed and the CD cannot be played.
	In CD mode, loading Disc.
	In CD, USB and Bluetooth Transmitter mode, track playback time. When paused, the playback time will flash.
	In CD, USB and Bluetooth Transmitter mode, current track number.
	30/45/60/90-Minute sleep timer.
	Turn off sleep timer.
	Volume Range: U00~U30.
	In CD, USB and Bluetooth Transmitter mode, A-B repeat playback.

USB  * CD OFF 	In CD, USB and Bluetooth Transmitter mode, Turn off A-B repeat playback.
USB  * CD ONE 	In CD, USB and Bluetooth Transmitter mode, single repeat.
USB  * CD ALL 	In CD, USB and Bluetooth Transmitter mode, all repeat.
USB  * CD SHUF 	In CD, USB and Bluetooth Transmitter mode, random play.
USB  * FILE 	In USB and Bluetooth Transmitter mode, file repeat.
96.7 	In FM mode, station frequency.
CH01 	In FM mode, this's the temporarily stored station number.
b 02	Bass Range: b-5 to b5.
	The battery icon flashes continuously when the battery level is low.
USB  * CD CLAS 	Classic music effects.
USB  * CD ROC 	Rock music effects.
USB  * CD POP 	Pop music effects.
USB  * CD JAZZ 	Jazz music effects.
USB  * CD FLAE 	General music effects.

MODE INTRODUCTION

» CD MODE

1. Remove the protective card. Slide the ON/OFF switch on the back to ON, insert a compatible CD, then slide the Play/Stop Lever to the left to load and playback.
2. Select from 3 modes using the "REPEAT" button on the remote: Single Track Repeat, All Tracks Repeat, or Shuffle Play. If repeat playback is not set, after playing the entire CD, playback will stop automatically. The unit will enter standby mode after 15 minutes of inactivity.
3. Supports setting an A-B repeat playback segment within a single track.
4. Press "8" on the remote control to play the 8th track. Quickly press "1" and then "2" in succession to play the 12th track.
5. Automatically remembers the playback position when powered off and will resume playback from that point upon next power-on.
6. Connect a 3.5mm audio cable to the 3.5mm headphones jack. The CD player's internal speaker will be muted, and audio will be output through the connected headphones or external audio device.

» USB MODE

1. Insert the USB drive into the USB port, press the  on the panel or the USB key on the remote control to switch to USB mode. After loading for about 10 seconds, you can start playing the audio content from the USB drive.
2. Select from 4 modes using the "REPEAT" button on the remote: Single Track Repeat, All Tracks Repeat, File Repeat or Shuffle Play. If no repeat mode is set, playback will automatically stop after finishing all audio content on the USB drive and enter standby mode after 15 minutes of inactivity.
3. Supports A-B repeat playback within the same track.
4. Pressing number 8 on the remote control will play the 8th track, while quickly pressing numbers 1 and 2 will play the 12th track.
5. Automatically remembers the playback position when powered off and resumes from that position the next time it is turned on.

6. By inserting a 3.5mm audio cable into the 3.5mm headphone jack, the CD player will mute its internal audio, and audio will be output through other external headphones or audio devices.

» AUX IN MODE

1. Connect your mobile phone/tablet/laptop/computer to the CD player's AUX port using a 3.5mm audio cable, then press the "▼M" on the panel or the "AUX" button on the remote to switch to AUX mode.
2. In this mode, the CD player functions as an external audio device. When connected to a mobile phone/tablet/laptop, the audio from the device will be output through the CD player.

» Bluetooth Receiver Mode

1. Press the "▼M" on the panel or the "⌘" on the remote control to switch to Bluetooth receiver mode.
2. When the ⌘ flashes, the CD player is in pairing mode.
3. Turn on the Bluetooth function of your mobile phone/tablet/laptop/computer, locate "CD_PLAYER" in the device list, and pair with it.
4. Once paired successfully, the ⌘ will remain steady, and you can wirelessly stream audio from your mobile phone/tablet/laptop/computer to the CD player.

Note: During pairing, avoid turning on other Bluetooth devices within 10 meters to prevent pairing failure. If pairing fails, make sure other Bluetooth devices are disconnected, or search and pair again.

» FM MODE

1. Press the "▼M" on the panel or "FM" on the remote control to switch to FM mode (rAd).
2. Full-auto station search:
 - Press and hold ► on the panel or remote control for a few seconds to complete a full-auto station scan.
 - Stations with signals found during the scan will be temporarily saved automatically. Press the corresponding number key on the remote to switch to that station.

3. Semi-auto station search:

Press and hold "◀◀" or "▶▶" on the panel or remote control to automatically search forward or backward for stations with signals and stop at the found station.

4. Manual station search:

Press "◀◀" or "▶▶" briefly to decrease or increase the frequency by 0.1 steps. Stop adjusting when you hear a clear signal with audio output.

» **BLUETOOTH TRANSMITTER MODE**

1. In CD or USB mode, press on "🔗" the panel or the remote control. When 🔗 on the LCD screen flashes, the CD player is in pairing mode.
2. Switch another Bluetooth audio device to Bluetooth pairing mode.
3. The CD player will automatically select the nearest Bluetooth audio device with the strongest signal for pairing.
4. Once paired successfully, 🔗 on the LCD screen will stay lit. The audio from the CD player will be output through the other Bluetooth audio device.

TROUBLESHOOTING

Problem	Solution
Unable to load or play CD audio content.	1. Check the CD disc format Ensure the disc is compatible: CD, CD-R, CD-G or CD-RW 2. Inspect the CD disc for damage Check if the disc is cracked, scratched, or severely damaged. If the issue persists, please contact help@pofotovip.com for further customer support.
Unable to load or play audio content from the USB drive, or playback stutters/skips.	1. Ensure the audio files are in supported formats (MP3, WMA). 2. The USB drive should be formatted in FAT32 or exFAT (NTFS is usually not supported). Avoid using USB drives with complex partitions or encryption features. 3. Check the USB drive for physical damage or poor contact. Try connecting the USB drive to a computer to verify if the files can be read normally. If possible, try testing with another USB drive to determine if the issue is related to the drive itself. 4. Check audio file integrity. The audio files may be corrupted. Try playing these files on another device (e.g., a computer or mobile phone) to confirm they are intact. 5. File quantity and organization. Avoid storing too many files or folders on the USB drive, as this may cause slower loading speeds.

	6. Keep the directory structure simple; it is best to place audio files in the root directory. USB drives larger than 128GB are not supported. If the issue persists, please contact help@pofotovip.com for further customer support.
--	--

SPECIFICATIONS

Model	PD30
Adapter Power Input	100-240V~50/60Hz 0.45A
Adapter Power Output	5.0V = 2.4A
Supported Disc Formats (Disc Types)	CD, CD-R, CD-RW, CD-G
Supported Audio Formats (File Types)	CD-DA, MP3, WMA
FM Radio Frequency Range	87.5MHz - 108MHz
Battery	3.7V/3600mAh

WARRANTY

Our company provides customers with a warrant of 2-YEAR from the date of purchase.

Please email us at help@pofotovip.com to activate.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at help@pofotovip.com.

WARRANTY EXCLUSION

» The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:

Conditions:

- Incorrect voltage.
- Accidents (including liquid or moisture damage).
- Misuse or abuse of the product.
- Faulty or improper installation.
- Mains supply problems including power spikes or lightning damage.
- Infestation by insects.
- Tampering or modification of the product by persons other than authorized service person.
- Exposure to abnormally corrosive materials.
- Insertion of foreign objects into the unit.
- Used with accessories not pre-approved.

Please refer to and heed all warnings and precautions in the User Manual.

Our company provides customers with a warranty of 2-YEAR from the date of purchase.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at help@pofotovip.com.

We offer a professional solution to your issues. Once identified as a manufacturer fault, we will replace/refund you directly without delay.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ Caution: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2BKS9-CDPLAYER

WARNING

EN: Please do not expose the machine to the sun directly or close to the fire, it may change the shape of the machine and the color of the display. It is normal that the machine goes hot after using for a period of time.

DE: Bitte setzen Sie die Maschine nicht direktem Sonnenlicht oder Feuer aus, da dies die Form der Maschine und die Farbe des Displays verändern kann. Es ist normal, dass die Maschine nach einer gewissen Nutzungsdauer heiß wird.

FR: Veuillez ne pas exposer la machine directement au soleil ou près d'un feu, cela pourrait déformer la machine et altérer la couleur de l'écran. Il est normal que la machine chauffe après une certaine période d'utilisation.

 
IT: Si prega di non esporre la macchina direttamente al sole o vicino al fuoco, potrebbe deformarsi e cambiare il colore del display. È normale che la macchina si riscaldi dopo un periodo di utilizzo.

ES: Por favor, no exponga la máquina directamente al sol ni cerca del fuego, ya que podría deformarse y cambiar el color de la pantalla. Es normal que la máquina se caliente después de un tiempo de uso.

JP: 機械を直射日光や火のそばに置かないでください。機械の形状やディスプレイの色が変わる可能性があります。使用後に機械が熱くなるのは正常です。

Manufacturer: Zhichuang Shengda (Shenzhen) Technology Co., Ltd.
Address: Room 401, Workshop No.2, Yudafu Industrial Park, No. 10, Heyi Xingye West Road, Shajing Street, Bao an District, Shenzhen City, China
Email: help@pofotovip.com

Brand: HERMAN INNOVATIONS TECHNOLOGY CO., LIMITED
Address: UNIT 83, 3/F, YAU LEE CENTRE NO. 45 HOI YUEN ROAD KWUN TONG KOWLOON. HONG KONG
Official Email: help@pofotovip.com **Website:** <https://pofotovip.com>

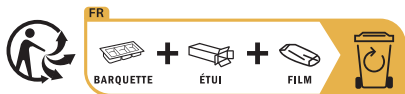

Made in China
スズキ株式会社
FCC ID: 2BKS9-CDPLAYER



HUMISS TRADING S.L
Calle Luis Bañuel 12-3A, Madrid, 28018, Spain
eugpsres@outlook.com
+3461317772

Sea&Mew Accounting Ltd
Electric Avenue Vision 25, London, Enfield EN3 7GD
info@seamew.net
+447399648608

POFOTO