



Quick Start Guide

✉ support@onnaisafe.com

Model No.: GL-04

QUICK START GUIDE VIDEO




Scan the code

<https://onnaisafe.com/pages/installation-guide>

Get

QUICK START GUIDE

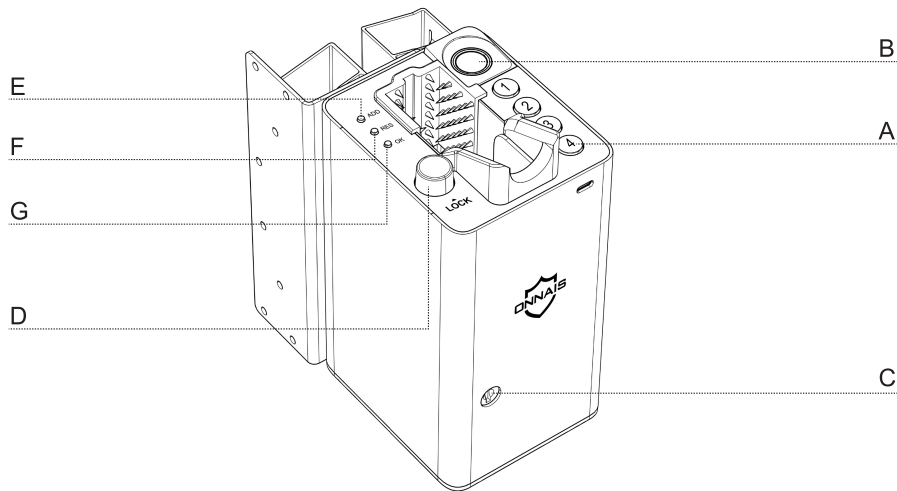

A. Digital Keypad

B. Fingerprint Scanner

C. Keyhole

D. Lock Button

E. ADD Button

F. RES Button


G. OK Button

Charge your gun lock


Please charge the gun lock for 8 hours upon receiving it to ensure a full battery for optimal use.

Charge the gun lock according to the following instructions.

When charging, the red light on the fingerprint area flashes. Once fully charged, the green light stays on.

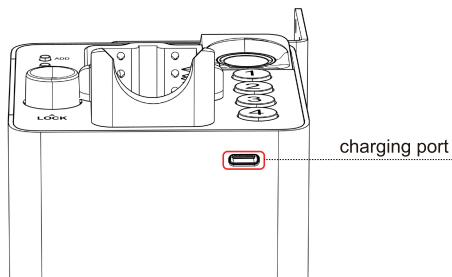


Must-Read:

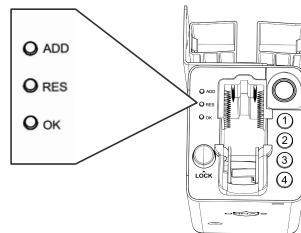

You must start setting within 15 seconds after unlocking and complete it within 60 seconds, or it will be invalid.

Use your key

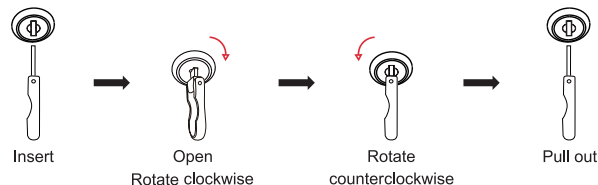


Note: Please keep the key in a safe place for emergency use.

Setting up passwords and fingerprints


Note: Administrator password is 12341

Step 1. Add digital password (Please note that the password is unique)

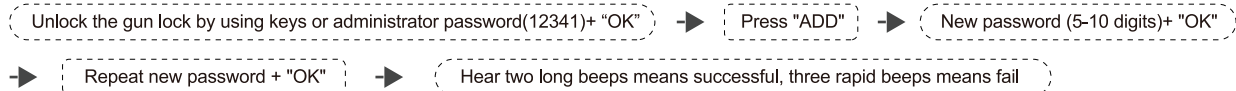


! Note: If the admin password is incorrect, press the red button to lock the gun safe. Then, unlock it using the key. Press the RES button three times to reset, then return to Step 1 to set up the safe.

Step 2. Add fingerprints

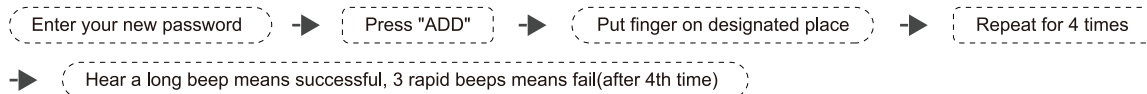


! Note: More fingerprints need to be entered, follow the "Step 2" again. Up to 80 fingerprints can be added. Don't press the fingerprint area too hard when adding fingerprints.

Reset your gun lock (Forget Password or Change password)

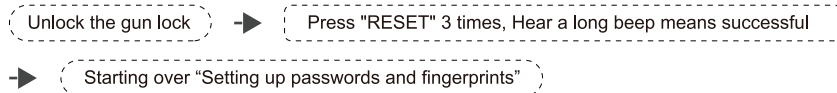


After the reset, your password and fingerprints will also be deleted from program and you will need to program your password and fingerprints again.

How to Properly Lock Your Firearm

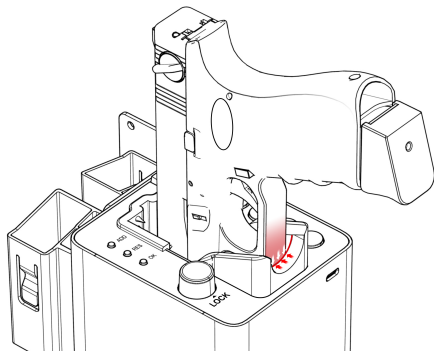


If the button cannot be fully pressed down, the firearm is not positioned correctly. **Please adjust its placement until the button can be pressed.**

We recommend placing the firearm vertically with the rear side of the trigger guard against the soft silicone area for easier locking.

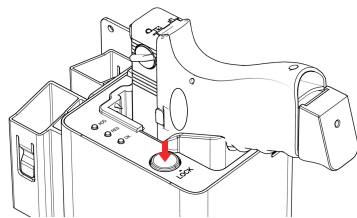


When placing your firearm into the gun lock, make sure the trigger area is properly aligned. **The red LOCK button must be fully pressed down** to confirm that the lock is securely engaged.

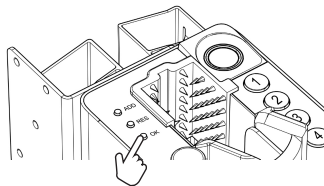

Turn on/off the sound:

After a successful unlock, press and hold the **OK** button for 3 seconds to mute the sound. Repeat to unmute.

Installation Steps

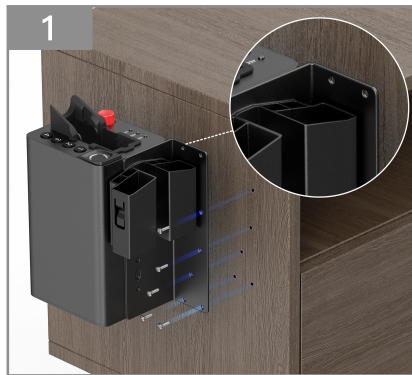

1. For optimal security, we recommend securing the two upper screw holes if possible. However, if fixing them is difficult, it is essential to secure all five lower screws to ensure the gun lock is firmly mounted.
2. If you wish to change the installation direction, remove the metal plate and reposition it on the other side of the gun lock.
3. Once installed, you can place your firearm and magazine inside.

Questions & Answers

Have a question?

Find your answers here

You must start setting within 15 seconds after unlocking and complete it within 60 seconds, or it will be invalid.

Question 1: *Tried to add the digital password, but I can not make it right.*

Answer: Please note that the password is unique. You need to clear the default digital password before adding personal password. Quick press the **"RES"** button 3times continuously before adding personal digital password. Refer to **"Add digital password"** on Quick Start Guide for more information(Page 3).

Question 2: *Why I cannot record my fingerprint?*

Answer: It's a must to add the digital password before recording fingerprint. Without adding digital password will cause the failure to record fingerprint. Besides, make sure your finger is clean without dirt or water, otherwise it will influence the fingerprint recognition. Refer to **"Add fingerprints"** on Quick Start Guide(Page 3).

Question 3: *Can not open it with code or fingerprint.*

Answer: If this happens, use the key to open the lock first. Then Quick press the **"RES"** button 3 times continuously to clear all data Add the digital password and fingerprint afterwards. It could also be out of power—charge the gun lock in time.

Question 4: *How to delete fingerprints?*

Answer: Unlock the safe using the password/fingerprint/key before proceeding.


Delete All Fingerprints: Press the RES button three times to erase all fingerprints and the password.

Delete a Single Fingerprint: Press and hold the RES button for 3 seconds until the blue light flashes. Then, place the fingerprint you want to delete on the scanner. A green light indicates successful deletion. Press RES to exit, or the system will exit automatically after 60 seconds of inactivity.


Question 5: *How shall I contact the seller regarding replacements/refunds or other tecnical issues?*

Answer: The unit has 365 days replacement warranty and lifetime technical support. Send an email to support@onnaisafe.com with your order ID. We will work toward a resolution in 24 hours.

Follow Onnais on Instagram & Facebook for help

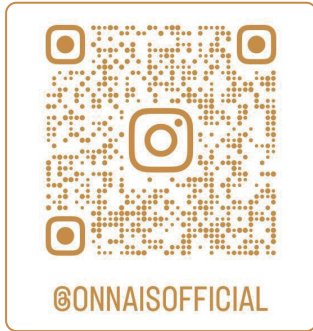

 @Onnaisofficial

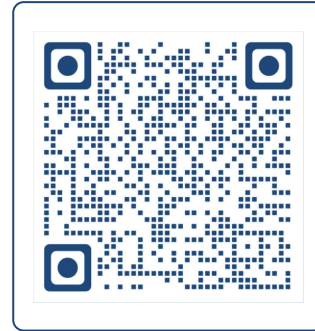

 @Onnais

 support@onnaisafe.com

(reply in 24 hours)

