

IMPORTANT SAFEGUARDS
READ AND SAVE THESE
INSTRUCTIONS

CAUTION

- Read Rules for Safe Operation and Instructions Carefully.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- This appliance is for household use only.
- CAUTION: To Reduce The Risk Of Electric Shock, Connect Only To An Outlet Provided With A Ground Fault Circuit Interrupting Device.

WARNING

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Do not leave the fan running unattended.
- To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- The fan shall not be modified by the user in any manner such as by adding supplemental filters to the fan not intended to be used for air cleaning purposes.
- WARNING: To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Unplug or disconnect the appliance from the power supply before servicing and whenever the machine is left operating and unattended.
- The fan body shall not be disassembled/opened to clean the fan blade. Wipe the fan body with a slightly damp cloth to clean.
- Non-specialized personnel or unauthorized repair personnel shall not to repair or modify the machine.

- It is forbidden to operate with wet hands to avoid electric shock.
- If the unit is not in use for a long time, unplug the power cord.
- To prevent accidental injury or damage to the unit, please do not insert any foreign matter into the air inlet and outlet, because the unit incorporates a high-speed wind rotor. It is prohibited to use this unit in environments with flammable and explosive gases and direct sunlight for a long period shall be avoided.
- Do not place the unit in an inclined or other uneven place to prevent the unit from falling and causing damage to the unit or internal parts.
- At any time, the water level in the tank shall not exceed "MAX" (maximum) scale, and during humidification, the total water level in the tank shall be controlled, and shall not be below "MIN" (minimum) scale.
- After the water tank is filled with water, do not tilt or collide with the unit when placing or moving it. To move the unit body, please draw it slowly from the side to prevent water overflow in using the unit, prohibit overturning to avoid any accident. If the unit topples over accidentally, and it contains water, unplug the power cord immediately and take it to repair store.
- Do not place items on the unit, and covering the outlet is strictly prohibited.
- When wash the unit appearance, apply a damp cloth (or add a little cleaning agent) to wipe, and never use corrosive cleaning agent or solvent for cleaning. Never raise the unit with water.
- Do not have the air inlet and outlet of the unit close to walls, curtains and other objects, or they may block the airflow and affect air supply.
- When the unit is running, do not knock at or shock the unit body forcibly or it may lead to automatic shutdown, in which case simply restart the unit.

- In summer, the water in the tank may easily deteriorate and generate odor, please pay attention to regular change of water. If the indoor temperature is below zero in winter humidification, it is best to use warm water for humidification.
- Do not place the unit directly below the power outlet.
- Do not use the unit around the bath, sprinkler or swimming pool.
- Product repair must be carried out in a designated agency.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Use a soft cloth moisten with mild soap, and then use a dry cloth to wipe it again.
- Be aware that high humidity levels may encourage the growth of biological organisms in the Environment.
- Do not permit the area around the fan to become damp or wet. If dampness occurs, turn the output of down. If the fan output volume cannot be turned down, use the fan intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.

SPECIFICATIONS

Product Model	HSFAC0004WC
Voltage	120V
Frequency	60Hz
Current	0.5A

Warning: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Contact your dealer or manufacturer for details. The diagram shows a unit for reference. Please take the appearance of the actual product as the standard.

 
 
CLEANING AND
MAINTENANCE

- Turn off the power supply before cleaning this product. Turn off the machine for two minutes before cleaning.
- After cleaning and maintenance, be sure to wait until it is fully dry before powering on for use or storage.
- Do not use the body directly with water. Use a soft cloth containing a little neutral detergent to gently wipe the surface, and then wipe it dry. Do not use solvents such as gasoline.
- It is prohibited to disassemble the product for modification. It is recommended that this product be inspected and cleaned regularly to extend its service life.
- To prevent scale accumulation from affecting the life, please clean it once every 3-5 days depending on the water quality in the area where it is used and the frequency of use.














Water Tank Cleaning Instructions

NOTE















- Before disassembling and cleaning the water tank, please unplug this power plug.
- Open the water tank buckle to a horizontal position.
- 2. Completely pull out the water tank, place it on a stable surface, and add water.

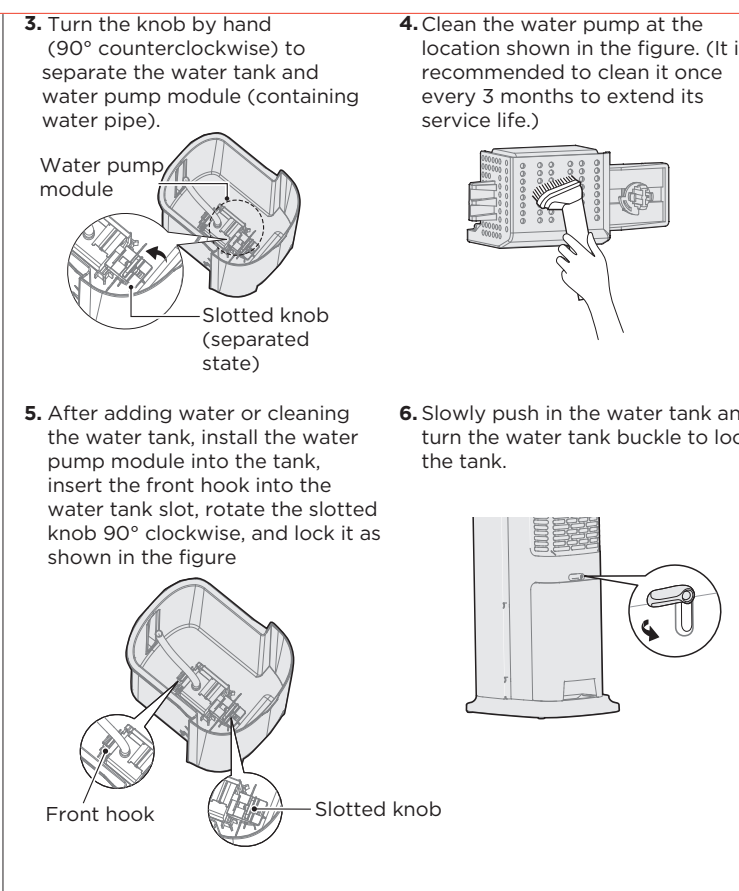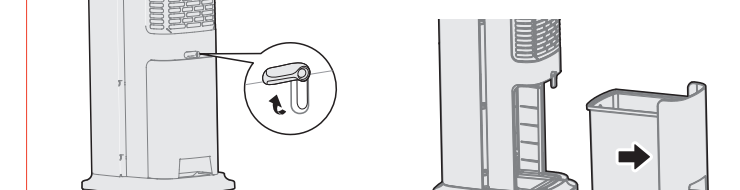

PRODUCT SET-UP

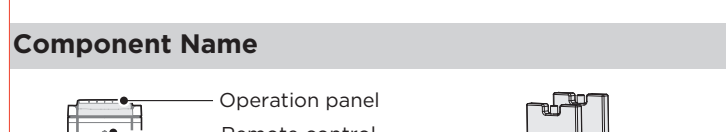             

Water Tank Filling Guide

              

How To Use Ice Box

