



E-Reader E707 Quick Guide

1. Read me first

Please read following safety instructions before use.

1.1 Waste Disposal

- Please DO NOT dispose this final product as normal trash, the assembled parts are designed for recycling and reuse, please follow the related disposal regulation in your region.
- Please DO NOT place or store this final product close to the fire source, it may cause explosion accident.


1.2 Handling, Maintenance and Safety

- Please DO NOT place heavy object on your E707 E-reader, failure to do so may result damage to the display panel.
- Touch panel surface easily have scratch damage, please operate with care, and avoid contact damage with other object.
- Touch screen with your finger on display, DO NOT use of sharp or metallic objects may cause scratch and damage.
- Please use the standard USB-C cable to charge the device, failure to do so may cause damage to it.
- Before cleaning the equipment, the power must be cut off. Please DO NOT use alcohol, liquid or any type of detergent to clean the equipment.
- Please wipe the surface of the appliance with a soft cloth with water or nonalkaline cleanser, or gently wipe the display with a soft lint-free cloth.
- Use a soft cloth to remove dust from the display, touch screen surface has a special protective coating, will prevent dust from sticking to it; without using a soft cloth, and may cause damage to the protective coating.

- Please DO NOT disassemble the equipment. For your safety concern, only qualified serviceman can open the equipment.
- The using temperature is 0-40°C, please use this E-reader in this range.

2. E707 E-reader Structure Illustrations

Please find the below E707 E-reader product illustration pictures to learn more about the product. These pictures include front, back, top, bottom side faces. All the key hardware features are identified as listed.

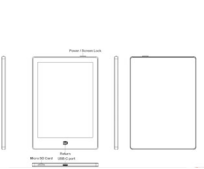

Power	- Long press to turn on and off the device - Press to lock and unlock the screen - Long press 10s to force restart
USB-C port	Connect the PC and device by using data cable to transmit data or charge the epaper reader
Extended Storage	Micro SD Card
Touch button	return button

3. E707 E-reader and Accessories list inside the case

E-reader _____ x1
USB-C cable _____ x1
User manual _____ x1
Protective case _____ (optional)

4. Start using

4.1 Home

You can select the content you need from the main menu



4.2 Ebook

You can swipe the screen left or right to select the books you want to read or delete



4.3 Music

You can swipe the screen left and right to choose the music you want to listen to (with Bluetooth earphones connected) or delete



4.4 Wallpaper

You can swipe the screen left or right to select or delete wallpapers



4 Images

4.5 Update

You can perform OTA upgrades here




4.6 Bluetooth

You can search or delete Bluetooth



4.7 Settings

You can check the equipment model and version in the settings, and set other parameters.

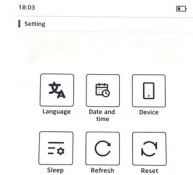

4.8 E707 Specification

Model Pictures	
Dimensions	151*108*6mm
Screen	6 inch Display
Resolution	1024*768
PPI	212PPI
CPU	SP32L8524 / Arm Cortex M33 32AH-MC1
RAM	1GB
Internal Storage	128GB (Only store firmware)
Extended Storage	Micro SD Card
Touch Screen	Capacitive touch Full lamination technology
ReadingFrontLight	support (Cold Light)
OT	Support
Microphone	NO
Battery	1.8K 100mAh
Standby time	About 230 days
ChargingInterface	USB Type-C 5V2A
Material	Plastic + Metal
Weight	About 122g
OS	RTOS
Key Buttons	POWER
File Formats	EPUB, TXT etc.

5. Basic Trouble Shooting

5.1 The device is unable to POWER ON successfully

When the battery is fully discharged, the unit will not be turned on. Fully charge the battery before turning on the unit.

5.2 Touch the screen to respond slowly or unresponsive

- If you install a screen cover or lay accessories on the touch screen, the touch screen may not function properly.
- If you wear gloves when touching the touch screen, your fingers are not clean, or you touch the screen with a sharp object or fingertip, the touch screen may fail.
- Touch screen may fail in wet conditions.
- Restart your device to clear any temporary software errors.
- Confirm that your device's software has been updated to the latest version.

5.3 Equipment crashes or a serious heating issue

Try the following solutions, if the problem is still not solved, please contact the designated after-sales service center.

5.3.1 Reboot the device

If the device occurs, you may need to close the application or turn the device off and power it on again.

5.3.2 Force restart

If the unit fails to respond, press and hold the power key for more than 30 seconds to restart the device.

5.3.3 RESET

If the above party does not resolve the issue, perform a factory/reset operation. Please remember to back up all the important material stored in the unit before performing the reset set-up operation.

5.4 The signal is often interrupted

5.4.1 signal weak

- Check your surroundings for interference, such as microwave ovens, wireless phones, and mobile tablets should stay away from objects that cause interference.

5.5 Battery Status icon is empty

Battery Level is low, please charge the battery right away.

5.6 The battery is not charging properly

- Please make sure the battery charger is connected correctly.

5.7 Battery runs out faster than at the start of purchase

- When the device or battery is exposed to extremely cold or extremely hot temperatures, the effective charge may decrease.
- Battery is a consumer and will be less effective over time.

5.8 Data stored on the device has been lost

Please ensure that you have fully backed up all the data stored on the device regularly. We are not held liable for the permanent loss, damage, or misuse of your data.

Warranty Card

Product Name _____

Model: _____

Buying Date: _____

User Name: _____

User Phone: _____

Warranty Description:
During 1 year warranty we provide free repair service if the fault is caused by the quality issue of device under normal use.

This card is warranty certificate,pls keep it well.

Warranty Clauses

- User can find 1 User Manual and 1 warranty card after they buy it,pls fill in the warranty card to keep as a Warranty Certificate.
- During 1 year from the buying date,users who hold the warranty card can enjoy free repair Service if quality issue occurs when the device is used normally.
- Below situations are included in warranty range:
 - A. There is no signature or stamp of sales unit
 - B. Continued or inevitable factors lead to damage
 - C. Device normal wear
- If the faults are caused by continued or inevitable factors, we will charge certain spare part cost for repairing.
- Pls request warranty from local agent or seller when the device occur faults, pls write Detailed address, name, phone no. and fault description.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.