

Hisense

HiClips

QUICK SETUP GUIDE

HC60S



Declaration

Battery

- Operating ambient temperature: 0 - 45°C
- Storage and transportation ambient temperature:
-30 - 60°C, altitude not higher than 5000m
(air pressure not less than 45kPa)

WARNING:

- Replacing a battery with an incorrect type can disable built-in safety mechanisms.
- Exposing battery to extreme heat, crushing or cutting of battery may result in an explosion or chemical leak.
- Exposing battery to extreme low air pressure may result in an explosion or chemical leak.

CAUTION

- DO NOT replace battery. Risk of fire or explosion!

Other Informations

- Bluetooth frequency range: 2400 MHz - 2483.5 MHz
- Bluetooth transmitter power: ≤ 6 dBm (EIRP)

Accessories List



Clip-on earbuds × 2



Earbuds charging case × 1



Quick Setup Guide × 1



Charging cable × 1

NOTE


- Accessories may vary from the above list due to different models & regions. Please refer to the actual accessories within packaging.

Product Overview


• Illustration of earbuds



• Charging Case Illustration

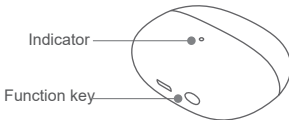

Earbuds Pairing

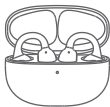

• Initial Pairing

- Upon initially opening the charging case lid– the earbuds will automatically enter Bluetooth pairing mode.
- Enable Bluetooth on your device and select “Hisense HiClips”. The device will display “Pairing Successful” upon connection.

• Re-pairing

- Place the earbuds in the charging case. With the lid open, press and hold the function key for 3 seconds until the white indicator light flashes continuously.
- Enable Bluetooth on your device and select “Hisense HiClips”. The device will display “Pairing Successful” upon connection.

• Dual-Device Connection


1. After initial connection of the first device.
Place earbuds back into the charging case.
2. Press and hold the function key for 3 seconds to reactivate Bluetooth pairing mode.
3. Enable Bluetooth on your second device and select "Hisense HiClips". The device will display "Pairing Successful" upon connection.
4. Manually reconnect to earbuds between the 2 devices.

Factory Reset



Place earbuds into the charging case. With the lid open, press and hold the function key for 10 seconds until the indicator light flashes alternating orange and white. The earbuds will then restore factory settings.

Wearing Instructions

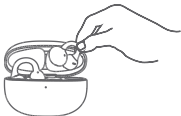

Hold the C-Bridge between thumb and forefinger to remove earbuds from case.



Place the sound ball in your ear, then position the C-Bridge behind your ear. Adjust until comfortable.

CAUTION

- Avoid excessive bending during wear.
- Do not over-flex the C-Bridge when not in use.

Gesture Controls



• Touch Zones

Tap the Touch Zone on the Comfort Bean or C-Bridge with one finger to activate gestures.

Gesture Functions



Double-tap

- Play/Pause
- Answer/End call



Triple-tap

- Skip to next track

NOTE

- You can view and customise more interactive operations via gestures in the ConnectLife APP.

APP Conection

Download the ConnectLife APP to discover more personalized features.

1. Scan the QR code below to download the ConnectLife APP.
2. Follow the on-screen instructions in the APP to connect your earbuds.



NOTE

- Ensure your phone's Bluetooth is turned on.
- During the connection process, place the earbuds inside the charging case with the lid open, and keep the case close to your phone. The earbuds will be automatically detected.
- The APP supports devices running Android 8.0 or later and iOS 16.4 or later. Ensure the APP is updated to the latest version.

Charging & Power Indicators

• Charging the earbuds

Place earbuds in the charging case. The LED lights up when charging starts upon closing the case.



LED Status

Orange light remains on:
Charging in progress

White light remains on:
Fully charged

• Charging the case

Recharge the case via Type-C USB cable. During charging process, the orange light will remain on. White light indicates fully charged.

• Low Battery Alert

When battery drops below 10%, earbuds emit an audible alert repeating every 10 minutes.

• Power Level Indicators

Refer to the below table for battery status when not charging.


LED Status	Battery Level
Flashing red light	0-5%
Steady red light	6%-10%
Steady orange light	11%-30%
Steady white light	31%-100%

Earbud Maintenance

• Cleaning Procedure

Cleaning charging contacts ①-⑧:

If dirt or debris is present on the earbud's charging contacts or the charging contacts on the inside the charging case, gently clean them using a soft, dry cloth or a lint-free cotton swab lightly moistened with anhydrous alcohol. Do not use wet or damp cleaning tools, as moisture may enter the device and cause damage.

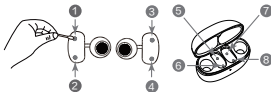

Mesh cleaning:

- Carefully remove any debris from the mesh using a dry cotton swab.
- Gently wipe surfaces with a soft, dry cloth.

CAUTION

- Power off earbuds and disconnect all devices before cleaning.
- Never rinse with water or use ultrasonic cleaning.
- Prevent liquid ingressing into any openings.
- Prohibited cleaning agents:
 - Abrasives/sprays
 - Concentrated cleaners
 - Chemical solutions
 - Alcohol/acetone solvents
- Prohibited tools: Sharp/abrasive objects.

CAUTION

- Abrasive tools strictly prohibited.
- Disconnect charging cable before cleaning.

Storage & Maintenance

- Store in a cool, dry environment.
- Operating Conditions:
 - Temperature range: 0°C to 45°C
 - Keep away from heat sources/flammable gases, corrosive liquids and direct sunlight.
 - Prohibited in high-temperature zones.
- Immediately discontinue use if:
Visible damage | Smoke emission | Overheating |
Burnt odor
- Earbud IP Rating IP54:
 - Dust-resistant & splash-proof.
 - Suitable for: Non-water sports/exercise.
 - Not waterproof — Never immerse in water.
 - Protection degrades with normal wear.
- Charging Case Warning:
Zero water resistance — Avoid all liquid exposure.
- Cleaning Directive:
Wipe only with dry microfiber cloth.
- Long-term Storage Protocol:
Recharge fully before reactivation.

Warranty

Warranty Card

Model		Serial Number	
Owner Details	Name		
	Phone		
	Address		
	Purchase Date		
	Invoice Number		
Retailer Information	Name		
	Phone		
	Address		
Malfunction Description			

Warranty Policy

This product carries a 12-month limited warranty against inherent defects from the date of purchase. Covered malfunctions occurring during normal operation will receive complimentary repair services.

Warranty Exclusions:

- ◆ Damage during return transit or handling.
- ◆ Unauthorized:
 - Modifications
 - Disassembly
 - Third-party repairs
 - ◆ Resulting from:
 - Accidents/misuse
 - Improper operation
 - Failure to follow manual instructions
 - Use of non-certified accessories/consumables
 - ◆ Normal wear and tear including:
Cracks/Scratches/Fading/Cosmetic changes
 - Invalid/incompatible/altered:
 - Proof of purchase
 - Warranty certificate
 - ◆ Expired warranty coverage
 - ◆ Force majeure events

WARNINGS/CAUTIONS

- To avoid accidental ingestion, keep the product away from children and pets. The product contains a battery, and may be hazardous if swallowed. If ingested, seek immediate medical attention. When not in use, store the product out of reach of children and pets.
- Product is not intended for use by children.
- To avoid hearing damage, do not use your earbuds at a high volume. Turn the volume down on your product before placing the earbuds in/on your ears, then turn the volume up gradually until you reach a comfortable moderate listening level.
- To avoid hearing damage, do not insert the earbud speaker directly into your ear canal. Wear the earbuds with the speaker on the outer edge of your ear and the barrel behind your ear.

- Use of this product while operating a vehicle may be prohibited by law in some locations. Use caution and follow applicable laws. Stop using this product immediately if it interferes with your ability to remain attentive or interferes with your ability to hear surrounding sounds, including alarms and warning signals, while operating a vehicle.
- Use caution if using these earbuds while performing any activity that requires your attention.
Do not use the earbuds when the inability to clearly hear surrounding sounds may present a danger to yourself or others, for example while riding a bicycle or walking in or near traffic, a construction site, railroad, etc.
- Do NOT submerge the product in water or expose the product to water for extended periods.
- Remove product immediately if you notice heat coming from the product.



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material.
Consult your physician on whether this
might affect your implantable medical device.

Service Support

For after-sales service requests, contact:
Hisense Australia Customer Service

Toll-Free Hotline: 1 800 447 367

Manufacturer: Hisense Visual Technology Co., Ltd.

Registered Address: No.218, Qianwangang Road,
Qingdao Economic & Technological Development
Zone, Shandong, China

For more detail information about this product,
please refer to this URL:
<https://hiclips.hisense.com.au>



BZP02120013