 


成品尺寸：90x123mm  
材质：128G双铜，正反面单色印刷，折页

正面

 
Hello

Welcome to MIATONE MEGABOX

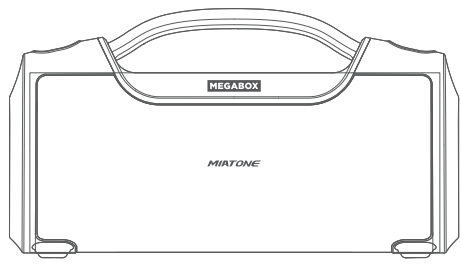


Package Contents

- A. 1 X Miatone MEGABOX Bluetooth speaker
- B. 1 X Type - C Charging cable
- C. 1 X 3.5mm AUX cable
- D. 1 X User manual



Product Diagram

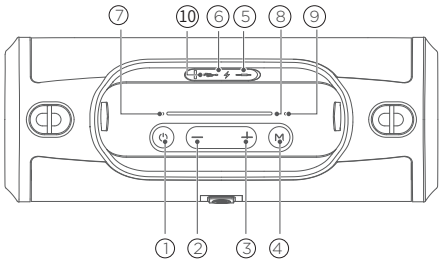 

- ① Power on / Off  
Track Play / Pause  
BT Connect / Disconnect

② Volume Down / Previous Track

③ Volume Up / Next Track

④ M Button ( MODE/TWS/EQ )

⑤ AUX Audio Input Port

⑥ Type C Charging Port

⑦ Working Status LED

⑧ TWS Indicator Light

⑨ Microphone

 
⑩ USB-A Port / U Disk Port  
(Support USB, 5V/2A output)

Power On / Power Off

1. Long press power button 'Ⓚ' for 3 seconds to power on the speaker. Working status LED will flash in blue.
2. Long press power button 'Ⓚ' for 3 seconds to power off the speaker. Blue indicator light will turn off.

Bluetooth Connection

1. Long press power button 'Ⓚ' for 3 seconds to power on the speaker. Working status LED will flash in blue.
2. Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions.
3. Search for Bluetooth devices and select 'MEGABOX'.
4. The speaker will beep when the device are paired. The blue indicator light will turn solid and your device will show the connected Bluetooth icon. Then you can start to play your music.
5. Double press 'Ⓚ' quickly to disconnect Bluetooth connection.

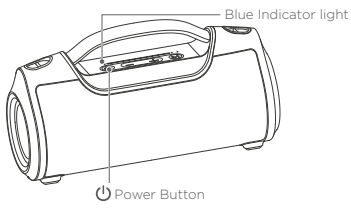

Bluetooth Music Play

1. Short press '+' to increase volume, short press '-' to decrease volume.  
Note: When its volume increase to maximum volume, you will hear 'Beep' voice prompt.
2. Long press '+' for 2 seconds to play next song, long press '-' for 2 seconds to play previous song.
3. Short press 'Ⓚ' to pause playing, press again to resume playing.  
Note: This unit is set to play music by half volume once it powers on. If you want to use maximum volume, please increase the volume from the paired device (mobile phone) and speaker at maximum.

EQ Switch

1. Default standard sound effect. Double press 'M' to switch EQ. Standard → Outdoor → 3D sound effect.
2. The Blue indicator light will flash when switch EQ on Bluetooth mode. The green indicator light will flash when switch EQ on Aux mode. The white indicator light will flash when switch EQ on USB mode.

Mode Switch

 
Default Bluetooth Mode. Short press 'M' to switch Mode, Bluetooth ↔ Aux → USB mode

Handsfree Call

When call coming, short press 'Ⓚ' to pick up, press again to hang up. Press button twice quickly to reject the call.

Aux-In Mode

1. Use 3.5mm Aux cable to connect 'MEGABOX' to device, it will switch to Aux mode automatically, the green indicator light will turn on. Then you can play music immediately.
2. Short press 'Ⓚ' to mute, press again to resume playing.
3. In Aux-in Mode, if you want to change a song, you need to control it by your mobile phone or your other connected device.

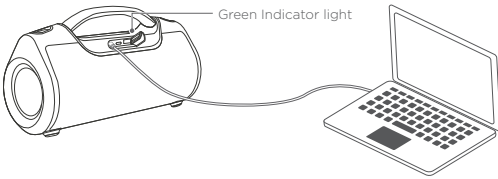


TWS Function

If you have two pieces MEGABOX, you can use TWS to achieve wireless stereo combined playing music.

**Note: Before TWS pairing, make sure the two MEGABOX speakers are not connected over bluetooth.**

 1. Long press power button 'Ⓚ' for 2 seconds to power on both of them.
2. After you turn on the device, you should make sure neither are connected to any bluetooth since both will automatically reconnect to your previous device. So you should disconnect existing device first or just turn off bluetooth on your devices.
3. Long press each of their 'M' button, TWS indicator light will flash in white. Two seconds later they will connect to each other automatically. After they connected successfully, you will hear a confirmation tone, both of their white indicator light will turn solid. The master model's blue indicator light will keep flashing, the sub-master model's blue indicator light will turn solid.
4. Activate the bluetooth function and select 'MEGABOX' on your Bluetooth device to finish the pairing, the blue light on the master speaker will turn solid once connection is finished. Right now, you can enjoy the experience of true wireless stereo.
5. Long press 'M' button for 2 seconds to disconnect the TWS connection.

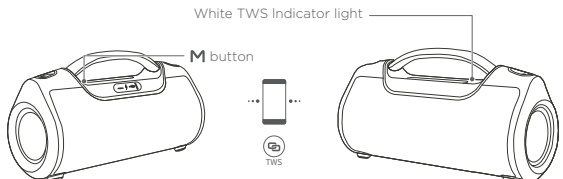


Charging Your Speaker

Noted:

- Before charging, be sure the speakr is at room temperature, between 46° F (8° C) and 102° F (39° C).
- Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) which support 5V / 2A or above.
- Use included charging cable to charge the speaker.
- For the first use, please fully charge the product.

 1. Connect the type c end of the included charging cable to the charging port on your speaker. Then plug the other end of the USB charging cable into a suitable USB port on your computer ( or with a standard cell phone charger) to recharge your speaker's internal rechargeable battery.
2. You should charge the speaker when hearing low battery prompt voice. Speaker will power off automatically when battery lower than 10%.
3. Red indicator is on when charging, and it is off after fully charged.  
Note: It may take several minutes for your speaker to begin charging when it's drained. The battery needs to charge to a minimum voltage before the system can boot up. In order to extend battery's life please don't play the music while the speaker is charging.

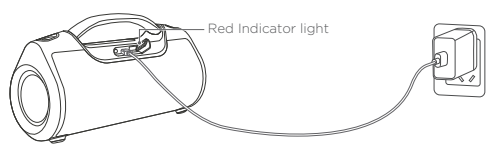

Power Savings

 
When there is no bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.

USB Port Features

Your speaker has an integrated USB port which has two functions:

1. For playing music files stored on a USB drive. Simply insert a USB drive with pre-loaded mp3/audio files into your speaker's USB port. A white LED will illuminate when in USB disk mode.
2. For charging smartphones and USB-powered devices. Simply insert your device's USB charging cable into the speaker's USB port to charge your device. The charging output is 2A. Please use this feature only as a last resort (if your phone's battery is about to run out) as it will deplete the battery of the speaker thus reducing the music playback time.
3. Short press the power button before using USB-A function if speaker is in off status.

Status Indicator

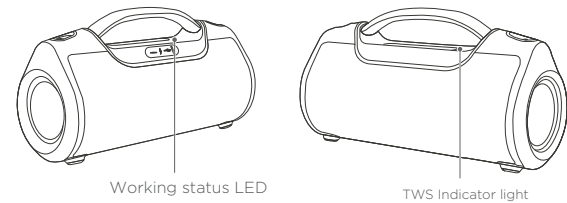

|                 |                                           |
|-----------------|-------------------------------------------|
| Power On        | Working status LED will flash in blue.    |
| BT Connected    | Working status LED turn solid blue.       |
| BT Disconnected | Working status LED will flash in blue.    |
| AUX Mode        | Working status LED will turn solid green. |
| U Disk Mode     | Working status LED will turn solid white. |
| TWS Pairing     | TWS indicator light will flash in white.  |
| TWS Connected   | TWS indicator light turn solid white.     |
| Charging        | Working status LED will turn solid red.   |
| Fully Charged   | Red indicator light will turn off.        |
| Low Battery     | Red indicator light will keep flashing.   |

Specifications

|                   |                                                                                             |
|-------------------|---------------------------------------------------------------------------------------------|
| Product Name      | MEGABOX                                                                                     |
| Bluetooth Version | 5.0                                                                                         |
| Battery Capacity  | 8000mAh                                                                                     |
| Playing Time      | 3-5h playtime at 100% volume<br>10h playtime at 60% volume<br>20-25h playtime at 30% volume |
| Charging Time     | 3-4h                                                                                        |
| Speaker Unit      | 20Wx2 + 10Wx2 = 60W                                                                         |
| Charging Current  | 5V/2A                                                                                       |
| USB-A Port        | 5V/2A output (max.)                                                                         |
| Product Size      | 12 x 6 x 4.6 (in)                                                                           |
| Product Weight    | 4.8 (lb)                                                                                    |

Frequently Asked Questions

- Q: What kind of charger should we use for the speaker?  
A: Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) which support 5V / 2A or above 2A.
- Q: Why does the speaker not charge?  
A: Make sure the charging cable is correctly aligned with the port on the speaker. Secure both ends of the charging cable.  
Try another charging cable.  
To help extend the battery life, please avoid playing music while it's charging. In case you do have need, don't use more than 50% volume to play the music.  
Try another wall charger.  
If the speaker has been exposed to high or low temperatures, let the speaker return to room temperature between 46° F (8° C) and 102° F (39° C).
- Q: What if there is noise or discontinuous sound during playing?  
A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.
- Q: Why the speaker power off automatically after power on but no Bluetooth disconnection ?  
A: When there is no bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.
- Q: Why does the speaker cannot connect the once-paired cellphone?  
A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.
- Q: What is the working sequence of the speaker?  
A: Default mode is Bluetooth mode but when insert in AUX in cable, it will be AUX IN mode.
- Q: The speaker cannot be started up in a normal situation.  
A: Please plug in the charger and try in a few minutes or try to long press power button 10-30s to reset.

Care and Maintance

1. This logo means that no naked flames, such as a candle can be placed on or near the device.
2. The electrical and electronic equipment are part of a separate collection. Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations (sorting centres, rubbish dumps) are provided for you by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you are helping to protect the environment and your health.
3. Use this device in temperate climates only. The maximum ambient temperature should not exceed 39° C.
4. This device may be used by children aged 8 years or older and by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge, provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.
5. Always unplug the device before cleaning it.
6. Clean the device with a soft dry cloth only. Never use solvents.
7. Attention should be drawn to the environmental aspects of battery disposal.
8. The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
9. Use the apparatus in moderate climate only.
10. Keep this product and its charging cable away from excessive heat.
11. Do not disassemble your device.
12. When the product is fully charged, do not connect it to the charger for further long time charging.
13. Only use your device on a flat, stable surface.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Copyright © 2021 MIATONE Inc. All rights reserved.  
Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
MIATONE products are registered trademark of MIATONE in the US.  
Service contact: support@miatone.com  
MIATONE Inc.Oxnard, CA 93022

MIATONE



miatone.com/support

Register your order to get our  
Lifetime Full Service

Support@miatone.com  
www.miatone.com

