



PURE SOUND PRO X2

5.1 Channel Home Theatre With
Wired Subwoofer



USER MANUAL

What is in the box

Soundbar 1 N, Subwoofer 1 N,
Satellite Speakers 2 N, Remote Control 1 N,
Wall Mounting Accessories 1 N, User Manual 1 N

Specification

Output Power	150W
Soundbar Speaker Size	2"*3
Subwoofer Speaker Size	4.5"*1
Satellite Speaker Size	2"*2
Bluetooth Version	5.3
Frequency Response	40Hz-20kHz
Signal to Noise Ratio	80
Soundbar Size	410*100.5*65mm
Subwoofer Size	182*182*248mm
Satellite Speaker Size	150*104.7*62mm
Satellite Wire Length	5m

Remote Control

1. Power Control

- Press Power to turn ON the soundbar from standby mode.
- Press again to switch the soundbar to standby mode.

2. Mute Control

- Press MUTE to silence audio instantly.
- Press again to restore sound.

3. Input Selection

- Press INPUT to switch between Bluetooth, HDMI, USB, and AUX modes.

4. Playback Controls

- Play/Pause: Works in Bluetooth and USB mode.
- In AUX/HDMI mode, Play acts as Mute/Unmute.
- Previous/Next: Skip tracks in Bluetooth/USB mode.
- Press and hold for rewind/fast forward (USB mode).

5. Volume Control

- VOL+ increases volume.
- VOL- decreases volume.
- Long press for faster adjustment.

6. Sound Settings

- TRE+/TRE- adjusts treble (high-frequency sound).
- BASS+/BASS- adjusts bass (low-frequency sound).

7. EQ Modes

- Press EQ to switch between Music, Movie, News, and 3D modes.
- Press and hold EQ to reset to default (Music mode).

8. Reset & Bluetooth Control

- Press and hold Play/Pause to reset volume and sound settings.
- In Bluetooth mode, press and hold to disconnect and clear pairing history.

Important Notes

- Functions may vary depending on selected mode.
- Track controls work only in Bluetooth and USB modes.
- Point remote directly at the soundbar for best performance.



Soundbar Buttons

1. Power Button

- Power On: Press once to turn on the soundbar when in standby (red indicator).
- Power Off / Standby: Press once to switch to standby mode (red indicator).

2. Mode Button

- Press to cycle through input modes: Bluetooth - HDMI - USB - AUX.

3. Volume Down (-) Button

- Press once to decrease volume.
- Press and hold to play the previous track (Bluetooth/USB modes).

4. Play / Pause Button


- Press once to play/pause audio in Bluetooth/USB mode.
- Press once to mute/unmute in AUX/HDMI mode.
- Press and hold for 2 seconds to disconnect Bluetooth; hold again to reconnect.

5. Volume Up (+) Button

- Press once to increase volume.
- Press and hold to play the next track (Bluetooth/USB modes).

Notes

- Functions may vary depending on selected mode.
- Ensure correct mode is selected for proper operation.
- LED indicators show current mode and status.

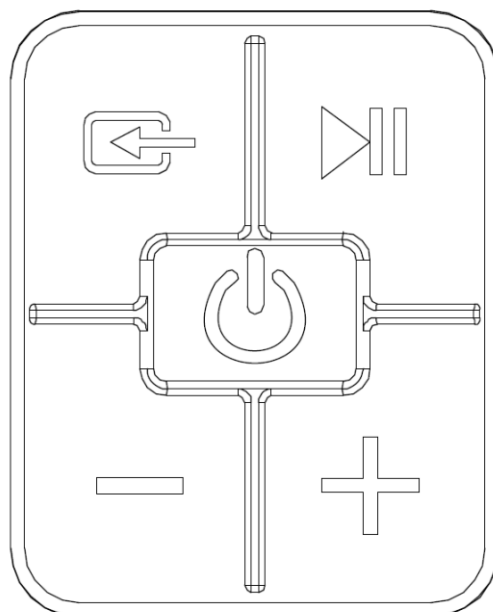



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management

E: info@3rrecycler.com

**For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste**