

# TECHRISE

## Book-end Lamp

Model: TB-126SALI

 
SN: TR-BL001  
User Manual

Thank you for purchasing TECHRISE Book-end Lamp. Please read this User Manual thoroughly before use of the product and retain it for future reference. If you have any problem using this product, please contact us by email at [support@techrise.website](mailto:support@techrise.website).

### Package Contents



### Product Overview

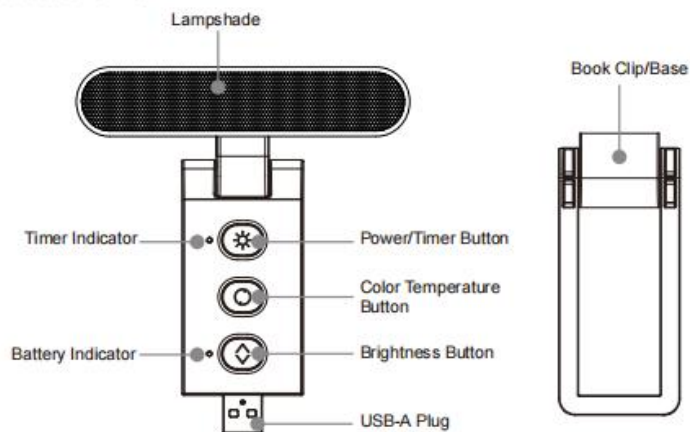

### Specifications

 
Input Voltage: DC 5V

Operating Current:  $\leq 80$  mA


### Angle Adjustment

#### 1. Lamp Head

- Vertical Tilt: 90°

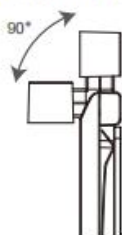


- Horizontal Rotation: 180°

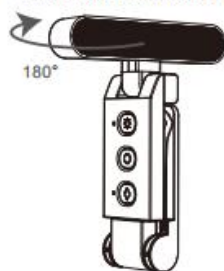 

EN-01

#### 2. Book Clip Adjustment

 - Front-Back: 315°

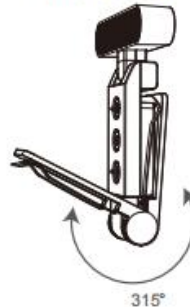

## Lightning Controls

| Button                                                                            | Action       | Result                    |
|-----------------------------------------------------------------------------------|--------------|---------------------------|
|  | Single press | Power on/off              |
|  | Single press | Adjust color temperatures |
|  | Single press | Adjust brightness levels  |

## Timer Settings

**Note:** The lamp should be powered on before setting the timer.

| Button                                                                            | Action                      | Indicator Light | Result                    |
|-----------------------------------------------------------------------------------|-----------------------------|-----------------|---------------------------|
|  | Press & hold until light on | Orange          | Set 30-minute timer       |
|                                                                                   | Press & hold again          | Blue            | Switch to 60-minute timer |
|                                                                                   | Press & hold again          | Light off       | Cancel timer              |

## Charging Instructions

### 1. Locate USB-A Plug

Pull off the book clip from the lamp body to expose the USB-A plug.

### 2. Connect to Power

Plug the USB-A plug into:

- 5V/1A phone charger (recommended)
- Computer USB port
- Portable power bank

### 3. Battery Indicator Status

 
- Charging: Red light on
- Fully charged: Red light off

### 4. Low Battery Alert:

When turned on, the main lamp blinks once every 5 minutes before shutting down.

## Assembly Guide After Charging

1. Ensure the lamp is fully charged (battery indicator: red light off), then disconnect it from the power supply.
2. Align the arrow at the bottom of the lamp body with the arrow on the book clip.
3. Insert the USB-A plug firmly and fully into the lamp body for use.

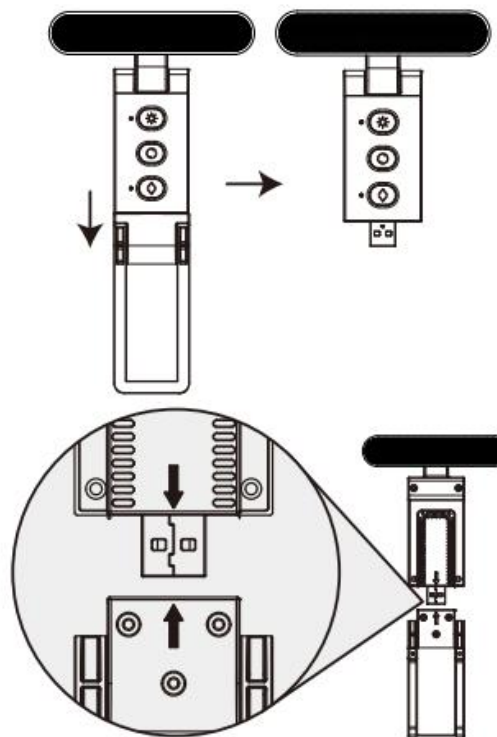

## Safety Instructions

1. This product is not waterproof. Do not expose it to water, fires, direct sunlight, or high temperatures.
2. Do not disassemble or modify the product. If battery leaks, discontinue use immediately.
3. Not intended for children use. Not a toy. Keep out of reach of children.
4. In case of any malfunction, immediately disconnect the power supply, discontinue use, and contact the support team.
5. The light source is non-replaceable. When it reaches the end of its service life, the entire lamp must be replaced and be disposed of properly.
6. This product contains a built-in battery. Do not dispose of it in fire.

## IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.

1. RETAIN THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.
2. Before using the product, read all instructions and caution markings on the product, accessories, and device.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Keep the product away from the fire to avoid an explosion.
6. Do not place the product in or near an inflammable, explosive, or hazardous object.
7. Do not operate the product with a damaged cord or plug.
8. Do not operate the product if it has been damaged in any way.
9. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
10. Do not throw or shake the product.
11. Do not place the product in or near water, rain, excess moisture, or extreme heat.



### Limited 12-Month Warranty

What this warranty covers.

HuizhiYunShang Technology (Shenzhen) Co., Ltd. (Manufacturer) warrants to the original purchaser of this TechRise product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

HuizhiYunShang warrants the TechRise product for 12 Months.

What will we do to correct problems?

HuizhiYunShang will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TechRise product is not provided to HuizhiYunShang for inspection upon HuizhiYunShang's request at the sole expense of the purchaser, or if HuizhiYunShang determines that the TechRise product has been improperly installed, altered in any way, or tampered with. The TechRise Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TechRise website or email support@techrise.website for more information. To extend the warranty period, please visit TechRise website and register your TechRise products within 90 days of purchase.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

### Correct Disposal of This Product:

( Waste Electrical& Electronic Equipment )

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



### FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, HuizhiYunShang Technology (Shenzhen) Co., Ltd. declares that the product type TB-126SALI is in compliance with Directive 2014/30/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.ltechrise.com>

EN-03