

PBX-1260E

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL


WARNING!


TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers, Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.


¡ADVERTENCIA!


PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece este símbolo en este manual de instrucciones y seguir todas las precauciones tal como se indican.

 

WARNING!


POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de plus de sécurité lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont indiquées.

CONTROL PANEL


1. MODE: Input modes selection (Bluetooth, USB/TF, FM, AUX)
2. REP: Repeat Play Key
3. LED MODE: Toggle to select LED party light mode
MIC.PRI: Microphone priority sets mic level above music
4. POWER: Power ON/OFF
5. MIC.VOL: Microphone volume control
6. MIC ECHO: Microphone echo control
7. GT.VOL: Guitar volume control
8. TREBLE: Treble control
9. BASS: Bass control
10. VOLUME: Master volume control
11. TF: TF Card Input
12. USB: USB music player
13. LED POWER: Front LED Light Switch
14. PREV/CH-: Press for Previous Track in Mp3 mode; Press for previous channel in FM

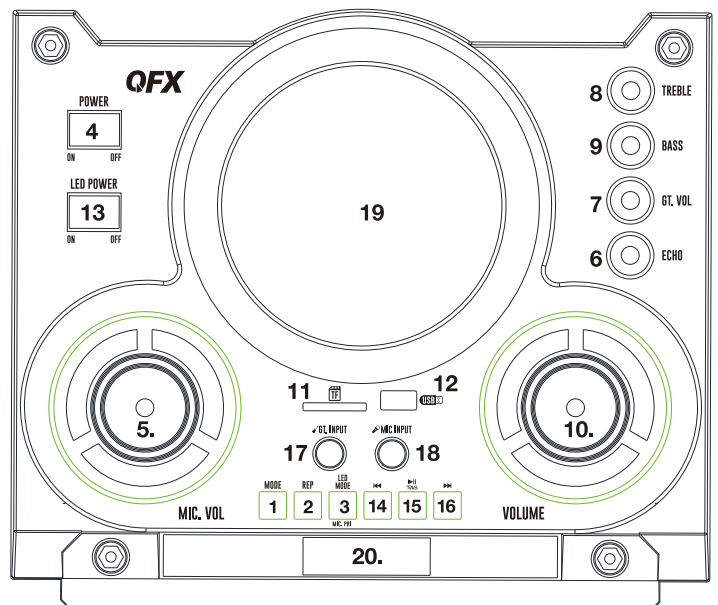


15. PLAY/SCAN: Press to play or pause in Mp3 mode; Press to Auto Scan and Preset available frequencies in FM mode.
16. NEXT/CH+: Press for next Track in MP3 mode; press for next channel in FM mode.
17. GT INPUT: Guitar input jack
18. MIC INPUT: Wired microphone input
19. DISCO BALL: Disco party light
20. LED DISPLAY:LED

PANEL DE CONTROL

 1. MODO: Selección de modo de entrada (Bluetooth, USB/TF, FM, AUX)
2. REP: Tecla de repetición
3. MODO LED: Pulsa para seleccionar el modo de luz LED para fiestas
4. ENCENDIDO: Encendido/Apagado
5. VOL.MIC: Control de volumen del micrófono
6. ECO.MIC: Control de eco del micrófono
7. VOL.GT: Control de volumen de la guitarra
8. AGUDOS: Control de agudos
9. GRAVES: Control de graves
10. VOLUMEN: Control de volumen maestro
11. TF: Entrada de tarjeta TF
12. USB: Reproductor de música USB
13. ENCENDIDO LED: Interruptor de luz LED frontal
14. PREV/CH-: Pulsa para la pista anterior en modo MP3; pulsa para el canal anterior en FM

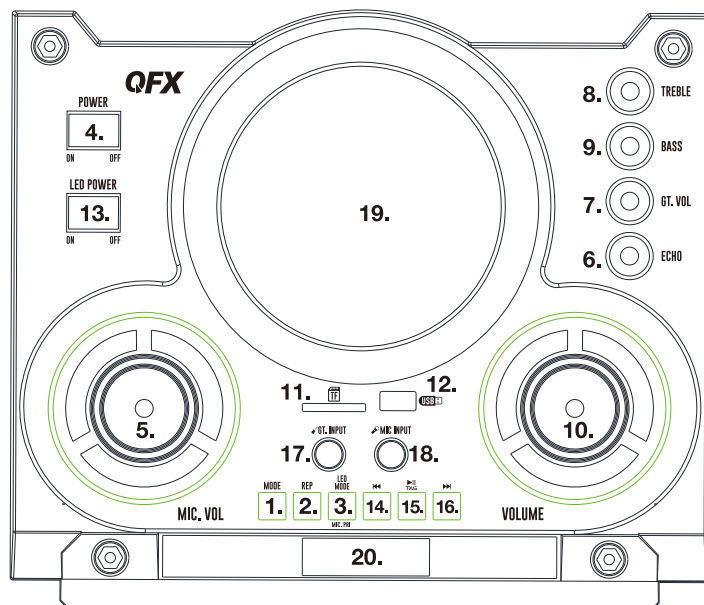

 15. REPRODUCIR/ESCANEAR: Pulsa para reproducir o pausar en modo MP3; pulsa para escanear automáticamente y preseleccionar las frecuencias disponibles en modo FM.
16. SIGUIENTE/CH+: Pulsa para la siguiente pista en modo MP3; pulsa para el siguiente canal en modo FM.
17. ENTRADA GT: Conector de entrada de guitarra
18. ENTRADA DE MIC: Entrada de micrófono con cable
19. BOLA DE DISCO: Luz para fiestas
20. PANTALLA LED: LED

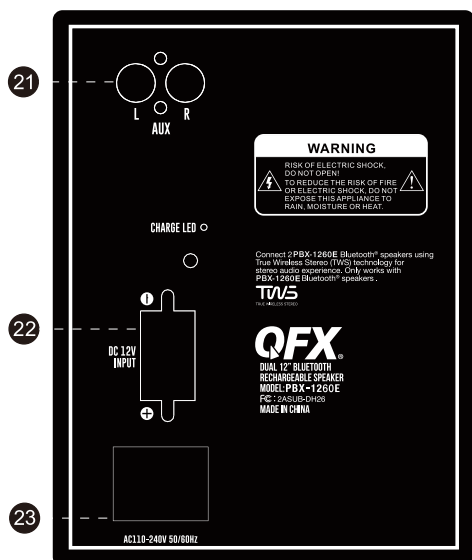

UNIT BACK PANEL

21. AUX INPUT: Audio input
22. DC 12V INPUT: External DC 12V
23. AC INPUT: AC110-240V 50/60Hz

PANEL TRASERO DE LA UNIDAD

21. ENTRADA AUX: Entrada de audio
22. ENTRADA DE 12 V CC: 12 V CC externa
23. ENTRADA DE CA: CA 110-240 V 50/60 Hz

REMOTE CONTROL



1. Power On/Off: Turns the Power On/Off
2. Number: Number keypad (0-9)
3. MUTE: Press to mute the Volume
4. REC: Recording
5. REP: Press to repeat and/or shuffle
6. : Press to Play or Pause
7. : Previous Track/Channel
8. : Next Track/Channel
9. MODE: Select source (BT, Line, FM, USB/TF)
10. AUX: Aux input
11. FM: FM radio
12. VOL+: Volume up
13. VOL- :Volume down
14. EQ: Equalizer presets

TO ENABLE SCROLLING LED TEXT MESSAGE DISPLAY, ON REMOTE CONTROL, PRESS:

15. LED screen display: HAPPY BIRTHDAY
16. LED screen display: HAPPY ANNIVERSARY
17. LED screen display: HAPPY NEW YEAR
18. LED screen display: * CONGRATULATIONS *
19. LED screen display: *** HAPPY*4TH*OF*JULY***
20. : Mic Priority
21. : Accompaniment
22. REP: Record
23. REC*: Repeat

PRESS AND HOLD BUTTON #16-20 TO TURN MESSAGE DISPLAY OFF. THE POWER OR LED ON/OFF SWITCH ON SPEAKER WILL ALSO RESET LED LIGHTS BACK TO DEFAULT LED LIGHTS MODE.

1. Encendido/Apagado: Enciende/apaga el dispositivo
2. Número: Teclado numérico (0-9)
3. SILENCIO: Pulsa para silenciar el volumen
4. REC: Grabación
5. REP: Pulsa para repetir o reproducir aleatoriamente
6. : Pulsa para reproducir o pausar
7. : Pista/Canal anterior
8. : Pista/Canal siguiente
9. MODO: Selecciona la fuente (BT, Línea, FM, USB/TF)
10. AUX: Entrada auxiliar
11. FM: Radio FM
12. VOL+: Subir volumen
13. VOL-: Bajar volumen
14. EQ: Preajustes del ecualizador

PARA ACTIVAR LA PANTALLA DE TEXTO LED DESPLAZABLE EN EL CONTROL REMOTO, PRESIONE:

15. Pantalla LED: "HAPPY BIRHTDAY"
16. Pantalla LED: "HAPPY ANNIVERSARY"
17. Pantalla LED: "HAPPY NEW YEAR"
18. Pantalla LED: "* CONGRATULATIONS *"
19. Pantalla LED: "** HAPPT 4TH OF JULY *"
20. : Prioridad de micrófono
21. : Accompaniment
22. REP: Grabar
23. REC*: Grabación

MANTENGA PRESIONADO EL BOTÓN #16-20 PARA APAGAR LA PANTALLA DE MENSAJES. EL INTERRUPTOR DE ENCENDIDO O DE LED EN EL ALTA VOZ TAMBIÉN RESTABLECERÁ LAS LUCES LED AL MODO DE LUCES LED PREDETERMINADO.

CHARGING THE SPEAKER

1. Full recharge takes 8-12 hours.
2. Please use the supplied charging cable to charge the speaker.
3. When you are using your unit while it is plugged to an external power source, battery switch can be ON or OFF
4. To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out. Not charging your unit right away can affect the performance of the battery.

WIRED MICROPHONE INSTRUCTIONS

1. Insert the microphone plug into the microphone input jack.
2. Adjust the microphone volume knob MIC VOL for proper volume.
3. Adjust the echo depth to the proper position.
4. Now you can start using your microphone.

WIRELESS CONNECTION

You can connect your compatible wireless devices such as a mobile phones, computer etc., to listen to your audio tracks from this speaker.

Press the MODE button on the speaker, or press the MODE button on the remote control to enter wireless mode, indicated on the LED display.

Using the native controls on your device, select "PBX-1260E" in your settings to pair, and once successful, you will hear a sound of notice on the speaker.

TWS FUNCTION

1. Turn on both devices of the same model and switch both devices to Bluetooth mode.
2. The distance between the two units is within 50 CM.
3. Select one as the host (any one can) press the TWS button for 3 seconds, and start to connect when the connection is successful, and the USB display "BLUE" of the slave is bright.
4. Turn on the phone Bluetooth and connect to the QFX PBX-1260E. The next two speakers will automatically connect to each other.
5. Disconnect TWS: Press and hold the MODE button for 3 seconds. TWS has been disconnected.

PRECAUTIONS

To prevent operational problems or serious damage to the speaker unit, please follow the below precautions:

1. Pull out the power cord from the end of the plug. Do not pull the wire.
2. The speaker should be kept away from other heat sources.
3. Do not attempt to open the internal speaker unit or change the circuitry as this may cause the unit to be damaged or cause an electrical shock.
4. If you are not going to use the unit for a long period of time, pull out the plug and store in a cool dry place.
5. Ensure the speaker is properly ventilated & kept in a dry location. It is recommended that the speaker be kept a minimum of 4 inches away from any wall or object.

WARNING: Do not use this Speaker in any wet location, in the rain or a location with high moisture.

Do not Place any liquids or other objects on the speaker as this may cause an accidental short.

* Specifications are subject to change without notice.

* All Trademarks and trade names belong to their respective

 The Lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
--	---	---

The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.

The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.

NOTES:

Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2ASUB-DH26



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-1260E journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.