 
 


Acteril item locator Manual

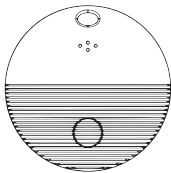

6. Button function

6.1 Power on
Press and hold the function button for 3 seconds to power it on. A "ring-ring" chime will indicate that the device is turned on. If the product is not linked with your Google Account, it will be closed within 10 minutes automatically. You need to trigger the find my function again to continue pairing.

6.2 Power off
Double-click the device button, and you will hear a confirmation tone. Then, press and hold the button for more than three seconds until two short beeps are heard, which indicates the device has powered off.

6.3 Restore factory settings
Press the function button two times, you can hear one beep, then press the function button four times rapidly and then hold it a fifth time until you hear a ring-ring chime, now the device is reset.

Product Overview

Acteril item locator is a smart tracker device that uses Google's Find Hub network, paired with the "Find Hub" app on Android™ devices, to quickly and securely locate your personal items on Google Maps. All location information remains private, and even Google cannot access it.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection, Works on Android 9+ on select devices [devices or phones] and in certain countries for age-eligible users.

1. Log in Find Hub app

1. Go to Google Play and search for "Find Hub"
2. Install the app or click to "Update".
3. Hit "Open" or click on the Find Hub app icon on your phone home page.
4. Log in to the Find Hub page with your Google Account. You might want to select the checkbox that says "Don't ask again!". If you have more than one account, your item will link to the primary account setup on your phone.
5. You might be asked to allow some permissions. Review the terms and continue.

FAQ

1. Can't Connect My Device With Find Hub App, the following action is recommended:
Step 1. Update your Google System to the latest version.
Step 2. Update your Google Play Services to the latest version.
Step 3. Calibrate the phone time to local time.
Step 4. Restart the mobile network and Bluetooth.
Step 5. Reset your device to factory settings, then wait for a pop-up "Acteril item locator" and tab it to connect.

 
Check app Permissions:

- **Google Play Services:** Make sure "Nearby Devices" permission is enabled.
- **Google Play Store:** Enable both "Nearby Devices" and "Display over other apps" permissions.

2. Once linked to a Google Account, the device becomes inaccessible to other users. You need remove the device from Find Hub app and reset the device, then it can be used by other users.

2. Power on

Power On: Hold on the device's power button for 3 seconds, and when you hear a ring-ring chime, it indicates that the device has been powered on. (Refer to the diagram)

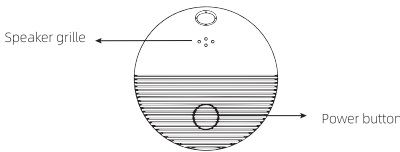

3. Connect to Find Hub app

- 3.1 Make sure your phone's Bluetooth is ON and you are connected to the Internet.
- 3.2 Bring your tag close to your phone and wait for the pop-up to show Acteril item locator, on the pop up bottom sheet, hit "Connect". Read and accept the prompts to complete the pairing

WARNING

1. Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 40°C/104°F or incinerate.
6. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
6. The compatible battery type is CR2032.
7. The nominal battery voltage: DC 3V
8. Ensure the batteries are installed correctly according to polarity(+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

4. Product introduction

4.1 Nearby Finding

4.1.1 You're sometimes closer to your lost item than you may think. If you know that it's somewhere in the house, Find Hub will indicate its signal strength so you can narrow down its location.
4.1.2 If your device is within wireless signal range, select your device in the "Find Hub" app and tap "Play Sound" to locate your device. Once found, tap "Stop Sound" to silence the device.
4.1.3 Google Assistant on your Google Home or Pixel Watch is here to help. Try prompts such as, "Hey Google, find my wallet" or "Hey Google, find my keys" to quickly find your things.

4.2 A community for finding

For the moments when you're really far away from an item, the Find Hub network is here to help. Android devices all over the world - like tablets, phones, and laptops - will work together to support you in finding that tablet you left on an airplane, two layovers ago.

4.3 Enable Lost Mode

When your item is lost, select the device in the "Find Hub" app and tap "Mark as lost". You will receive a notification when location becomes available. You can leave your contact information for the finder of your item to contact you.

Battery type: CR2032. Battery voltage: 3V.

Keep in original package until ready to use; Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash.

WARNING

• **INGESTION HAZARD:** This product contains a button cell or coin battery. **• DEATH** or serious injury can occur if ingested.
• **As swallowed button cell or coin battery can cause as Internal Chemical Burns in as little as 2 hours.**
• **KEEP new and used batteries OUT OF REACH OF CHILDREN**
• **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

4.4 Location Sharing

Select the device in the "Find Hub" app, then tap "Share Device". After the accessory owner confirms sharing - the accessory will be visible on the list in Find Hub app. Both accounts will see the location updates and may ring the device locally.

4.5 Unknown tracker alerts

Your safety comes first. Find Hub is built to deter unwanted tracking. If your Android phone notices an unfamiliar device moving with you, you'll receive a notification.
View the unknown device on a map, ring it to find it by sound, or get further help.

4.6 Privacy

Your location data is end-to-end encrypted, meaning that Google can never view or access it. Only you can see where your items have been and currently are. With the Find Hub app, Google does not use nor share your data. The information you share about yourself and your devices remains confidential.

 
5. Battery replacement

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

(Graphic for reference)

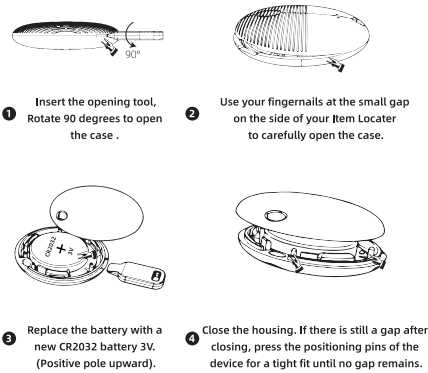

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

