



Instruction Manual

Wireless Flat panel DAB Hi-Fi

RD-D325B



Safety Warnings

DAB all-in-one Hi-Fi

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



Use only power supplies listed in the user instructions.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.

- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not ingest the battery. Chemical Burn Hazard.
- The remote control supplied with this product contains a coin/button cell battery.
- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used battery away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



This unit is designed for indoor use only.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.



DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for Battery Disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

Safety Warnings - Coin, Lithium Coin Cell Battery

- **WARNING:** This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- **WARNING:** Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Location of the Lithium coin cell battery

The Lithium coin cell battery is located in the battery compartment.



BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Precautions during handling of batteries

When used correctly, lithium batteries provide a safe and dependable source of power. However, if they are misused or abused, leakage, venting or in extreme cases, explosion and/or fire can result.


a) Keep new and used batteries out of the reach of children

If a battery has been ingested, or there is a possibility one might have been ingested, please seek medical attention and inform the medical authorities that you suspect battery ingestion.

It's not always clear when a child has swallowed a button battery, as there are no specific symptoms. However, they might:

- cough, gag, or drool;
- seem to have a stomach bug or virus;
- vomit;
- complain of pain in their stomach, chest, or throat;
- appear tired or sluggish; and
- lose their appetite.

Since the signs aren't obvious, it's important to keep a close eye on loose, used, or spare button batteries in your home, as well as the products that contain them.

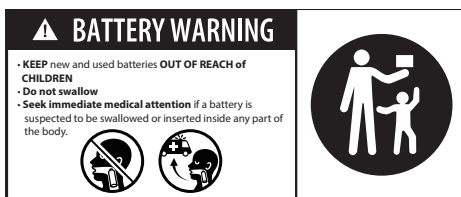

If the battery compartment does not close securely, stop using the product and keep it away from children.

Copyright is claimed on the above pictogram. Copyright holders are Duracell International Operations SARL, Rue du Pré-de-la-Bichette 1, 1202 Genève, Switzerland.

- b) **Do not allow children to replace batteries without adult supervision**
- c) **Do not short-circuit batteries**

Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the equipment

When batteries are inserted in reverse they might be short-circuited or charged. This can cause overheating, leakage, venting, rupture, explosion, fire and personal injury.

When the positive (+) and negative (-) terminals of a battery are in electrical contact with each other, the battery becomes short-circuited. For example loose batteries in a pocket with keys or coins, can be short-circuited. This can result in venting, leakage, explosion, fire and personal injury.

d) Do not charge batteries

Attempting to charge a non-rechargeable (primary) battery can cause internal gas and/or heat generation resulting in leakage, venting, explosion, fire and personal injury.

e) Do not force discharge batteries

When batteries are force discharged by means of an external power source, the voltage of the battery will be forced below its design capability and gases will be generated inside the battery. This can result in leakage, venting, explosion, fire and personal injury.

f) Do not mix new and used batteries or batteries of different types or brands

When replacing batteries, replace all of them at the same time with new batteries of the same brand and type. When batteries of different brand or type are used together or new and used batteries are used together, some batteries might

be over-discharged / force discharged due to a difference of voltage or capacity. This can result in leakage, venting, explosion or fire, and can cause personal injury.

g) **Exhausted batteries should be immediately removed from equipment and properly disposed of**

When discharged batteries are kept in the equipment for a long time, electrolyte leakage can occur causing damage to the equipment and/or personal injury.

h) **Do not heat batteries**

When a battery is exposed to heat, leakage, venting, explosion or fire can occur and cause personal injury.

i) **Do not weld or solder directly to batteries**

The heat from welding or soldering directly to a battery can cause leakage, venting, explosion or fire, and can cause personal injury.

j) **Do not dismantle batteries**

When a battery is dismantled or taken apart, contact with the components can be harmful and can cause personal injury or fire.

k) **Do not deform batteries**

Batteries should not be crushed, punctured, or otherwise mutilated. Such abuse can cause leakage, venting, explosion or fire, and can cause personal injury.

l) **Do not dispose of batteries in fire**

When batteries are disposed of in fire, the heat build-up can cause explosion and/or fire and personal injury. Do not incinerate batteries except for approved disposal in a controlled incinerator.

m) **A lithium battery with a damaged container should not be exposed to water**

Lithium metal in contact with water can produce hydrogen gas, fire, explosion and/or cause personal injury.

n) **Do not encapsulate and/or modify batteries**

Encapsulation or any other modification to a battery can result in blockage of the pressure relief mechanism(s) and subsequent explosion and personal injury. Advice from the battery manufacturer should be sought if it is considered necessary to make any modification.

o) **Store unused batteries in their original packaging away from metal objects. If already unpacked, do not mix or jumble**

batteries

Unpacked batteries could get jumbled or get mixed with metal objects such as keys, coins, etc. This can cause battery short-circuiting which can result in leakage, venting, explosion or fire, and personal injury. One of the best ways to prevent this from happening is to store unused batteries in their original packaging.

p) **Remove batteries from equipment if it is not to be used for an extended period of time unless it is for emergency purposes**

It is advantageous to remove batteries immediately from equipment which has ceased to function satisfactorily, or when a long period of disuse is anticipated (e.g. camcorders, digital cameras, photoflash, etc.). Although most lithium batteries on the market today are highly leak resistant, a battery that has been partially or completely exhausted might be more prone to leak than one that is unused.

q) **If the battery compartment does not close securely, stop using the product and keep it away from children.**

Storage

a) **Store batteries in well ventilated, dry and cool conditions**

High temperature or high humidity can cause deterioration of the battery performance and/or surface corrosion.

b) **Avoid storing or displaying batteries in direct sun or in places where they get exposed to rain**

When batteries get wet, their insulation resistance might be impaired and self-discharge and corrosion can occur. Heat can cause deterioration.

c) **When batteries are unpacked and mixed they can be short-circuited or damaged.**

Disposal

a) **Do not dismantle batteries**

Some ingredients of lithium batteries might be flammable or harmful. They can cause injuries, fire, rupture or explosion.

b) **Do not dispose of batteries in fire except under conditions of approved and controlled incineration**

Lithium burns violently. Lithium batteries can explode in a fire. Combustion products from lithium batteries can be toxic and corrosive.

c) **Store collected batteries in a clean and**

dry environment out of direct sunlight and away from extreme heat

Dirt and wetness might cause short-circuits and heat. Heat might cause leakage of flammable gas. This can result in fire, rupture or explosion.

d) Store collected batteries in a well-ventilated area

Used batteries might contain a residual charge. If they are short-circuited, abnormally charged or force discharged, leakage of flammable gas might be caused. This can result in fire, rupture or explosion.

e) Do not mix collected batteries with other materials

Used batteries might contain residual charge. If they are short-circuited, abnormally charged or force discharged, the generated heat can ignite flammable wastes such as oily rags, paper or wood and cause a fire.

f) Protect battery terminals

Protection of terminals should be considered by providing insulation, particularly for those batteries with a high voltage. Unprotected terminals might cause short-circuits, abnormal charging and forced discharge. This can result in leakage, fire, rupture or explosion.

Instructions for use

- a) Always select the correct size and type of battery most suitable for the intended use. Information provided with the equipment to assist correct battery selection should be retained for reference.
- b) Replace all batteries of a set at the same time.
- c) Clean the battery contacts and also those of the equipment prior to battery installation.
- d) Ensure that the batteries are installed correctly with regard to polarity (+ and -).
- e) Remove exhausted batteries promptly.

UK Representative and Responsible Person

Currys Group Limited (No. 504877)
1 Portal Way, London, W3 6RS, UK
<https://www.currys.co.uk>

EU Representative and Responsible Person

Currys Ireland Limited (No. 259460)
3rd Floor Office Suite, Omni Park SC,
Santry, Dublin 9, Republic of Ireland
<https://www.currys.ie>

UK & EU Contact details: business.standards@currys.co.uk

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(Safety-JVC DAB Hi-Fi System-250425V6)

Contents

Unpacking	4
Product Overview	5
Front View	5
Rear View	5
Top View	6
Remote Control	7
Operating Your Remote Control	9
Replace the Remote Control Battery	9
Remote Control Operation Range	10
Wall Mounting	10
Hi-Fi Placement	12
Connections	12
Using the AUX Connection	12
Connecting to the Mains Supply	13
General Operation	13
Powering ON/OFF	13
Selecting Modes	13
Adjusting the Bass	13
Adjusting the Volume	13
Adjusting the Sound Effect	14
Adjusting the Brightness	14
Setting of the Clock	14
Time Display	14
Synchronising the Clock	14
Setting the Alarm Timer	15
Activate and Deactivate the Alarm Timer	15
Setting the Sleep Timer	15
DAB Operation	16
Full Scan	16
Presetting Stations	16
Recalling a Preset Station	16
DAB Display Modes	17
FM Operation	18
Scanning for Radio Stations	18
Searching for a Station Automatically	18
Searching for a Station Manually	18
Presetting Stations	18
Recalling a Preset Station	19
RDS (Radio Data System) Reception	19
Compatible Disc Types	20
CD/MP3 Operation	20

Playback	20
To Pause Playback.....	21
To Stop Playback.....	21
Skipping to Another Track.....	21
Random Playback	21
Repeat Playback.....	21
Programme Setting.....	21
USB Operation	22
Bluetooth® Operation	23
AUX Operation	23
Maintenance	24
Cleaning the Unit.....	24
Handling Discs	24
Cleaning Discs.....	24
Storing Discs.....	24
Hints and Tips	25
Product Fiche and Specifications	27

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

 
- Main Unit
- Remote Control
- Mains Cable
- Instruction Manual & Safety Warnings
- 3.5 mm to RCA Stereo Audio Cable
- USB Connecting Cable




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Centre on **0818 810575**.

Product Overview

Front View

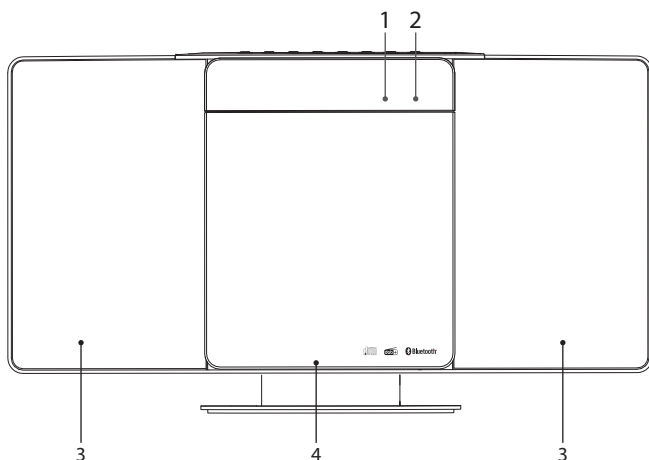


Rear View

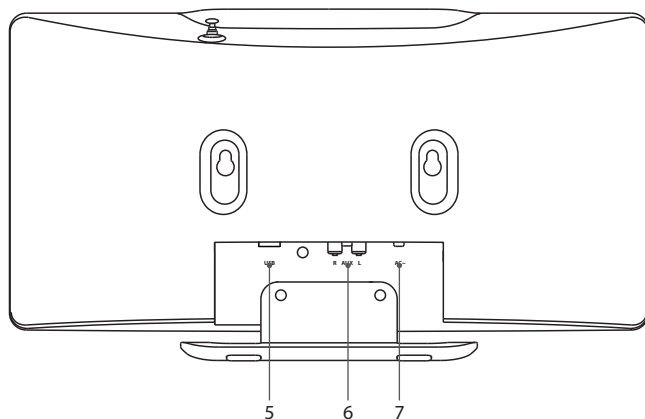 

1. Display
2. Remote Sensor
Receive signals from the remote control.
3. Speakers
4. CD Tray
5. **USB** Socket
6. **AUX L/R** Sockets
7. **AC~** Socket
Connect the mains cable to the mains socket.

 
Top View

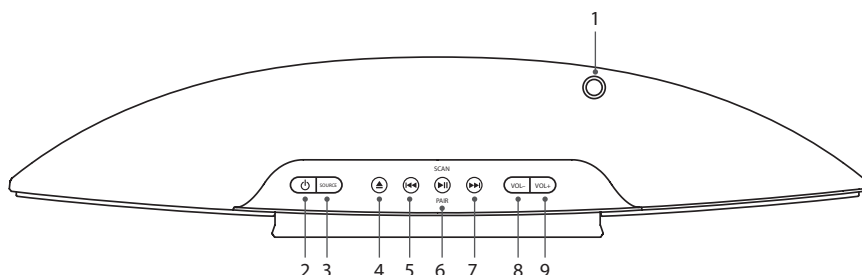


1. Aerial
2. Φ Button
Switch the unit between the **On** and **STANDBY** mode.
3. **SOURCE** Button
Switch between **DAB**, **BLUETOOTH**, **DISC**, **USB**, **AUX**, and **FM** mode.
4. Δ Button
Open or close disc compartment.
5. $\ll$ Button
 - Press to skip backwards to the beginning of the track or to the previous track in **DISC**, **USB** and **BLUETOOTH**.
 - Press and hold to fast reverse the current track in **DISC** and **USB** mode.
 - Select the previous preset station.
 - Press to search for a radio station going backwards through accessible radio frequencies in **FM** and **DAB** mode.
 - Press and hold to perform an auto search in **FM** mode.
6. $\lvert\lvert/\text{SCAN}/\text{PAIR}$ Button
 - Play/pause/resume playback.
 - Press to confirm a selection.
 - Press to perform auto scan for radio stations in **FM** and **DAB** mode.
 - Press and hold to enter pairing mode in **BLUETOOTH** mode.
7. $\rvert\rvert$ Button
 - Press to skip to the next track in **DISC**, $\mathbb{B}$ **Bluetooth** and **USB** mode.
 - Press and hold to fast forwards the current track in **DISC** and **USB** mode.
 - Select the next preset station.
 - Press to search for a radio station going forwards through accessible radio frequencies in **FM** and **DAB** mode.
 - Press and hold to perform an auto search in **FM** mode.
8. **VOL-** Button
Decrease the volume level.
9. **VOL+** Button
Increase the volume level.

Remote Control

 1. **⏻ Button**
Switch the unit between the **ON** and **STANDBY** mode.
2. **SOURCE Buttons**
Switch between **CD/USB, FM/DAB, * (Bluetooth) or AUX** mode.
3. **INFO Button**
Display **DAB / FM** radio station information.
4. **INTRO Button**
Play the first 10 seconds of a soundtrack in **DISC / USB** mode.
5. **■/MENU Button**
 - Stop playback in **USB** and **DISC** mode.
 - Display menu screen in **FM/DAB** mode.
6. **ALBUM/PRESET ▲/▼ Buttons**
 - Navigate up/down through.
 - Select a previous/next preset station (**DAB: see p.18-19; FM: see p.21**).
 - Adjust the time.
 - Skip to the previous/next album.
7. **Numeric keypad (0-9) Buttons**
 - Select a track number for playlist in **DISC, FM, DAB** and **USB** mode.
8. **DIMMER Button**
Adjust the display brightness.
9. **▲ Button**
Open or close disc compartment.
10. **SHUFFLE/FM ST/MONO Button**
 - In **CD/USB** mode, randomly play back CD or music tracks.
 - In **FM/DAB** mode, press to switch between **STEREO** or **MONO** mode.

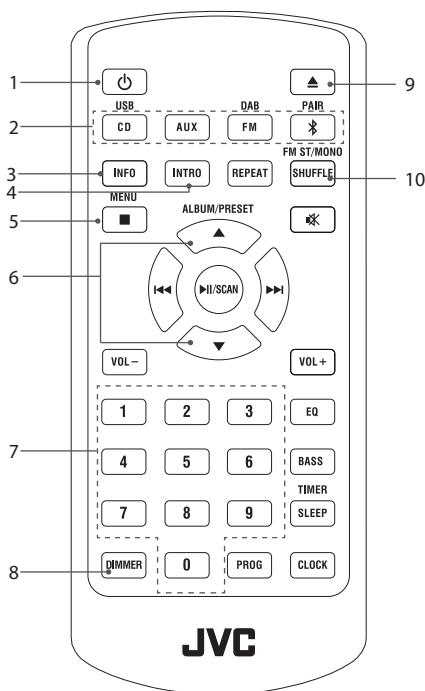


11. **REPEAT** Button
Select repeat play mode in **DISC** and **USB** mode.
12. **Mute** Button
Mute or resume the sound.
13. **II/SCAN** Button
 - Play/pause/resume playback.
 - Press to confirm a selection.
 - Press to perform auto scan for radio stations in **FM** and **DAB** mode.
14. **FF/FF** Buttons
 - In **DISC/BLUETOOTH/USB** mode: Search backward/forward within a track/disc.
 - In **DISC/USB** mode: Press and hold to fast reverse/forwards within a track.
 - In **FM** mode: Search radio station manually, press and hold the button to search automatically.
 - Navigate to select an item on a menu screen (DAB).
15. **VOL+/VOL-** Buttons
Increase/Decrease the volume level.
16. **EQ** Button
Select the preset equaliser.
17. **BASS** Button
Turn the bass **ON** or **OFF**.
18. **SLEEP/TIMER** Button
Set the sleep/alarm timer.
19. **CLOCK** Button
 - In **STANDBY** mode, press and hold to activate clock setup.
 - Display current clock
20. **PROG** Button
 - Programme soundtracks (**see p.23**).
 - Preset radio stations (**DAB: see p.18-19; FM: see p.21**).

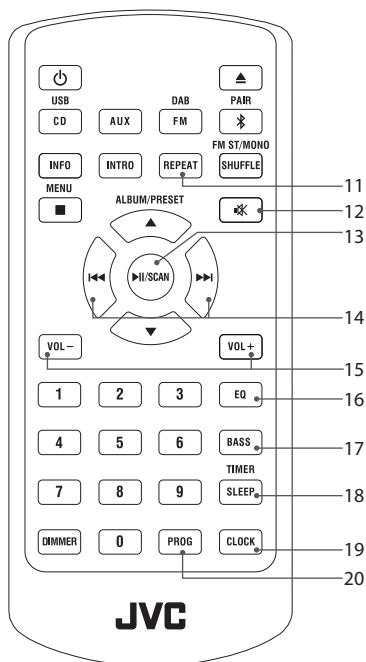 


Operating Your Remote Control

 When you first time use remote control, remove the protective tab to activate the remote control battery.

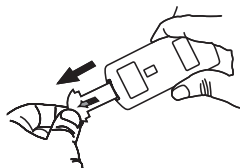

Replace the Remote Control Battery

 1. Pull out the battery tray.
2. Remove the old battery
3. Replace new CR2025 battery into the battery tray with correct polarity as indicated.
4. Insert the battery tray back into the slot.

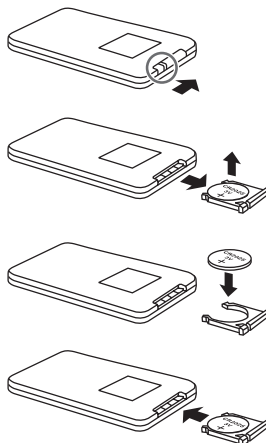


Handling the Remote Control

- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or liquid on the remote control.
- Do not place the remote control on a wet object.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- When the battery is exhausted, the remote control will not function.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.


Remote Control Operation Range

 - The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 40° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

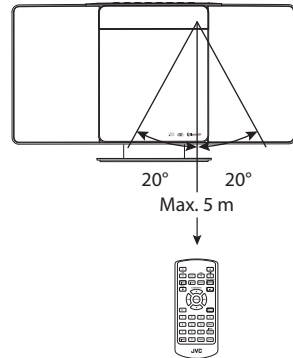


Wall Mounting

 1. Remove the screws from the main unit.

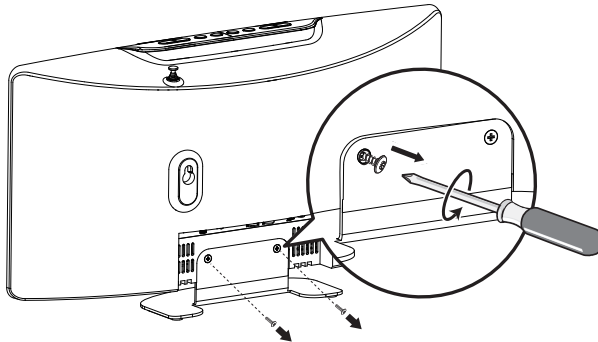


 - Drill 2 parallel holes ($\varnothing$ 3-8 mm each according to wall type) in the wall. The distance between the holes should be 121 mm. Firmly fix 1 dowel (not included) into each hole in the wall if necessary. Fix two screws (not included) onto the wall.

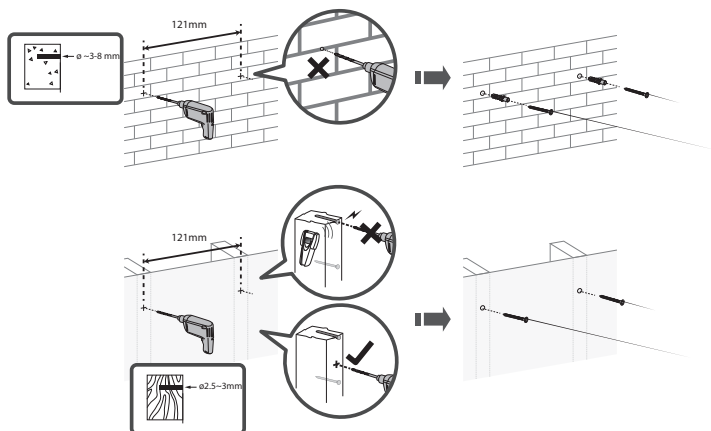


- Leave approximately 3 mm between the wall and the screw's head.

 ~5 mm

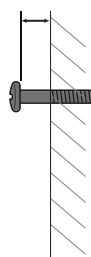


 - Leave a 5 mm gap between the wall and the screw's head. Lift the unit with the attached wall brackets over the heads of the screws and slot into place.

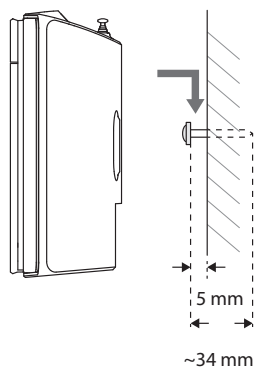


The wall where the unit is to be installed must be capable of long-term support of the total load of the unit. Measurements should also be taken to ensure sufficient strength to withstand the force of earthquakes, vibrations and other external forces. Incorrect installation can cause the unit to fall and cause injury.

 Hi-Fi Placement

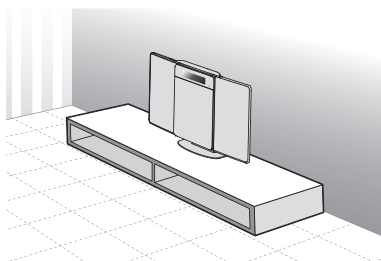

Option A

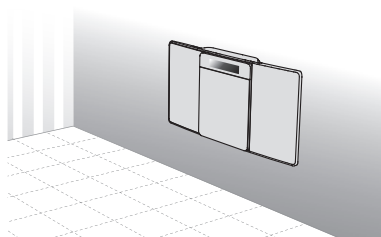 


Option B


Connections

Using the AUX Connection

 Use a 3.5mm to RCA stereo audio cable to connect an auxiliary equipment to the main unit's **AUX L/R** sockets.

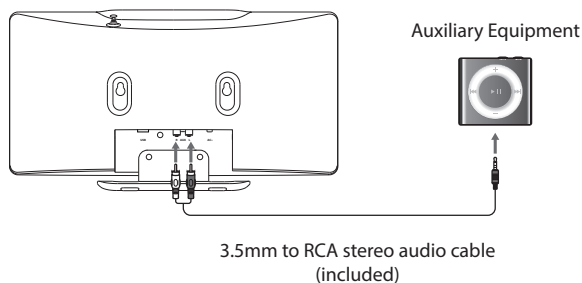


 Use a RCA stereo audio cable (not included) to connect a TV to the main unit's **AUX L/R** sockets.

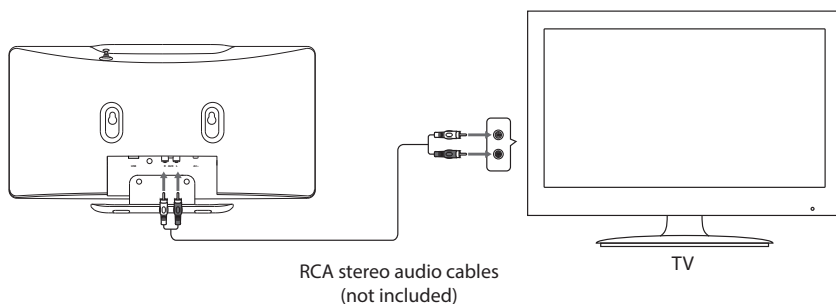

Connecting to the Mains Supply

 - This unit is designed to operate with an AC power supply.
- Connecting the unit to any other power source may cause damage to the unit. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. The unit is now connected and ready to use.
- To switch the unit off completely, unplug the mains plug from the mains socket.

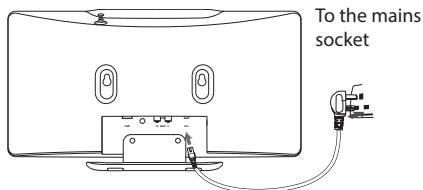

Ensure all connections are connected before connecting to the mains power socket.

General Operation

Powering ON/OFF

When you first connect the unit to the mains socket, the unit will be in **STANDBY** mode.

- Press the Standby ϕ button on the unit or the remote control to switch the unit on.
- Press the Standby ϕ button on the unit or the remote control to switch the unit back to **STANDBY** mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.

Selecting Modes

Press the **SOURCE** button repeatedly on the unit to switch between **FM**, **DISC**, **USB**, **AUX**, **BLUETOOTH** and **DAB** mode. The selected mode will show on the display. Alternatively press the **CD/USB**, **FM/DAB**, **AUX** and $\star$ **Bluetooth** button on the remote control to select the desired mode.



- The eco-friendly technology saves power by switching the device to **STANDBY** mode when there is no input signal (or weak input signal) in **USB/AUX/BLUETOOTH** mode and when CD is not playing (No disc, Stop or Pause) for over 15 minutes.
- Please turn the unit off completely to save energy when not in use.

Adjusting the Bass

Press the **BASS** button on the remote control repeatedly to select **BASS ON** or **BASS OFF**.

Adjusting the Volume

- Press the **VOL+ /VOL-** button on the unit or remote control to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** button on the remote control. Press the **MUTE** button again or press the **VOL + /VOL -** button on the remote control.

Adjusting the Sound Effect

Press the **EQ** button the remote control repeatedly to select **FLAT**, **POP**, **ROCK**, **JAZZ** or **CLASSIC** for your desired sound effect.

Adjusting the Brightness

Press the **DIMMER** button to select the brightness level.

Setting of the Clock

Manual Setting of the clock can only be done in **STANDBY** mode.

1. In **STANDBY** mode, press and hold the **CLOCK** button on the remote control until the hour digits are flashing.
2. Press the **▲▼** button on the remote control to adjust the hour digits while flashing, then press the **CLOCK** button to confirm, then the minute digits will flash.
3. Press the **▲▼** button to adjust the minute digits while flashing, then press the **CLOCK** button on the remote control to confirm.
4. Press **⏮/SCAN** button to select 12-hour or 24-hour mode.
5. Each activated state will be cleared if any buttons are not pressed in about 15 seconds.

Time Display

When in **ON** mode, press the **CLOCK** button to show the current time on the display for a few seconds.

Synchronising the Clock

When in **FM/DAB** mode, press **■/MENU** button to synchronise the clock.

After entering **CLK SYNC MENU**, press the **▲▼** button on the remote control to select below options:

- **ALL**: Synchronize with DAB or FM station.
- **DAB**: Synchronize with DAB station.
- **FM**: Synchronize with FM radio station.
- **OFF**: Turn off clock synchronisation.

Press **⏮** button to confirm.

Setting the Alarm Timer

The clock must be correctly set for the timer to operate correctly.

1. In **STANDBY** mode, press and hold the **SLEEP/TIMER** button on the remote control until the hour digits flash on the display.
2. Press the **▲▼** button on the remote control to adjust the hour digits, and then press the **SLEEP/TIMER** button to confirm.
3. Press the **▲▼** button on the remote control to adjust the minute digits, and then press the **SLEEP/TIMER** button to confirm.
4. Press the **▲▼** button on the remote control to select **BUZZER**, **DISC**, **FM**, **DAB**, or **USB** mode, and then press the **SLEEP/TIMER** button to confirm.
5. Press the **▲▼** button on the remote control to adjust the volume, and then press the **SLEEP/TIMER** button on the remote control to confirm.
6. Press the **▲▼** button on the remote control to select **DAILY**, **ONCE**, or **OFF** mode, and then press the **SLEEP/TIMER** button on the remote control to confirm. "🔔" will show on the display.

Activate and Deactivate the Alarm Timer

- After setting the alarm timer, press the **SLEEP/TIMER** button on the remote control to view the alarm settings.
- The alarm is active when "🔔" is shown on the display.
- When the alarm rings, press **⏻** button to turn off the alarm.
- In **STANDBY** mode, press the **SLEEP/TIMER** button to deactivate the alarm. The "🔔" will disappear on the display. Press the **SLEEP/TIMER** button again to activate the alarm timer.

Setting the Sleep Timer

Use the sleep timer to turn the system off after a certain number of minutes in play mode. By setting the sleep timer, you can fall asleep to music and know that your system will turn off by itself rather than play all night.

1. When in **ON** mode, press the **SLEEP/TIMER** button on the remote control repeatedly to view the different sleep timer settings. The number of minutes shown will display in this sequence:

 


2. The system is now set to turn off after the number of minutes you have set. The display will show "**SLEEP #**", e.g. "**SLEEP 30**" means the unit will switch itself off after 30 minutes, "**SLEEP 10**" means the unit will switch itself off after 10 minutes, and so on.
3. Press the **SLEEP/TIMER** button to show the reminding time till the unit switches off minutes and return back to previous screen.
4. To cancel the sleep timer press the **SLEEP/TIMER** button repeatedly until "**SLEEP 00**" shows on the display.

DAB Operation

The first time you use DAB, make sure the aerial is fully extended before selecting DAB mode, because your radio will automatically scan for DAB radio stations. If the aerial is not fully extended your radio will not tune in properly.

During the scan, the display will show "**SCAN ###**" that indicates the stations that have been found so far. Once the scan has finished, the unit will show the total number of the station, and then broadcast the first alphanumerically found station.

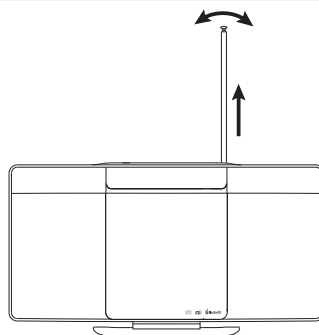

The clock will be updated automatically if you can receive DAB/FM signal in your location. In order to synchronize to the current local time, you must leave it on the DAB/FM station for a period of time.

Full Scan

FULL SCAN will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.

1. Press the **►/SCAN** button to start **FULL SCAN**.
2. During the scan, the display will show **SCAN ###**.
3. Once the scan has finished, the unit will show the total number of the station, and then broadcast the first alphanumerically found station.

Presetting Stations

You can store up to 20 of your favourite DAB stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save.
2. Press **PROG** button on the remote control. The display will show "**## Empty**", and the preset number will flash.
3. Press **▲▼** button on the remote control to select your desired station preset number.
4. Press the **PROG** button to confirm your station, the display will show "**SAVED**".

Recalling a Preset Station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing the **▲▼** button or number key on the remote control to select your desired preset number.
2. Preset number and station name will show on the display to indicate the preset station you are listening to.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station in a preset location will erase the previously stored station in that location.

DAB Display Modes

Every time you press the **INFO** button on the remote control, the display will cycle through the following display modes.

Station Name

If a DAB station is being received, the name of the station is displayed.

Ensemble Name

A multiplex is a collection of radio stations that are bundled and transmitted on one frequency.

There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

Clock

This displays the current time provided automatically by the broadcaster.

Date

This displays the current date provided automatically by the broadcaster.

DLS (Dynamic Label Segment)

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions.

The message usually includes information, such as program details etc.

Programme Type

This describes the style of the programme that is being broadcast.

Channel Number

DAB digital radio can be broadcast on a wide number of frequencies.

Frequency

This shows the frequency of the current station.

Stereo/Mono

 
The display will show if the station being received is in mono or stereo.

Bit Rate

The display will show the digital audio bit rate being received.

Signal Strength

Display will show "RSSI ##" number (0-100)

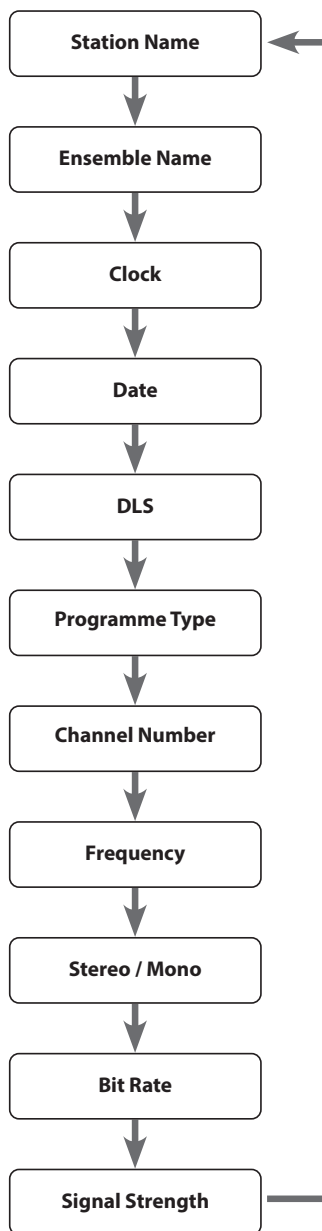

FM Operation

Scanning for Radio Stations

The unit will automatically select a FM radio station with a good signal.

1. Press the **SOURCE** button repeatedly on the main unit or **FM/DAB** button on the remote control to select **FM** mode.
2. Press the **►II/SCAN/PAIR** button on the unit, or press the **►II/SCAN** button on the remote control to start auto scan. All available stations are programmed in the order of wave band reception strength.
3. Press the **▲▼** button to select number that you want.

Searching for a Station Automatically

In **FM** mode, press and hold the **◀◀▶▶** button until the tuner starts searching for a station. The tuner will stop searching after tuning into a radio station.



The search may not stop at a station with a very weak signal.

Searching for a Station Manually

In **FM** mode, repeatedly press the **◀◀▶▶** buttons until the desired frequency reception quality is found.



With FM radio it may be necessary to fine tune each station by pressing the **◀◀▶▶** buttons on the remote control repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Presetting Stations

You can store up to 20 of your favourite FM stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold the **PROG** button on the remote control. The display will show **## Empty**, and the preset number will flash.
2. Press the **▲▼** button on the remote control to select your desired station preset number.
3. Press the **PROG** button to confirm your station, the display will show **“SAVED”**.

Recalling a Preset Station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing the **▲▼** button or number key on the remote control on the remote control to select your desired preset number.
2. Preset number and station name will show on the display to indicate the preset station you are listening to. Press **PROG** button on the unit or remote control to confirm.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station in a preset location will erase the previously stored station in that location.

RDS (Radio Data System) Reception

Many FM stations are broadcasting added data compatible with RDS (Radio Data System). This radio set offers convenient functions using such data. Press the **INFO** button repeatedly to view the following information.

Station Name

When an RDS station is received, the name of that station will be displayed.

Text

The broadcaster can include a message that displays information about the current programme.

Programme Type

This describes the "Style" or "Genre" of music that is being broadcast, e.g. "Rock" or "Classical".

Stereo/Mono

The display will show if the station being received is in mono or stereo.

Clock

 
The RDS CLOCK system may not properly operate in areas where RDS CLOCK service is not available. Once RDS CLOCK service is available, the RDS CLOCK system will commence operation.

Date

This displays the current date provided automatically by the broadcaster.

Frequency

This shows the frequency of the current station.

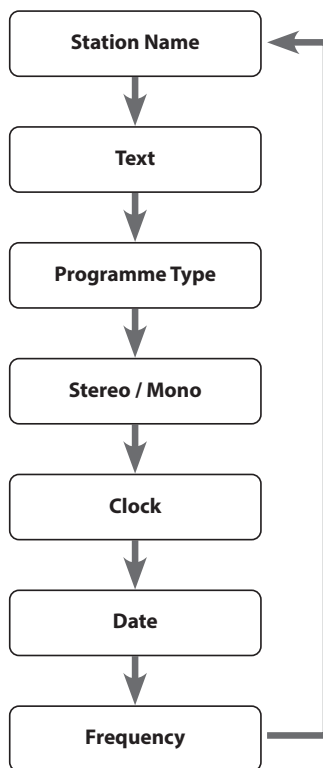

Compatible Disc Types


Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable)		AUDIO
CD-RW (CD-Rewritable)		AUDIO
AUDIO-CD (Compact Disc Digital Audio)		AUDIO

CD/MP3 Operation

Press the **SOURCE** button repeatedly on the unit or press the **CD/USB** button on the remote control to select **DISC** mode.

Playback

 1. Press the **▲** button on the unit or press the **▲** button on the remote control and the disc tray will open automatically.
2. Place the CD/MP3 disc with the label side up into the CD compartment, and then press the **▲** button on the unit or press the **▲** button on the remote control to close the disc tray.

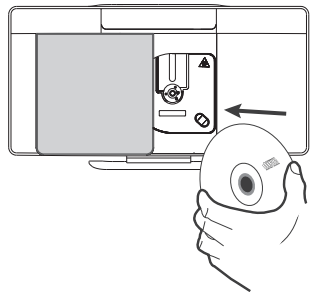

- The disc tray door will automatically close after it is open for about 60 seconds.
 - If you press **SOURCE** button on the unit or **FM/DAB, AUX** and **Bluetooth** button on the remote control to leave **DISC** mode, the disc tray door will automatically close.
3. The total number of tracks will be shown on the display, and unit will play the first track on the CD/MP3 disc automatically.
 - This unit can play CD, CD-R, CD-RW, MP3 disc, 8cm and Multi sectioned of MP3 DISCS.
 - The unit also supports "Playback Transfer Rate in 32-320 kbps for MP3.
 - If there is no disc or the disc can't be read, "**NO DISC**" will show on the display.

To Pause Playback

1. Press the **▶II** button on the unit or press the **▶II** button on the remote control to pause the playback.
2. To resume playback, press the **▶II** button on the unit or press the **▶II** button on the remote control again.

To Stop Playback

Press the **■/MENU** button on the remote control to stop playback.

Skipping to Another Track

- Press the **⏮▶II** button on the unit or remote control to skip backwards to the previous track or skip forwards to the next track.
- Press and hold the **⏮▶II** button on the unit or remote control to perform fast forwards/reverse the current track in **DISC** and **USB** mode.
- Release the button to resume normal playback.

Random Playback

Press the **SHUFFLE** Button to select a shuffle option play mode.

Repeat Playback

1. Press the **REPEAT** button once on the remote control. The display will show "**RPT ONE**" and **🔁**. The unit will play the current track repeatedly.
2. Press the **REPEAT** button again. The display will show "**RPT ALL**" and **🔁**. The unit will play all tracks repeatedly.
 - Press the **REPEAT** button again, "**RPT ALB**" will show on the display. The unit will play all the tracks in the folder repeatedly (If a folder is displayed).
3. Press the **REPEAT** button again. The display will show "**RPT OFF**" and the **REPEAT** function will be cancelled.

Programme Setting

The user can programme up to 20 tracks in CD mode in any desired order. Programme mode is activated while in **STOP** mode (programming only available on Audio CD).

1. Press the **PROG** button on the remote control to enter **MEMORY** mode.
2. Press the number (0~9) button on the remote control to select the track that you want to preset, then press **PROG** button on the remote control to confirm.

Or

Press **⏮▶II** button on the unit or remote control to select the track that you want to preset, then press **PROG** button on the remote control to confirm.

 
 
3. Repeat step 2 to programme more track.
4. Press the **▶II** button on the unit or **▶II/SCAN** on the remote control to playback programme tracks.



If you want to change the programmed files, press the **■/MENU** button twice to clear the current program files, then repeat the program steps as above to re-enter the new program files.

USB Operation

1. When a USB device is connected to the unit, press **SOURCE** button repeatedly on the unit or press **USB** button on the remote control to select **USB** mode.
2. The unit will automatically display the total number of the folders and tracks at the same time.
3. All playback features are the same as if you were playing an MP3 CD.

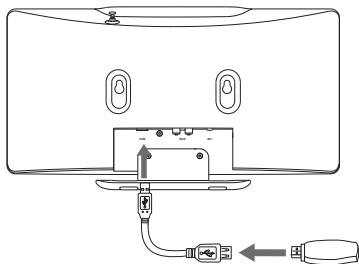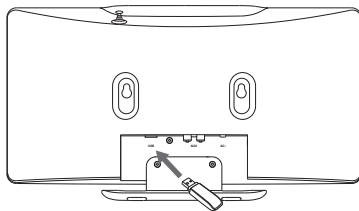

You may also insert the USB device to the unit with the USB connecting cable.



- The unit can only play MP3 file format in USB or CARD operation.
- If your USB device or memory card is loaded with MP3's but the display keeps showing **"NO FILE"** on the display, the format of your USB device or memory card might not be compatible with the unit.
- This unit supports USB versions 1.1 and 2.0.
- The unit can support USB devices and memory cards with up to 32 GB of memory.
- The unit may not be compatible with all USB devices and memory cards, this is not an indication of a problem with the unit.

Bluetooth® Operation

Pairing the unit with a Bluetooth® device to listen to music:

1. Press the **SOURCE** button on the unit repeatedly or press the ***/PAIR** button on the remote control to select **Bluetooth** mode. "**BLUETOOTH READY**" will show on display.
2. Activate your Bluetooth® device and select the search mode.
3. Select **RD-D325B** and enter "**0000**" for the password if necessary. The unit will prompt "**Paired**", and "**CONNECTED**" will show on display.
4. To disconnect the Bluetooth® function,
 - Switch to another function on the unit.
 - Disable the function from your Bluetooth® device. The Bluetooth® device will be disconnected from the unit after it prompts "**Disconnected**".
 - Press and hold **▶II/SCAN/PAIR** button on the unit or ***/PAIR** button on the remote control. The Bluetooth® device will be disconnected from the unit after it prompts "**Pairing**".

If your Bluetooth® device supports A2DP, play music via your device.

If your Bluetooth® device supports AVRCP, use supplied remote control to control play.

- To pause/resume playback, press **▶II** on the unit, or **▶II/SCAN** on the remote control.
- To skip to a track, press **⏮**.
- Press **VOL+/-** button on the unit or remote control to increase or decrease the volume.



- The operational range between the unit and the device is approximately 8 metres.
- If the signal strength is weak, your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.
- Compatibility with all Bluetooth® devices is not guaranteed.

AUX Operation

There are **AUX L/R** sockets located at the rear of the unit. Analogue audio sound signals from other sources can be connected to the unit through these sockets.

1. Connect to another audio device using the **AUX L/R** sockets via a RCA stereo audio cable.
2. While in the **ON** mode, press the **SOURCE** button repeatedly on the unit or press the **AUX** button on the remote control to select **AUX** mode.
3. Press the **VOL+/VOL -** button on the unit or remote control to adjust the volume to your desired level.
4. In **AUX** mode, operate your audio device directly for playback features.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.



- If you cannot wipe off the dust with a cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Centre on **0818 810575**.

Menu	Description
No power	• Ensure the mains cable is connected securely at both ends. • Make sure that the ON mode is selected.
The remote control does not function	• Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
The unit does not respond when pressing any button	• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.
CD	
The disc does not play	• There is no disc inside the unit ("NO DISC" appears on the display). • Insert the disc correctly with the label side facing up. • Clean the disc. • PAUSE mode may be activated, deactivate it. • A non-valid disc has been inserted. • Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.
Disc skips	• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.
File from Media storage device does not play	• Check the file format. • This product only supports MP3 File formats.
Radio	
Desired station not found	• Weak signal. Use the Manual Tune function.
The Unit cannot synchronise the RDS or DAB station's time and date	• The station does not transmit the time and date information. • Reset the DAB system. • Setting the time synronisation to "Radio".
USB	
Unable to insert USB device	• Insert the USB device the other way round.

Menu	Description
Cannot play some files from USB device	Some files may not be compatible with the unit.
Bluetooth®	
I cannot find "RD-D325B" on my Bluetooth® device	Ensure the Bluetooth® function is activated on your Bluetooth® device.
AUX	
This is a 15 mins power off function, one of the ERPII standard requirement for saving power	When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand		JVC
Model		RD-D325B
Input Voltage and Frequency		100 - 240 V~ 50/60 Hz
Power Consumption		30 W
USB Input (For playback only, charge function may not be compatible)		5V --- 500 mA Max.
Frequency Band		FM 87.5 MHz-108 MHz DAB/DAB+ 174.928 MHz-239.2 MHz
Speaker Output Power		5 W rms × 2
Compatible Disc format		CD, CD-R, CD-RW, MP3
Bluetooth®	Bluetooth® Version	Bluetooth® V5.4
	Maximum power transmitted	5 dBm
	Frequency bands	2402 - 2480 MHz
Ecodesign Information		
Information on Power Consumption	Power Consumption of Standby Mode with USB charge function enabled	0.7 W
	Network Standby Power Consumption	N/A
Time interval for power management function switches the unit automatically into another condition (when the product is connected to the mains operating at standby mode with USB charge function enabled)		15 minutes
Power consumption in network standby if all wireless network ports are activated		N/A, no network standby
How to activate wireless network port: • N/A, no wireless network port How to deactivate wireless network port: • N/A, no wireless network port		
Net Weight		1.92 kg
Dimensions		375 mm (W) × 79 mm (D) × 200 mm (H)

Features and specifications are subject to change without prior notice.

For the latest version of the Safety and Instruction Manual, please visit the official website below (other websites may not contain the full and most updated version):

<https://www.currys.co.uk/services/repairs-maintenance/product-service-manuals.html>

**Declaration of Conformity (RED)**

Hereby, Currys Group Limited declares that the radio equipment type [RD-D325B] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [RD-D325B] is in compliance with Radio Equipment Regulations 2017 (S.I. 2017/1206).

The full text of the UK declaration of conformity is available at the following internet address:

<https://www.currys.co.uk/>

For Help and Support Call

UK: 0344 561 1234

Ireland: 0818 810575

This product is distributed and warranted exclusively by Currys Group Limited.

"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

IB-RD-D325B-250613V2