 


Shark **CarpetForce**

EX500ANZ OWNER'S GUIDE

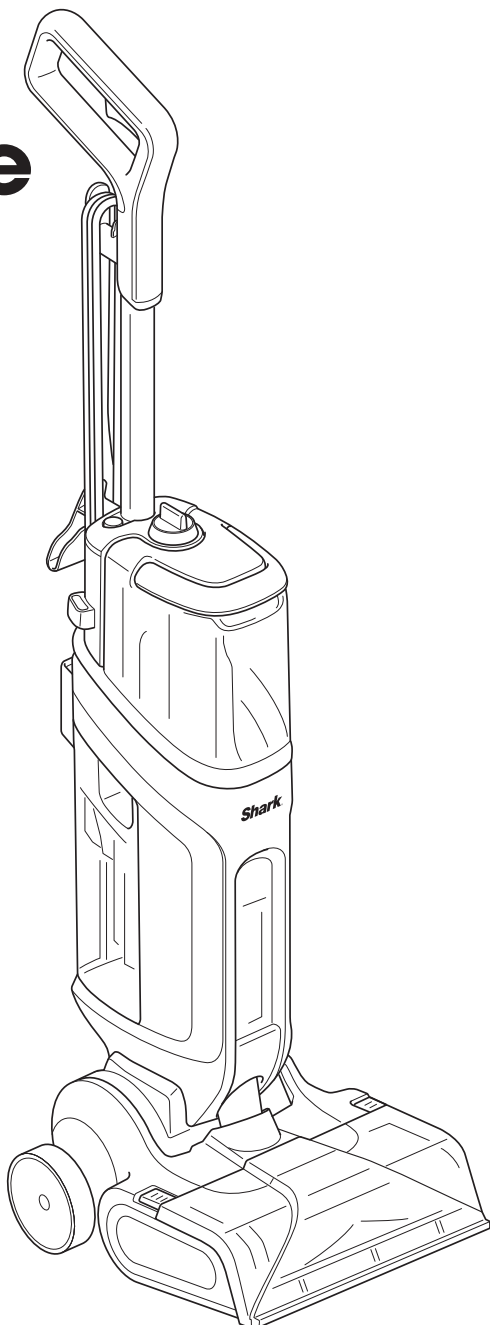

Scan QR code to view
HOW-TO VIDEOS
and more.



IMPORTANT SAFETY INSTRUCTIONS

FOR HOUSEHOLD USE ONLY READ ALL INSTRUCTIONS BEFORE USING THIS CARPET CLEANER

WARNING

 
To reduce the risk of fire, electric shock, injury, or property damage:

1. If the power cord plug does not fit fully into the outlet, contact a qualified electrician. **DO NOT** force into outlet or try to modify to fit.
2. To reduce the risk of shock and unintended operation, unplug before servicing.
3. This carpet cleaner consists of a motorised nozzle, main body, pole, handle, hose, and hand tools. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
4. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
5. Use only identical Shark replacement parts.
6. **DO NOT** use the carpet cleaner for any purpose other than those described in this Guide.
7. **DO NOT** immerse or spray water on the body of the carpet cleaner.
8. To clean the surface, wipe with a dry cloth.
9. Keep the carpet cleaner's cord out of reach of children.
10. **DO NOT** allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.
11. This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be done by children.
12. **DO NOT** handle plug or carpet cleaner with wet hands.
13. **DO NOT** use without the dirty water tank, clean solution tank, filter, brushroll, diverter valve, and brushroll cover in place.
14. Use only identical replacement parts. Only use Shark® branded filters and accessories.
15. **DO NOT** put any objects into nozzle opening. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
16. **DO NOT** use if nozzle airflow is restricted. If the air paths or the motorised floor nozzle become blocked, turn the carpet cleaner off. Remove all obstructions before you turn on the unit again. Keep nozzle and all carpet cleaner openings away from hair, face, fingers, uncovered feet, or loose clothing.
17. **DO NOT** use if carpet cleaner is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
18. Use extra care when cleaning on stairs.
19. **DO NOT** leave the carpet cleaner unattended while plugged in.
20. When using on any surface, always keep the carpet cleaner moving to avoid damaging the surface (e.g., carpet fibers).
21. **DO NOT** place carpet cleaner on unstable surfaces such as chairs or tables. The surrounding area may be slippery and present a risk of injury.
22. **DO NOT** use to pick up:
 - a) Large objects.
 - b) Hard or sharp objects (glass, nails, screws, or coins).
 - c) Large quantities of dust (e.g., drywall dust).
 - d) Smoking or burning objects (hot coals, cigarette butts, or matches).
 - e) Flammable or combustible materials (lighter fluid, gasoline, or kerosene).
 - f) Toxic materials (chlorine bleach, ammonia, or drain cleaner).
23. **DO NOT** use in the following areas:
 - a) Poorly lit areas.
 - b) Outdoor areas.
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
24. Turn off the carpet cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
25. During cleaning or routine maintenance, **DO NOT** cut anything other than hair, fibers, or string wrapped around the brushroll.

26. **DO NOT** modify or attempt to repair the carpet cleaner yourself. **DO NOT** use the carpet cleaner if it has been modified or damaged.
27. Turn off all controls before unplugging.
28. To reduce the risk of fire or electric shock due to internal component damage, use only Shark® cleaning fluid. See the Cleaning Fluid section of this Instruction Book.
29. **DO NOT** pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. **DO NOT** run appliance over cord. Keep cord away from heated surfaces.
30. **DO NOT** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
31. Use indoors only.
32. **DO NOT** use carpet cleaner on hard floors as it may damage your floor. To avoid damage to flooring and to avoid potential slip hazard, after use:
 - a) move to a hard sealed surface (avoid unsealed, wood and laminate).
 - b) place unit on absorbent material like a towel to soak up any liquid.
33. **DO NOT** fill solution tanks while installed on the appliance. Remove before filling.
34. The areas around where you are cleaning may become wet. Use care to avoid slipping and falling.
35. **GROUNDING INSTRUCTIONS:** This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
36. **WARNING:** Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. **DO NOT** modify the plug provided with the appliance. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.
37. This appliance is for use on a nominal V circuit and has a grounding attachment plug that looks like the plug illustrated above. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.
38. **DO NOT** immerse. To reduce risk of electric shock, use only on carpet moistened by cleaning.
39. **DO NOT** use vinegar in any tanks.
40. **DO NOT** run over edges of area rugs.
41. Stalling the brushroll may result in premature failure.
42. Avoid repeated strokes over the same area to help prevent damage to Berber carpets.
43. Check manufacturer's tag prior to cleaning area rugs for any specific cleaning guidelines. We **DO NOT** recommend deep cleaning delicate rugs (including wool, cotton, silk, antique, or area rugs that **DO NOT** have a manufacturer's tag).
44. Always perform a small patch test on a small hidden spot of the area rug or surface you are cleaning to make sure it is ok to clean with this product.
45. **DO NOT** store unit where temperatures reach freezing levels to avoid damaging internal parts.
46. **FIRST AID** Keep out of reach of children. Causes skin and serious eye irritation. **IF IN EYES**, rinse continuously with water for minutes. Remove contact lenses if present and easy to do so. Continue rinsing. **IF ON SKIN**, wash with soap and water. If skin and eye irritation persists, seek medical attention.
47. Please recycle container. Dispose of contents/ container with a licensed waste disposal site in accordance with the requirements of the local waste disposal authority.
48. **DO NOT** dispose in drains or watercourses in concentrate form.

SAVE THESE INSTRUCTIONS


WHAT'S INCLUDED:

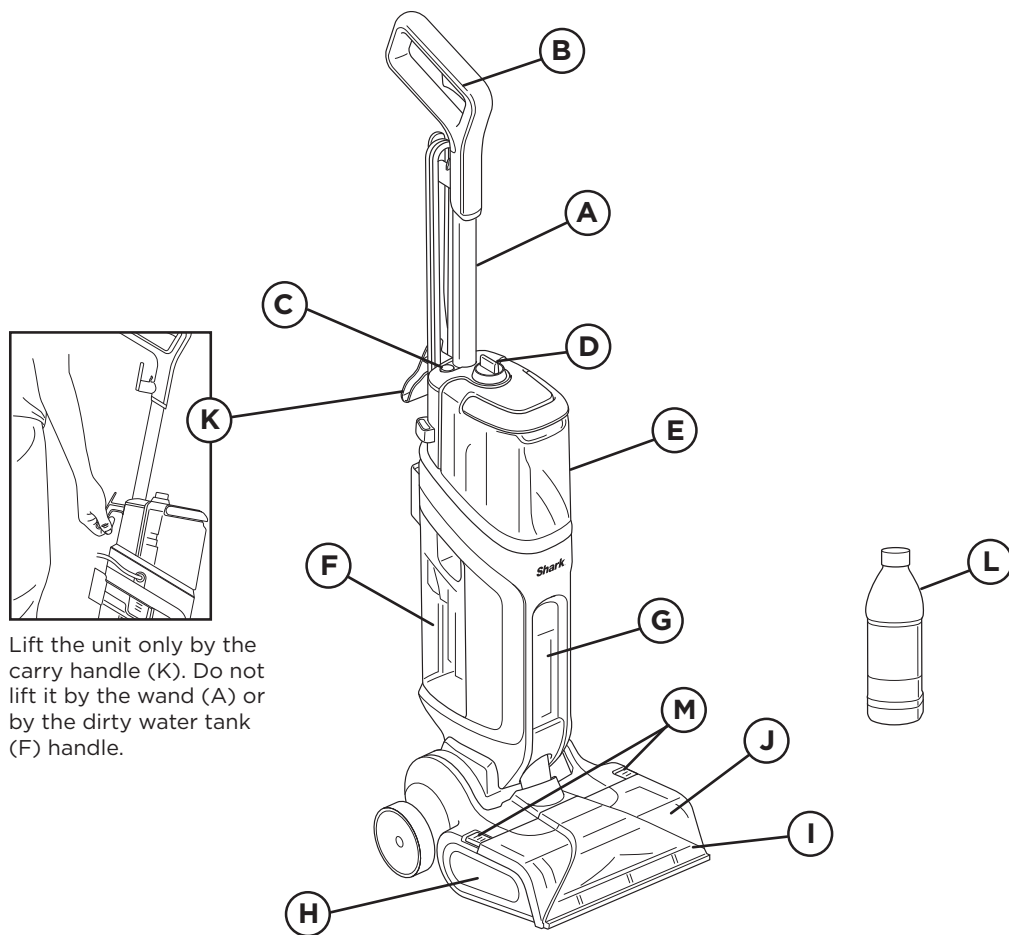


Lift the unit only by the carry handle (K). Do not lift it by the wand (A) or by the dirty water tank (F) handle.

- | | |
|------------------------------|-----------------------------|
| A Wand | H Floor Nozzle |
| B Spray Trigger | I Suction Inlet |
| C Wand Release Button | J Brushroll |
| D Mode Select Dial | K Carry Handle |
| E CarpetForce™ Tank | L Shark Solution |
| F Dirty Water Tank | M Inlet Removal Tabs |
| G Upduct Window | |

 
GETTING STARTED

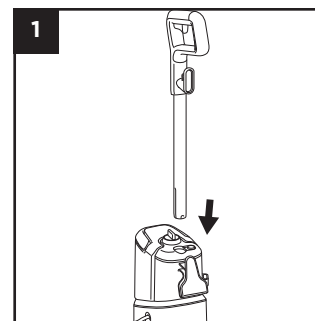

 
Insert wand into the top of unit until it clicks into place.

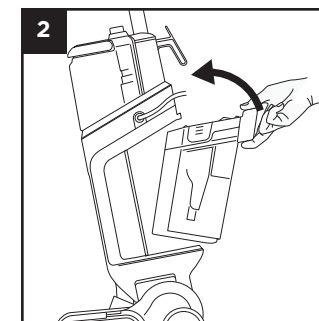

 
Install the dirty water tank. Insert the bottom first, then tilt the tank forward until it clicks into place.

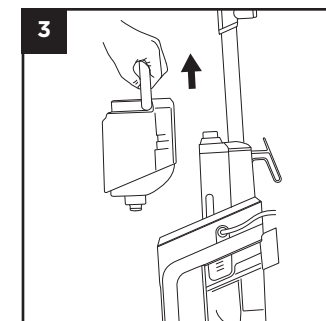

 
Lift the CarpetForce Tank by the handle to detach it.

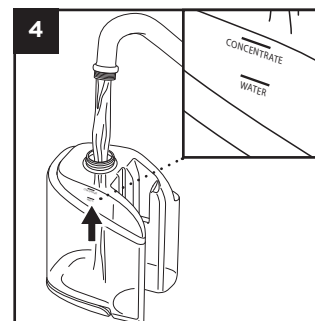

 Unscrew the cap on the bottom of tank, and add water up to the WATER fill line.

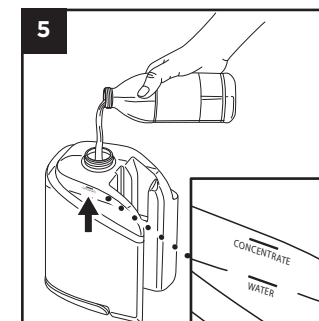

 Add Shark Solution up to the CONCENTRATE fill line. For best results, start with a full tank.

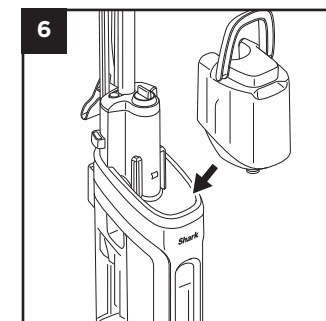

Reattach cap, then reinstall the CarpetXpert Tank until it clicks into place. Insert the plug into the outlet.

IMPORTANT: For best results, the CarpetForce tank must be filled with water and concentrate up to the fill lines before starting a cleaning session.

CLEANING WITH CARPETFORCE

 
 
IMPORTANT: For optimal performance, vacuum with a traditional vacuum cleaner BEFORE using CarpetForce. This is especially important when removing PET HAIR from carpet.

Note: It is normal for some hair to remain after the first pass with CarpetForce. Try another cleaning pass, or remove the hair manually.


1 Turn the Mode Select dial (D) to choose a cleaning mode.

Deep Clean: Uses more solution than Express Clean Mode for a deeper wash with longer dry times and shorter tank runtimes. A full CarpetForce tank should provide at least 5 minutes of runtime.


Express Clean: Ideal for refreshing carpets that do not require a deep clean. Uses less solution than Deep Clean mode, meaning shorter dry times and longer-lasting solution in the tank.

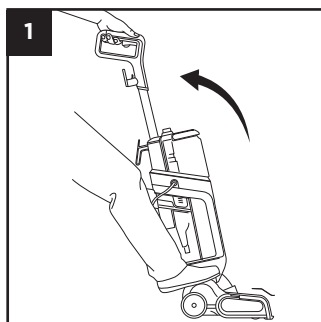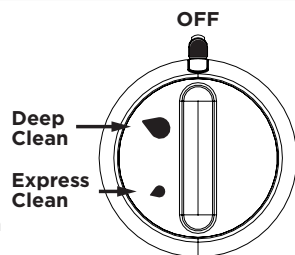

 
Power the motor on by gently stepping on the nozzle and reclining the body back by the handle. The suction motor will start and the brushroll will spin.

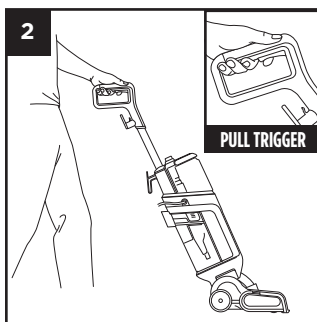

 
Push unit forward, holding down the trigger fully. Push at a consistent, slow pace.

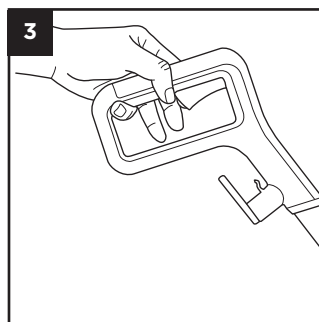

 
Make sure to completely release the trigger before moving backward. Move straight backward at a consistent pace.

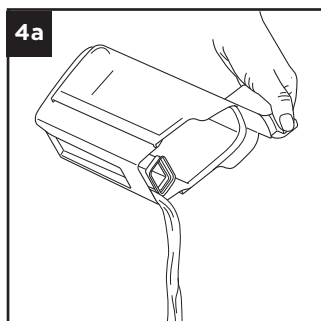

 When the dirty water tank is full, the motor noise will change to a different pitch. Empty the tank when full.

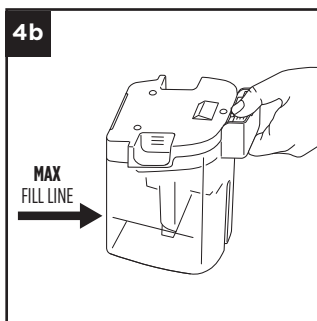

 Repeat steps 2 and 3 until the carpet is completely clean.

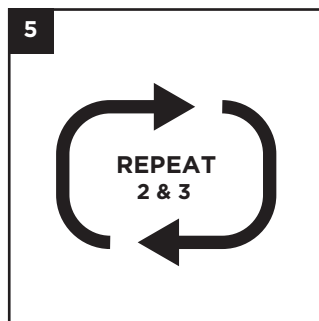


Tip: Push the unit back and forth at a slower pace than a traditional vacuum. Moving too fast could cause suction power to turn off. If this happens, stand the unit upright and turn the dial to O. Wait a few seconds, then choose a cleaning mode, recline the handle, and continue cleaning.

CLEANING TIPS


Note: If you have a thick or long-fibered rugs or carpet, please check your manufacturer's care instructions. If the instructions allow for using a carpet cleaner, you may need to move the unit over the surface faster to prevent it from automatically turning off. (Automatic shutoff is by design to protect the unit) To help ensure an even cleaning, avoid pulsing or partially squeezing the trigger.

DRY TIME TIPS

 
- Dry times range from about an hour to multiple hours. Factors that affect drying times include the selected cleaning mode, climate, humidity, trigger usage, and carpet thickness.
- Always release the trigger before moving backward. Repeated passes over the same spot with suction only (no trigger) will shorten dry times. Repeat cleaning passes until no more extracted fluid appears in the nozzle or the upduct window.
- Deep Clean mode uses more solution than Express Clean. If the carpet to be cleaned is not very dirty, use Express Clean for a shorter dry time.
- Try opening windows and interior doors to create airflow in the room and reduce dry times.

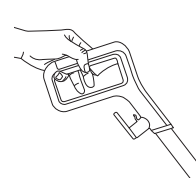

 Release trigger to clean with suction only.

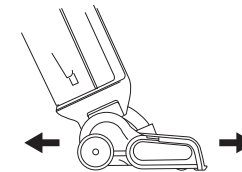

Move nozzle about 8 inches per second.

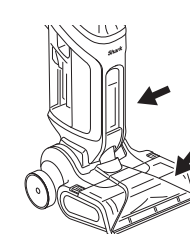 


SHARK® CLEANING SOLUTIONS

Shark Cleaning Solutions

Use ONLY Shark-branded cleaning solutions. Make sure to only add cleaning solution to the CarpetForce tank. Unit is not compatible with other solutions or cleaners.

 Note: You do not need to empty the CarpetForce tank after each use. You can leave remaining solution in the tank for next time.




Scan the QR code above to order refills and to explore our complete range of cleaning solutions.


DIRTY WATER TANK MAINTENANCE

Note: Before performing any maintenance, make sure the unit is powered off and unplugged.

 
Note: After the power is turned off, it will take 2 to 3 seconds for the unit to clear the lines and shut down completely. **Tip:** Clean unit after every use to prevent odours and mould.

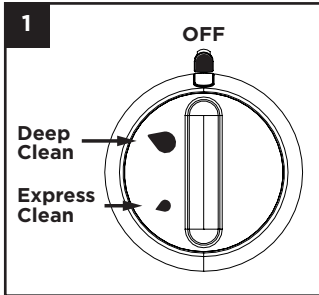


Turn the dial to the OFF position.

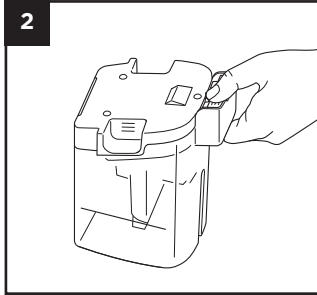 

 
Remove the dirty water tank by pressing the release button and lifting out the tank.

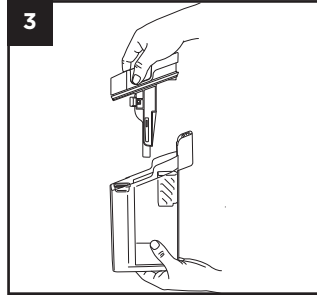

 
Lift off the lid and set it aside. **DO NOT** pour out dirty water until lid is removed.

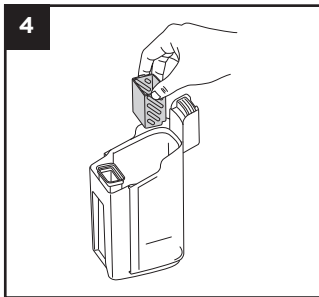

 
Lift the strainer out of the tank by the tabs on the side, and empty contents into the trash.

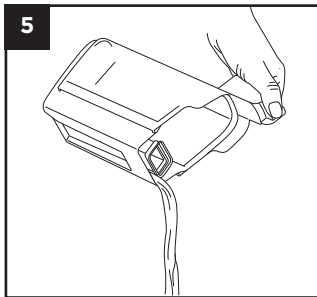

 
Dispose of the dirty water from the tank into a toilet or drain.

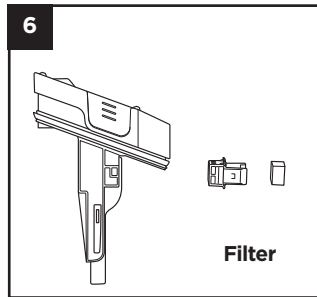

 
Remove the filter cover, then lift out the filter. Wash the filter with soap and water.

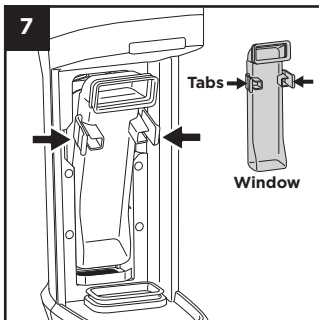

 Remove the window by pinching the tabs, then wash the window with soap and water.

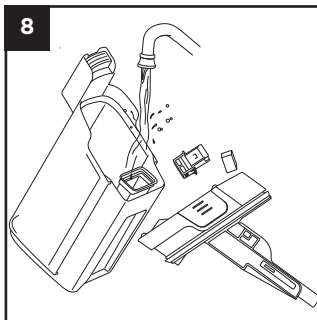

 
Lightly wash all parts, and allow them to air-dry completely before reassembly.

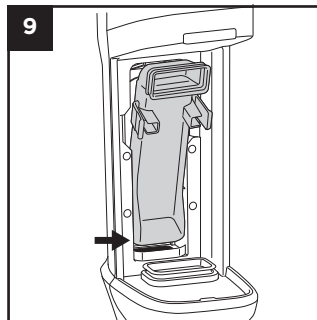


Insert the bottom of the window into the frame of the inlet. (Make sure it is not resting on top of the frame.) Pivot the window toward the front of the product to click the two tabs into place.

BRUSHROLL MAINTENANCE

 
Note: Before performing any maintenance, make sure the unit is powered off and unplugged from the wall outlet.

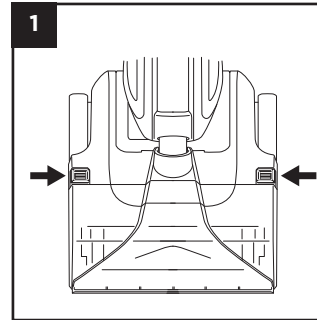

 
Detach the suction inlet by sliding the tabs toward the wheels.

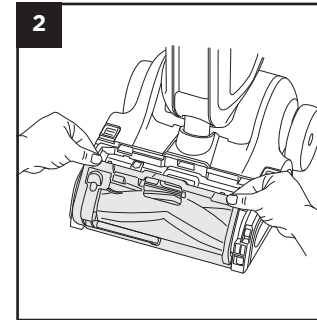

 
Lift the inlet cover by the tabs on the top

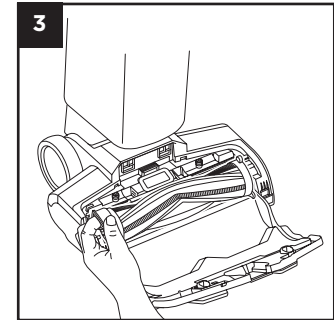

 
Remove the brushroll by pulling up on the side tab.

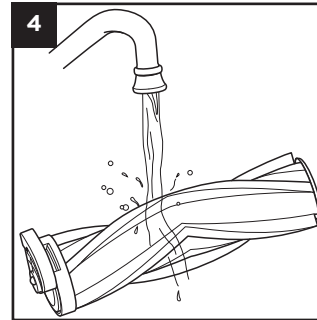

 Rinse the brushroll with soapy water, and cut away any wrapped hair with scissors. Allow brushroll to air-dry before reinstalling.

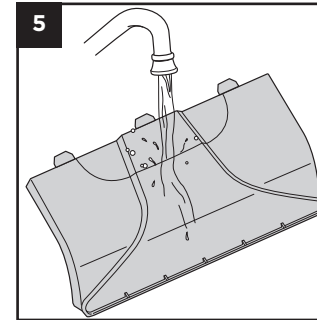


 Rinse the suction inlet with clean water and allow it to air-dry completely before reinstalling.

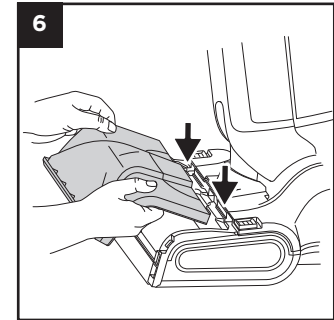


To reinstall the suction inlet, insert the top two tabs into the openings on the nozzle, then push down until both tabs click into place.

 MOVING THE UNIT

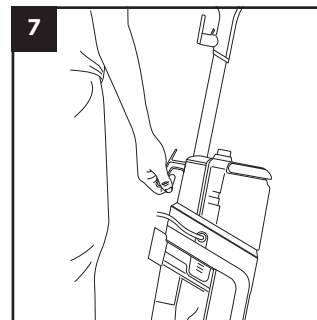


ONLY lift the unit by the Carry Handle on the back. **Do NOT** lift the unit by the wand handle.

 REMOVING THE WAND

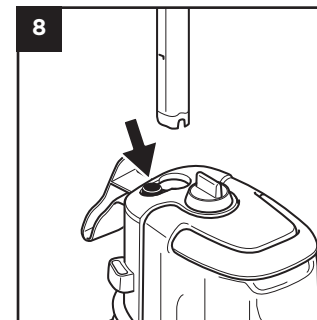

 Remove the wand by pressing the release button and lifting up.

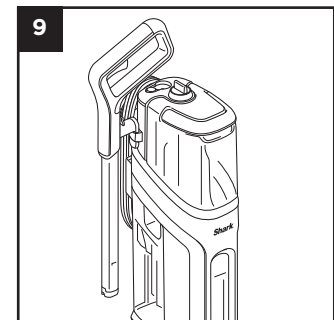

Insert the cord hook into the holder, and place the wrapped cord on the carry handle.

TROUBLESHOOTING

Note: Before performing any maintenance, make sure the unit is powered off and unplugged.

Unit is leaking.

Be sure the cap is sealed tightly and the tank is firmly pressed down. A leak coming from the vents on the bottom rear of the nozzle could be caused by using too much soap, over-cleaning the same area, or shaking the dirty water tank. Make sure the strainer is installed in the dirty water tank to prevent splashing.

Suction is weak.

Make sure all parts are correctly installed (dirty water tank, upduct window, brushroll, brushroll cover, and nozzle). DO NOT check suction by putting your hand under the nozzle while it is running. Check the filters: With the unit unplugged, press the tab at the rear of the nozzle to remove the filter door. Clean any dust or debris off the foam filter, then reinstall. Check the filter inside the dirty water tank: remove all dust and debris, then reinstall.

Solution is not dispensing.

Be sure the CarpetForce™ tank is full, and both tanks are attached securely. The mode dial needs to be in the Deep or Express position, and the trigger needs to be pulled to dispense the solution. If it is in the OFF position, and the trigger is pulled, no fluid will be dispensed.

Unit is leaving hair on the carpet.

It is normal for some hair to remain after the first pass with CarpetForce. Try another cleaning pass, or remove the hair manually. For optimal performance, clean with a traditional vacuum cleaner before using CarpetForce.

Carpets are oversaturated after cleaning.

If you don't need to deep-clean, use Express Clean Mode to clean with less solution. Do not press the trigger for too long while moving forward, and don't use it at all when moving backward. If the carpet is still wet after cleaning, try repeated suction-only cleaning passes without using the trigger at all. Factors that affect drying times include the selected cleaning mode, climate, humidity, trigger usage, and carpet thickness.

Unit starts unexpectedly or fails to shut off.

If CarpetForce is dropped or otherwise heavily impacted, it may start unexpectedly and continue to run when the power switch is turned off. If this occurs, immediately unplug the unit. Do NOT plug the vacuum back in. Do NOT attempt to operate, troubleshoot, or repair the unit. Contact support. sharkclean.com.au | AU 02 8801 7666 or sharkclean.co.nz | NZ 0800 112 660

Shark NINJA

TWO (2) YEAR LIMITED WARRANTY

For warranty claims, you must submit proof of purchase in the form of a valid receipt that shows the date and place of purchase. This 2-year manufacturer's warranty is valid from the date of purchase and applies where your product becomes defective due to faulty materials or workmanship.

Where an item or component is replaced, the replacement item will be covered for the remaining balance of the original 2-year warranty period. Your statutory rights under the Australian Consumer Law (**ACL**) and Consumer Guarantees Act 1993 (**CGA**) may apply beyond the 2-year period, and nothing in this warranty limits those rights.

This warranty does not replace but is in addition to your statutory rights:

- For New Zealand Consumers: If your product is faulty, you are entitled to remedies under the Consumer Guarantees Act 1993. Where a defect exists, we will repair or replace the faulty part free of charge, or, where a repair or replacement is not reasonable or available, replace the unit with an equivalent or upgraded model. CGA rights apply automatically and continue after this warranty expires.
- For Australian Consumers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Nothing in this warranty excludes, restricts, or modifies any rights you may have to compensation for consequential loss under the ACL or CGA. Attempts to exclude these rights may be misleading and are prohibited.

Your warranty is subject to the following conditions

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.
- The item has not been subject to unauthorised/improper maintenance/handling or overload.

Customer costs within warranty

The customer is responsible for any inbound freight charges for returning a product for assessment and any outbound freight charges for repair, warranty parts or replacement units.

This does not affect your rights under the ACL or CGA where the law requires us to bear reasonable costs associated with a remedy.

Who is covered under the express manufacturer's warranty?

This express warranty applies only to the original purchaser, who bought the product from an authorised retailer and non-transferrable. Proof of purchase is required.

This warranty against defects is provided by:

SharkNinja Pty Ltd ABN 87 147 260 197

Address: Suite 23.03, Level 23, 45 Clarence Street, Sydney NSW 2000

Phone: (+61) 2 8801 7666

Email: customerservice@sharkclean.com.au

We will assess the goods and provide a repair, replacement, or refund in accordance with this warranty and your rights under the ACL or CGA.

How to make a claim

1. Contact us at customerservice@sharkclean.com.au
2. Provide proof of purchase and a description of the issue.
3. You may be asked for photos or to return the product for inspection.
4. We will assess whether the defect falls within this warranty and provide the appropriate remedy (repair, replacement, or refund) according to the ACL or CGA.

REGISTER YOUR PURCHASE



AU sharkclean.com.au
NZ sharkclean.co.nz



Scan QR code using
mobile device.

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information.
- Access troubleshooting and product care instructions.
- Be among the first to know about exclusive product promotions.

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~, 50-60Hz

Watts: 780W

The power consumption in Off mode: 0.4W

TIP: You can find the model and serial numbers on the QR code label on the bottom of the back of the vacuum pod.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® CarpetForce.

SHARKNINJA PTY. LTD.

Suite 23.02, Level 23,
45 Clarence St, Sydney NSW 2000

[AU sharkclean.com.au](https://sharkclean.com.au) | [NZ sharkclean.co.nz](https://sharkclean.co.nz)

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2026 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC.
CARPETFORCE is a trademark of SharkNinja Operating LLC.



@sharkhomeau | @sharkhomenz

EX500ANZ_IB_MP_Mv9