

Wi-Fi swivel machine

Quick Start Guide



 
Scan the QR code to get the electronic version quick start guide
Please read this manual carefully before using the product and keep it properly



Download The “iCSee” APP




- ① Scan the QR code or search “iCSee” in the App store to download.
- ② Open the “iCSee” and complete user registration as prompted.

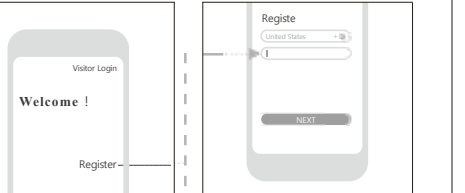


Quick Configuration

 - ① Powered on camera , it will make a voice “wait be configured” after several seconds , you can make the camera pair network.
**If the camera does not make the voice for long time , please long-press the camera reset button to restore factory settings .*
- ② Connect your phone to Wi-Fi network and turn on Bluetooth.
- ③ Login to “iCSee”and click “+”in the upper right corner, and select “Add Device”.
- ④ Wait for the device to be added to be found, and click “OK”, complete the device network configuration as prompted.

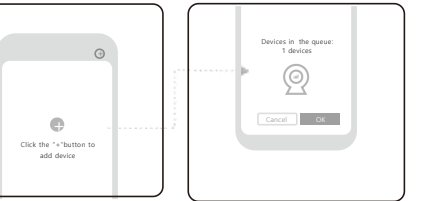

***If the device does not support Bluetooth pairing, please configure it according to this method.**

 - ① Connect your phone to Wi-Fi network .
- ② Login to “iCSee” and click “+” in the upper right corner, and select “Add Device”.
- ③ Select “Wi-Fi Camera”.
- ④ Complete the device network configuration as prompted.

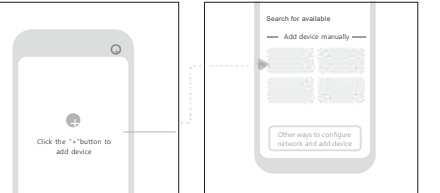

FAQ

Q : How to save camera recordings?

- A : 1. Local TF card storage, up to 256G , loop recording.
2. Cloud storage.

Q : How to do if the camera is not connected or offline?

- A : 1.Check if the camera power or network of router normally.
2.Plug the camera power to restart camera .
3.Restore the camera to factory settings .

Q : Does it support 5G band routers?

- A : If 5G band and 2.4G band of your router are the same connection hotspot. It can be connected directly. If 5G and 2.4G are not the same hotspot , connect your phone to Wi-Fi in the 2.4G band for network configuration.

Statement

1. This manual is only used as a guide for related products, and may be different from the actual product, please refer to the actual product. It is recommended that you use this manual under the guidance of a professional.
2. This product is an Internet product, the mobile phone client and device firmware will be updated from time to time, if there is an update, please update and upgrade online.

Description of Hazardous Material Contents

Component	Hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated (PBB)	Polychlorinated (PCBDE)
Metal elements	■	■	■	■	■	■
Plastic elements	■	■	■	■	■	■
Glass elements	■	■	■	■	■	■
Circuit board	■	■	■	■	■	■
Power cable	■	■	■	■	■	■
Annex	■	■	■	■	■	■

This form is prepared in accordance with SJ/T 11364-2014.
✕ It means that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572-2011.
⓪ It means that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirements specified in GB/T 26572-2011. At present, there is no mature alternative in the industry, which meets the environmental protection requirements of the EU RoHS directive.

Product Warranty Statement

Thank you for purchasing our products, in order to protect the rights and interests of the buyer, please fill in this card carefully and read the following warranty terms carefully.

1. Please keep this warranty card properly, if the warranty service card is lost, it will not be reissued. Please be sure to keep the invoice or a copy or relevant valid proof of purchase, if you are unable to provide a valid proof of purchase, the date of the product warranty period will be based on the date of the camera's manufacture.
2. This warranty card must be provided at the same time as the warranty.
3. The information filled in this warranty card is true, otherwise it will be invalid.
4. Within 12 months from the sale of this product, if the hardware failure occurs under normal use, free after-sales maintenance service can be obtained, and the accessories are guaranteed for six months (if it exceeds six months or is damaged by itself, it must be purchased separately).

The Company shall have the right to charge for the maintenance service if the following factors are applied:

1. Due to natural disasters(floods, fires, earthquakes, lightning strikes, typhoons, etc.), irresistible external forces or careless use of man-made operations Damages caused.
2. Disassemble, repair or send the product to a non-certified maintenance point for inspection and maintenance.
3. The company's warranty identification label is torn or unrecognizable, the warranty service card is altered or does not match the product.
4. Other problems and failures caused by abnormal use.

Product warranty card

Product name		Model	
Where to buy		Date of purchase	
ID		Dealer	
Order number			
Cause of the failure			
Name		Contact number	
Contact address			

Warranty period: One year, this warranty card is applicable to the series of products you purchased from our company.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. The measures are designed to provide



reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.