



 
User Manual

PTC FAN HEATER

MODEL: PSHC09D2SBMV

▲ WARNING NOTICE:

Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at **1-866-646-4332**.

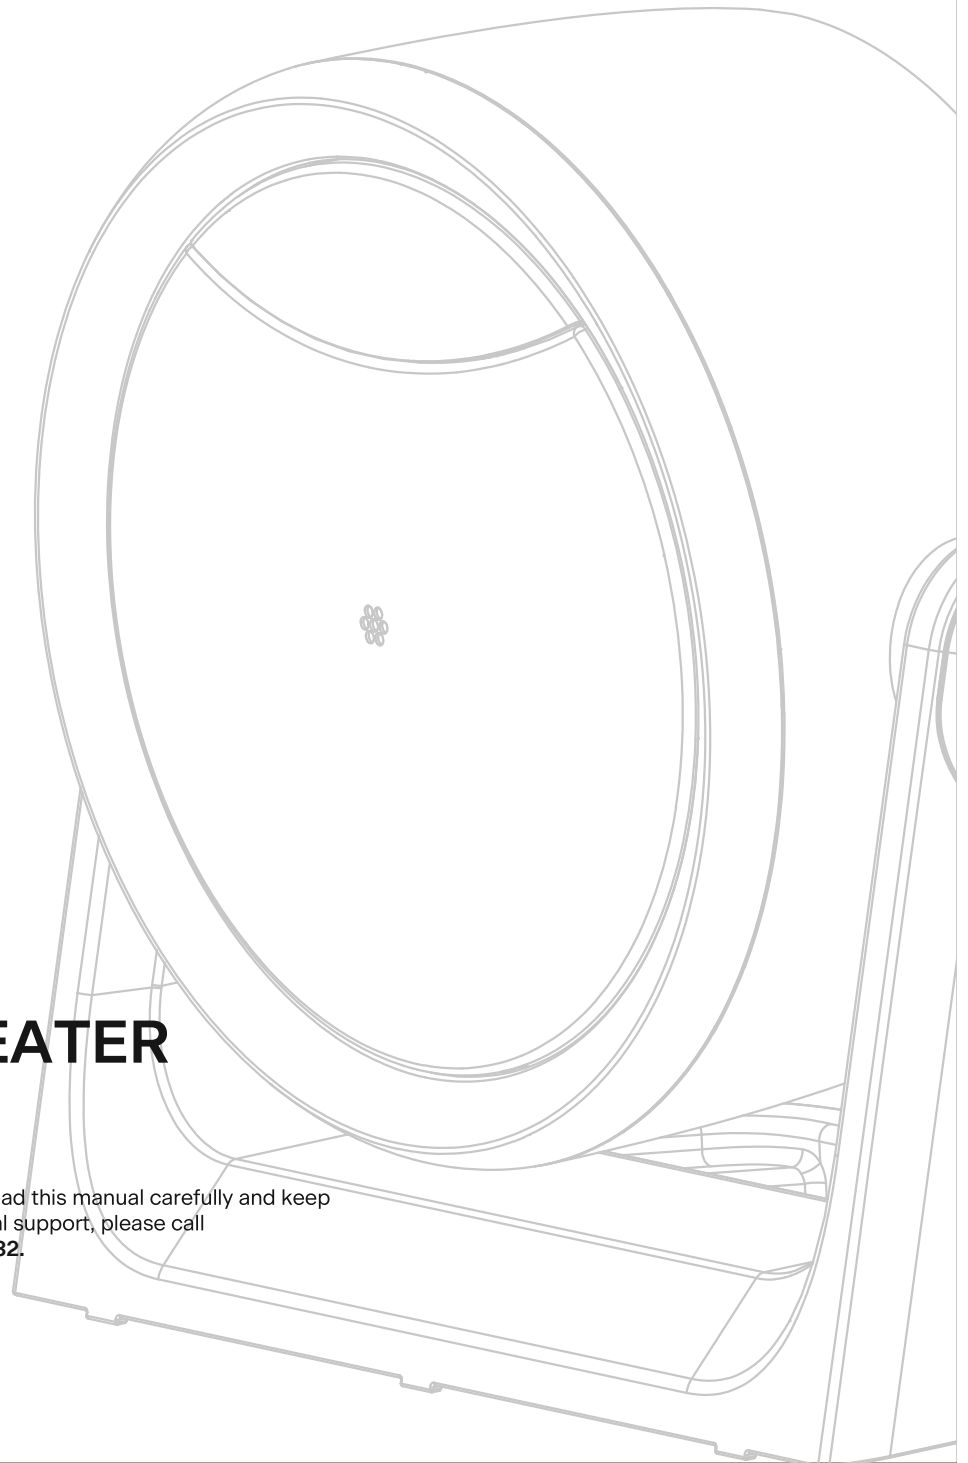

Thanks for Choosing PELONIS!

Your support means the world to us.
We hope you enjoy our product as
much as we did creating it.



Contents

Important Instructions 01

Product Overview 03

Operating Instructions 04

Troubleshooting 09

Cleaning And Maintenance 09

Specifications 09

Service and Support 10

One (1) Year Limited Warranty 11

IMPORTANT INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE HEATER.

When using electrical heaters, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

CAUTION

1. Read all instructions before using heater.
2. Extreme caution is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating and unattended.
3. **CAUTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.
4. **CAUTION:** It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
5. **CAUTION:** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).
6. **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

 
⚠ WARNING

- 1.** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
- 2.** Always unplug the heater when not in use.
- 3.** Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return heater to authorized service facility for examination, electrical/mechanical adjustment, or repair.
- 4.** Do not use the heater outdoors.
- 5.** This heater is not intended for use in bathrooms, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 6.** Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Place the cord away from busy, high-traffic areas to make sure it will not be tripped over.
- 7.** This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- 8.** To disconnect the heater, first turn controls to off, then remove plug from outlet. Never pull by the cord.
- 9.** Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage to the heater.
- 10.** To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 11.** A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 12.** Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 13.** This heater cannot achieve accurate temperature control of the environment, and thus cannot be used as an insulation device for storage environment, items, animals and plants.
- 14.** Don't leave the heater on unattended.

15. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
16. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS

Product Overview

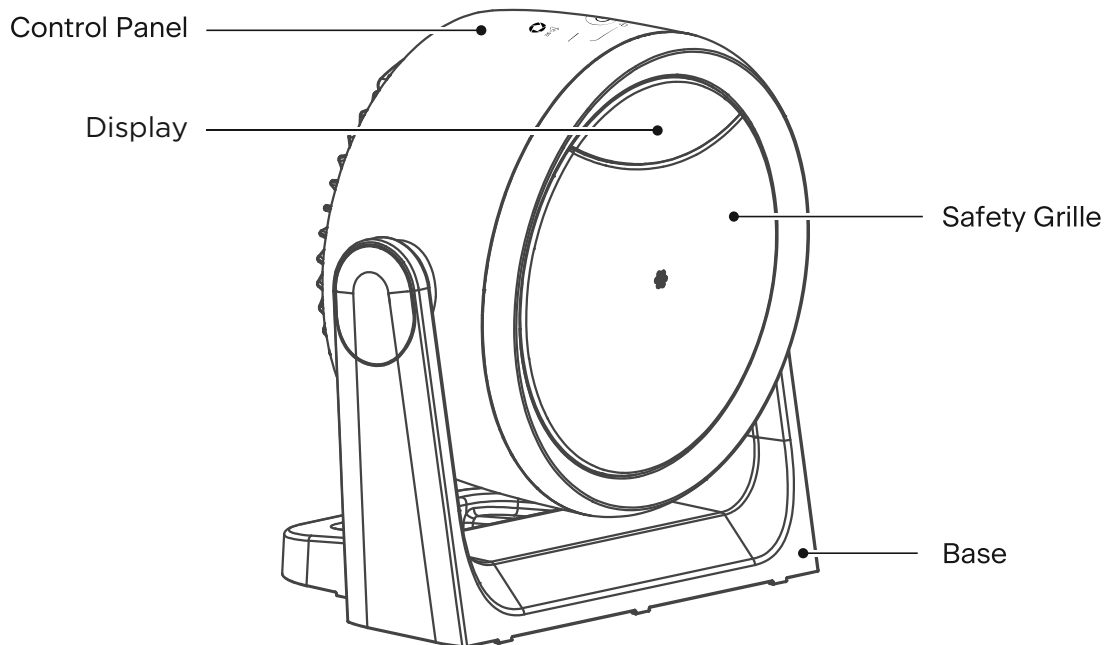

[Note]

- All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall defer to the real product.
- The heater is equipped with a red power status light that illuminates when the heater is plugged into the outlet.

Operating Instructions


Check Before Turning on the Machine


- 1. Check for any damage to the power cord.
- 2. The product uses a 120V AC power supply, before use, please confirm if the rated current of the receptacle meets the local requirements as a safe grounding device. If not, please replace it with the qualified socket.

Panel Operation & Display

		
Display-off Energy Saving Function • The display automatically turns off after 30 seconds of non activity. If ECO mode is activated, the ECO mode enabled light and power status light will dim. In all other modes, only the power status light will dim.		
Indicators	Display	Light Status
	• Temperature/Timer /Mode Display	• Solid White
	• Child Lock Mode Enabled	• Solid White
ECO	• ECO Mode Enabled	• Solid White
	• Timer Enabled	• Solid White
	• Power Status - ON	• Solid Red




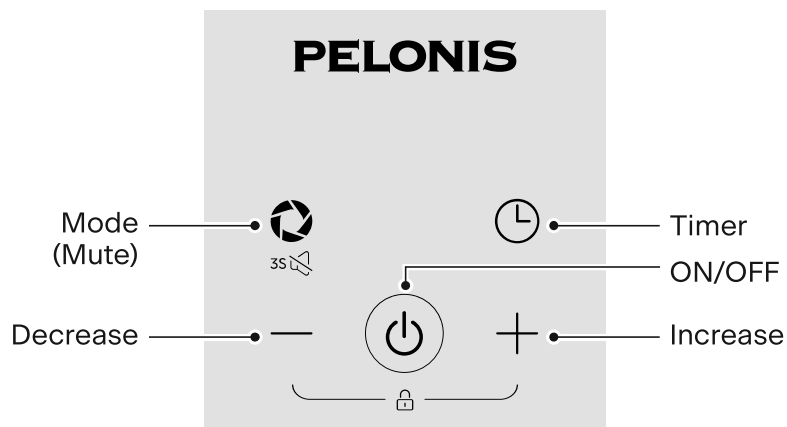 

 Button	Function Description
	ON/OFF Press this button to power the unit ON/OFF.
	MODE (MUTE) - Press this button to cycle through the different modes: H1: Low Heat H2: Medium Heat H3: High Heat ECO: Display " ECO " along with the temperature setting. Press "+/-" to adjust the temperature, with a range of 41-95°F. C1: Fan Only - Low C2: Fan Only - High - Press and hold for 3 seconds to mute/unmute.
	TIMER - Press this button to cycle through the timer settings: 0h→1h→2h→...→24h. - After the timer is set, press and hold "⌚" to cancel the timer function.
	INCREASE "+" / DECREASE "-" - Press this button to increase "+" / decrease "-" the timer. - In ECO mode, press this button to increase "+" / decrease "-" the temperature. - Press and hold the increase "+" and decrease "-" button for 3 seconds to enable or disable the child lock. When the child lock is activated, the indicator light "🔒" turns on, the function buttons become disabled, and the power button can be used to turn off the device normally but cannot be used to turn it on.

Remote Control

 - Aim the remote toward the control panel and press the desired button. The remote will work at a distance within 16 ft. of the unit, and within 30 degrees to the left and right of the control panel.
- Before the remote control is scrapped, the batteries must be removed and disposed of safely.

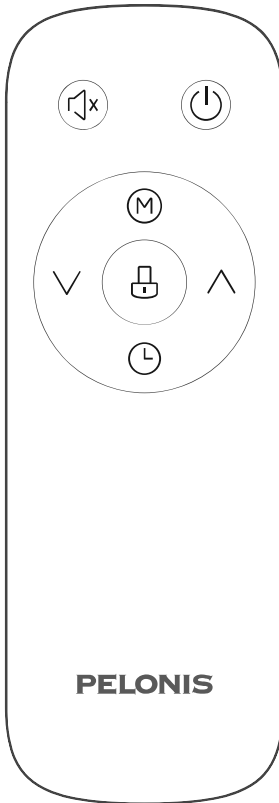

Button	Function description
	ON/OFF • Press this button to power the unit on/off.
	MUTE • Press this button to mute/unmute.
	MODE • Press this button repeatedly to cycle through the different modes: H1→H2→H3→ECO→C1→C2→H1...
	TIMER • Press this button to cycle through timer settings: 0h→1h→2h→...→24h.
	INCREASE“^”/DECREASE“V” • Press this button to increase“^”/decrease“V” the timer or regulate the temperature in ECO mode.
	CHILD LOCK • Press this button to enable or disable the child lock.

Battery Installation

1. Remove the battery compartment cover by sliding with fingers (Figure 1).
2. Insert Qty. 2 AAA batteries, and make sure the batteries are placed as shown (Figure 1).
3. Install battery compartment cover by sliding the cover in the direction shown (Figure 1).


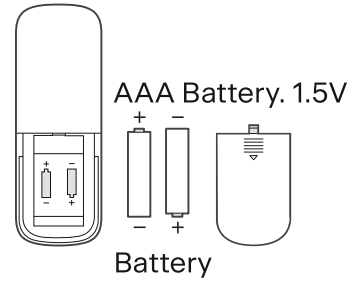 


Figure 1

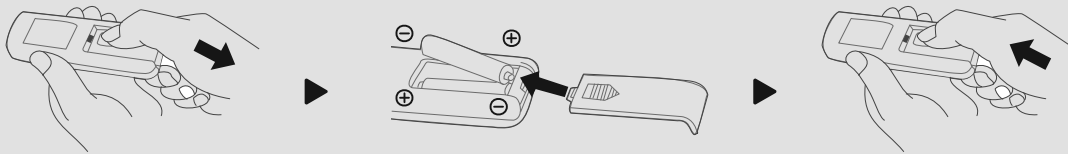 


[Note]


- The remote control uses AAA batteries.
- Do not use rechargeable batteries. Do not use modified or damaged batteries.
- Do not expose the appliance or battery to excessive temperatures.
- Non-rechargeable batteries are not to be recharged.
- Batteries must be inserted with the correct polarity. Depleted batteries should be removed from the device and disposed of safely.
- If the device will be left unused for an extended period, remove the batteries and avoid shorting the power terminals.
- Do not put the remote control batteries in fire; they may explode or leak.
- Do not mix new and old batteries. Do not mix alkaline batteries, standard (carbon-zinc) batteries, or rechargeable (nickel-cadmium) batteries.
- **WARNING:** Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2h of ingestion. Seek medical attention immediately.
- If the appliance is to be stored unused for a long period, the batteries should be removed. Do not use modified or damaged batteries.
- If battery leakage is found, stop using the product immediately and disconnect the power supply.
- Put the leaking battery into a sealed bag or leak-proof container, mark it as "Leaking Battery" and send it to a collection point for disposal.

Air Flow Direction Adjustment

 
Manually adjust

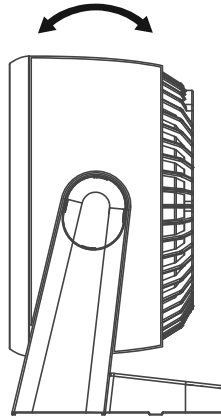

 
The unit is equipped with a pivoting head. You can select 4 different desired angles.

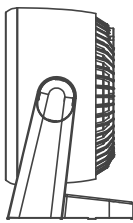


0°

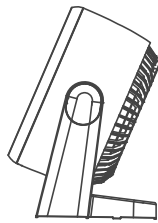 

 22.5°

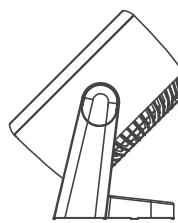

45°

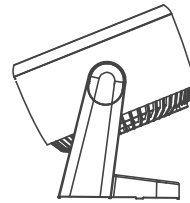 

67.5°

Temperature Sensor "Short or Open" Circuit Protection

- Regardless of the mode, if the temperature sensor encounters a short circuit or an open circuit, the digital screen will flash "E2" or "E1" while simultaneously emitting an audible beep 10 times.

[Note]

- The control panel will not respond during this error state.

Overheat Protection

- If the internal temperature of the heater exceeds the thermal cut-off threshold, the heater will automatically shutdown. In this state, both the display and power status lamp will turn off, and the control panel will not respond to any inputs. The heater must be unplugged and allowed to cool down completely. Once cooled, the heater may be plugged back into the outlet and powered ON.

Troubleshooting

Operation of your appliance can lead to errors and malfunctions. The following contains possible causes and solutions for resolving an error message or malfunction. It is recommended to read the following carefully before attempting to call customer support for assistance.

Problem	Possible Cause	Solution
After the power is engaged, the unit does not work.	• The plug may not be fully inserted.	Check whether the plug is properly inserted into the outlet.
The unit suddenly stops.	• The temperature exceeds the threshold of the thermal cut off.	First unplug the unit, and allow it to cool. Then reinsert the plug into the outlet and power the unit back ON.

Cleaning And Maintenance

It is recommended that the heater be cleaned at least one time during the operating season in order to provide the optimum level of performance. ALWAYS TURN THE POWER SWITCH OFF AND UNPLUG THE HEATER BEFORE CLEANING. Be sure to save the box for offseason storage.

- Turn the heater “OFF”, unplug it and wait for the heater to cool down.
- Use a dry cloth to clean only external surfaces of the heater.
- Do not use any cleaning agents or detergents.
- Never immerse the heater in water.
- Pack the heater in the original carton and store it in a cool and dry place.

Specifications

Model	Voltage	Frequency	Rated Power
PSHC09D2SBMV	120 V~	60 Hz	1500W

Power Regulation Range

Fan Only - Low (C1)	Fan Only - High (C2)
3W	5W

Service and Support

In the event of a warranty claim, questions, comments or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

Email us at: customersupport@pelonis.com

For questions or comments, please write to:

Midea America Corp.

300 Kimball Drive
Parsippany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)


**NOTE: PROOF OF PURCHASE
IS REQUIRED FOR ALL WARRANTY CLAIMS
PRINTED IN VIETNAM**



Product Registration Card

Step 1

Take a photo of purchase receipt

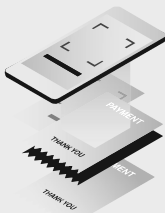 

Step 2

Text to 1-866-646-4332

_____ OR _____

Email to
register@registrationplace.com

_____ OR _____

Register on the PELONIS US website by scanning the QR code



Notice: Product registration is not mandatory. Failure to complete and return this card/form does not affect the consumer's warranty rights.

One (1) Year Limited Warranty

- Please read all instructions before attempting to use this product.

Midea America Corp. warrants as limited herein to the original purchaser of retail that each new product, shall be free of defects in material and workmanship for a period of one (1) year from the date of delivery. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board. The date of delivery establishes the warranty period, should service be required.

In the event of malfunctions or failure of your product, simply deliver or send the product, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea America Corp.. Midea America Corp. reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America Corp. shall, within sixty(60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defect arising from normal usage. Midea America Corp. assumes no responsibility whatsoever if the product should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your product).

Midea America Corp. makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the product. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America Corp. shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

