



# APPLIANCES FOR LIVING

 **ARTUSI**  
THE ART OF LIVING

**ATT8W**  
**ATT10W**  
**OPERATION MANUAL**

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**  
**LEICHHARDT NSW 2040**

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.



Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.



All our appliances are only for domestic use, not for commercial use. Products marked with (\*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

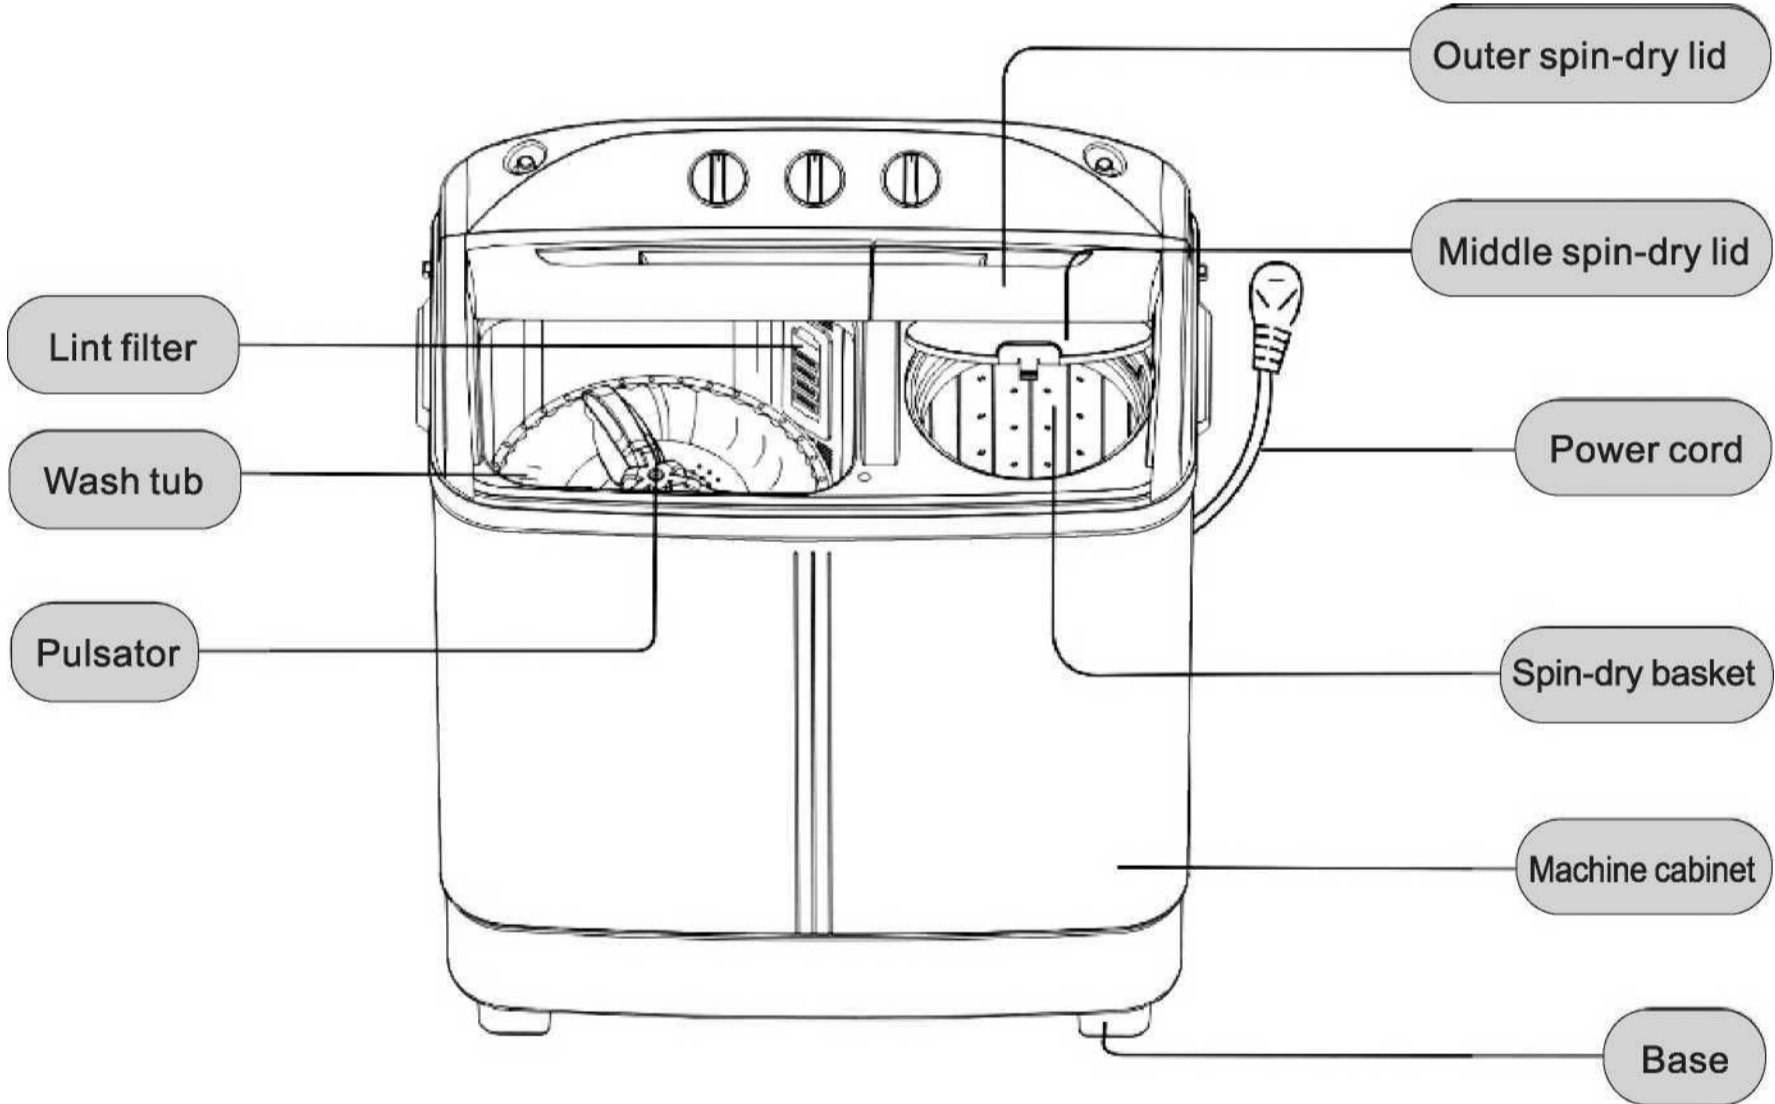
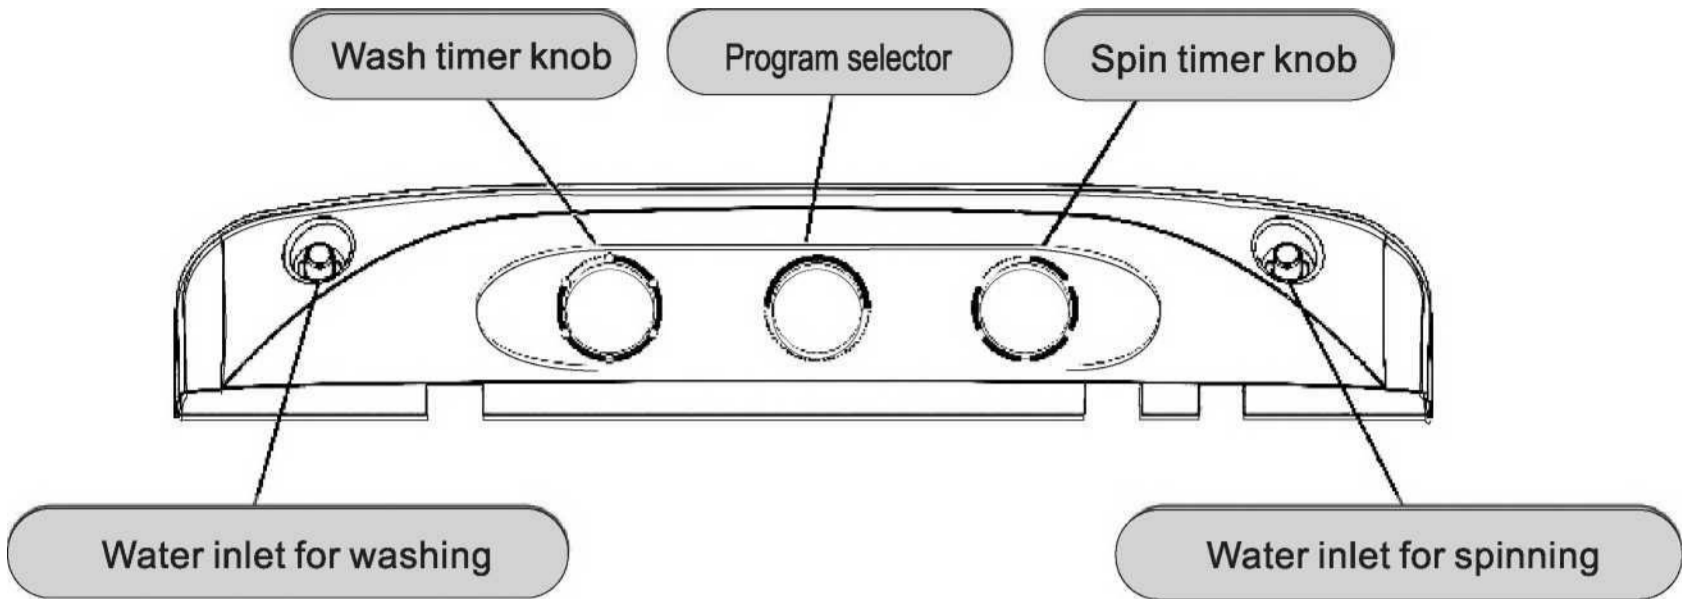



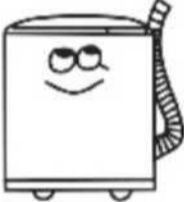

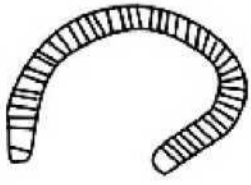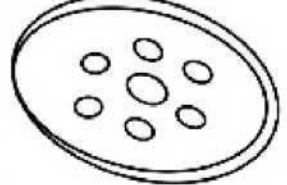
# PARTS DESCRIPTION



ACCESSORIES	
Inlet hose	Spinner cap
	
1	1

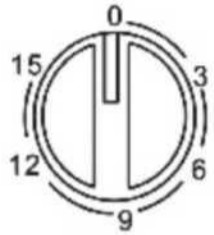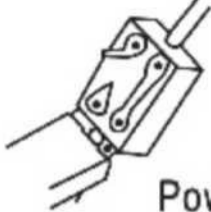


# TROUBLE SHOOTING

Problem	Check		
No washing	 <p>Is the wash timer knob at the "0" position?</p>	 <p>Power failure? Fuse blown?</p>	Is the pulsator clogged?
No spinning	 <p>Is the spin timer knob at the "0" position?</p>	 <p>Is the lid closed?</p>	 <p>Is the laundry unevenly balanced?</p>
No drain	 <p>Is the drain hose down?</p>	 <p>Is the drain hose twisted? Or is the threshold too high?</p>	 <p>Is drain hose frozen?</p>
Washing action is very slow /limited force	<ul style="list-style-type: none"> <li>■ Too many clothes?</li> <li>■ Is the V belt too loose?</li> <li>■ Is the voltage too low?</li> </ul>		

## Notes for spinning

Distribute clothing evenly in tub

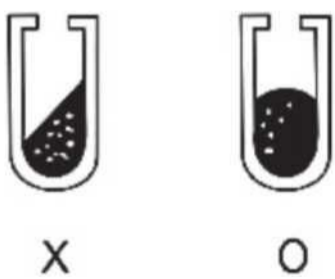

Putting the spinner cap in place

Spinner cap



└ Clothes

Spin-dry

O X X X

Never put your hands into the rotating spin tub



# GUIDANCE FOR SAFETY AND DURABILITY

Do not expose the washing machine to direct sunlight or rain



Never install the washing machine in a damp place.



Avoid splashing the machine. Do not allow the washing machine control panel to get wet



Let water drain away from the drain hose completely. Ensure the hose is not frozen in winter.



Do not pull the cord to unplug the machine.



Keep children away from the washing machine.



Keep the washing machine away from fire or heat source.



Only use normal household cleaners to clean the machine.



Do not use hot (+50 °C) water.



## WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, and or lack of experience and knowledge, unless they have been given supervision and/ or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# INSTALLATION




Always place the machine on a stable level surface

Keep the washing machine more than 5cm from the wall



Connect the drain hose

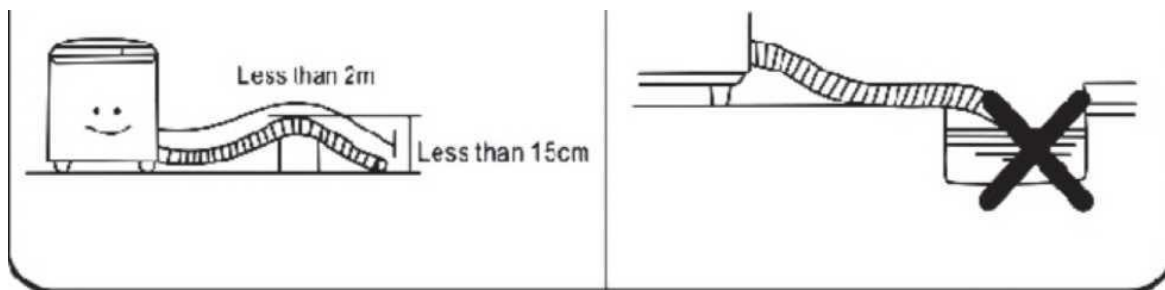

Never let the end of the drain hose be immersed in water

Connecting power and grounding


- Ensure that the machine's earth wire is connected to the power point. Never alter or disable it.
- The power socket must have an earth wire securely installed
- The appliance must be positioned where the plug is easily accessible.
- Never connect the earth wire to a gas pipe, a water tap pipe, a phone wire or lightning rod .
- Avoid electric shock and fires, do not use the machine when the power cord or plug have been damaged,
- When the supply cord is damaged it must be replaced by the manufacturer or it's service agent or a qualified person in order to avoid a hazard.




## PREPARATION BEFORE WASHING




1. Insert the power plug completely,
2. Place the end of the drain hose into the drain.
3. Connect the inlet hose.

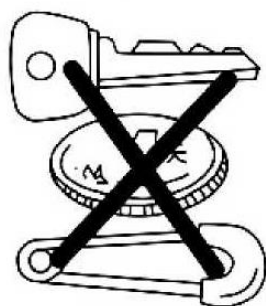


Remove things such as keys, pins and coins from the items to be washed

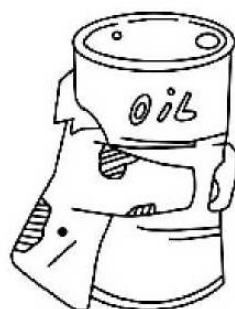

Wash oily or dyed laundry separately

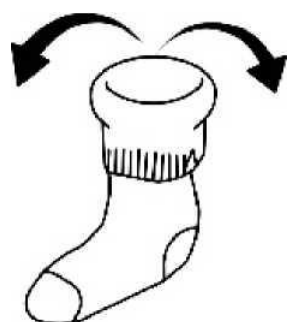


Wash fuzzy laundry inside out.

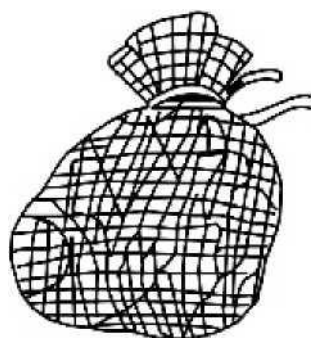

Wash delicate clothes in a nylon net bag.

## Maintenance


Remove the power plug after use

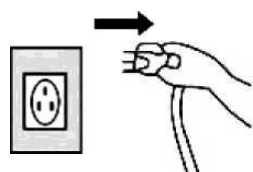

Wipe the washer with a clean dry soft cloth

**Warning!** Clean tubs completely after bleaching or starching, otherwise, some deposit will remain in the tub that may damage other laundry.


Take out the lint filter for cleaning and remember to put it back after.

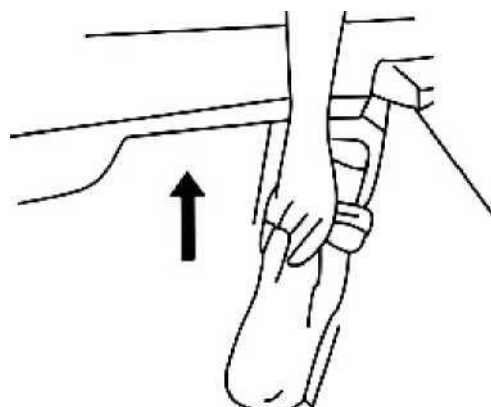

# OPERATING INSTRUCTIONS

## Washing

1. Set the "PROGRAM SELECTOR" to the Wash position,
2. Turn on the water tap let water flow into the tub in accordance with the amount of clothing to be washed. (The marks H.M.L in tub are High, Medium, Low water level)
3. Add laundry detergent.
4. Put clothes into the washer tub, one article at a time.
5. Turn the "WATER FLOW SELECTOR" to select the water flow in accordance with the fabric type of the items to be washed.
6. Turn the "WASH TIMER" knob to the desired wash time clockwise. The washing action will start.
7. When washing is completed, drain the water by setting the "PROGRAM SELECTOR" to the Drain position.

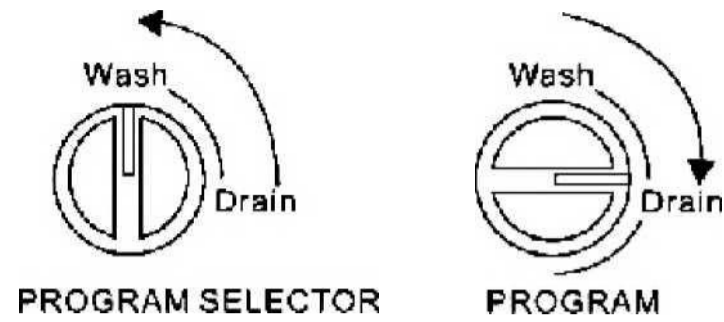

WASH ACTION	Gentle	Normal	Powerful
FABRIC TYPE	Synthetics Wool / Silk	Linen/ Cotton Work clothes	Very dirty clothing/ items to be washed
WASHING TIME	3-5min	5-12min	10-15min




## Spin Cycle

1. Transfer the clothing to the spin tub and place the spinner cap on top of the clothing.
2. Close the Inner and outer spin tub lids.
3. Turn the "SPIN TIMER" knob to the desired dry time clockwise» the spin cycle will begin.

Type of the clothes	Spin-drying time
Synthetics & Delicates	1 - 2 min
Undershirts, Cotton, Linen	3 - 5 min
Heavy items	5 min

**NOTICE: Any modification to the machine will void the warranty.**

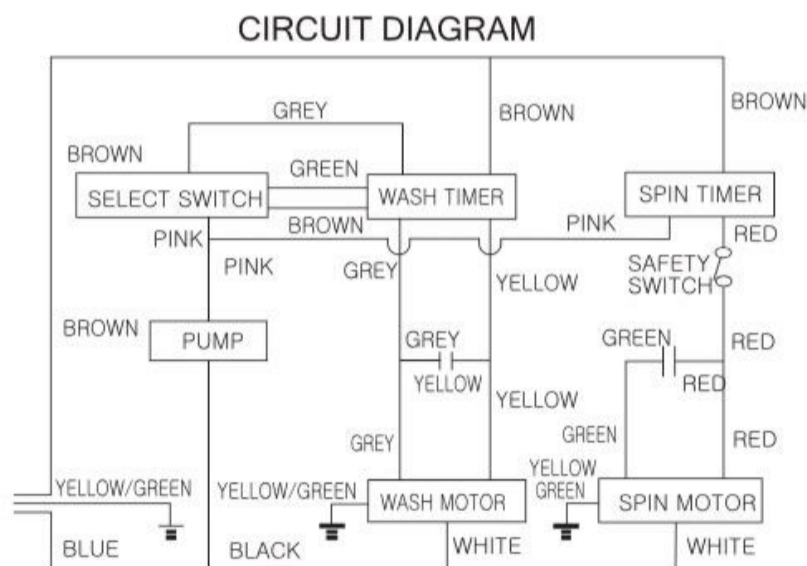

MODEL	ATT8W
WASH CAPACITY:	8.0kg
SPIN CAPACITY:	5.5kg
NET WEIGHT/GROSS WEIGHT	20/23kg

MODEL	ATT10W
WASH CAPACITY:	10.0kg
SPIN CAPACITY:	6.5 kg
NET WEIGHT/GROSS WEIGHT	22/25kg

## OPERATING INSTRUCTIONS continued

**When the washing machine is fitted with a drain pump, please pay attention to the following:**

**NOTE:** The operation of the washing machine cycles is the same with or without a drain pump.

1. When the program selector is turned to "drain" the pump if fitted starts, helping to drain away the water.
2. When the spin timer is set the spin tub rotates and the drain pump starts at the same time
3. Never hang the drain hose hook higher than 1 metre from the ground as the drain pump will not work correctly.
4. Check the drain hose when the pump is working but the water does not drain away. Move the hose down lower until the water drains out.
5. **Note:** Drain pump power is 30W.



Worldwide Appliances Pty Limited  
A.B.N. 45868077422

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

## WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

## PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at [www.artusi.com.au](http://www.artusi.com.au). Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

## WARRANTY

### 1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods

Freestanding Cookers - Gas and Electric Models (900mm Width)

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in

12 months warranty products:

Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances\* – Benchtop Models and Portable Gas Models

### 2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor\*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in artusi products.

### 3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

**Continued over...**

#### 4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

#### 5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

#### 6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

#### 7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you

for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### 8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

\*To locate your closest artusi authorised service agent please contact us on 1300 652 100 or visit [www.artusi.com.au](http://www.artusi.com.au)

ALL SERVICE CALLS MUST BE BOOKED THROUGH AN AUTHORISED DEALER OR WARRANTY DEPARTMENT ON 1300 652 100 OR [stokesaps.com.au/artusi-service](http://stokesaps.com.au/artusi-service)

01032014



Warranty Card tear off

WARRANTY REGISTRATION CARD  
01052013

Please complete and send to ARTUSI at: REPLY PAID 83617  
LEICHHARDT NSW 2040

Last Name:		First Name:	
Address:			
State:	Postcode:	Email:	
Home Phone:		Mobile:	
Purchase Date:    /    /		(Please attach proof of purchase to validate warranty)	

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ARTUSI on 1300 694 583)
1	
2	
3	
4	

01032014







#### DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)  
48-50 MOORE STREET  
LEICHHARDT  
F 02 8569 4699

VIC, TAS & SA  
1211 TOORAK ROAD  
CAMBERWELL  
F 03 9809 2155

QLD  
1/42 CAVENDISH ROAD  
COORPAROO  
F 07 3397 0850

WA & NT  
UNIT 10/55 HOWE STREET  
OSBORNE PARK  
F 08 9201 9188

NZ  
PO BOX 11160  
SOCKBURN CHRISTCHURCH  
F 03 344 5906

P: 1300 649 583

ARTUSI.COM.AU

