



ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

Honda Pilot 2003–08

Resetting the power window control unit is required after performing the following procedures:

- Disconnecting the battery.
 - Removing the No.79 (**20 A**) fuse in the under-hood subfuse box.
 - Disconnecting the 18P connector from the power window control unit.
 - Removing the window regulator, glass or glass run channel.
 - Disconnecting the driver's door wire harness.
1. Turn the ignition switch off, then back ON (II).
 2. Move the driver's window all the way down by using the driver's switch; when the window reaches the bottom, hold the driver's window switch in the DOWN position for **2 seconds**.
 3. Move the driver's window all the way up without stopping by using the driver's switch; when the window reaches the top, hold the driver's window switch in the UP position for **2 seconds**.

If the window does not work in AUTO, reset the power window control unit according to the above procedures again.

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.