 


Mini cordless electric chain saw

Operating Instructions

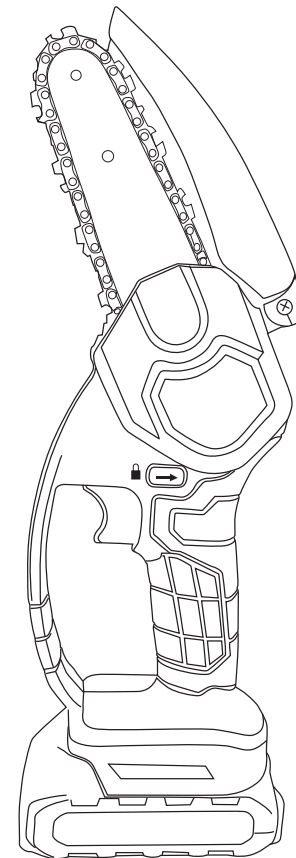

Read through carefully and understand these instructions before use.



CHARGING CHAINSAW

GENERAL SAFETY RULES

(FOR ALL BATTERY OPERATED TOOLS)

⚠ WARNING:

Read and understand all instructions. Failure to follow all instructions listed below. may result in electric shock, fire and / or serious personal injury.

Work Area

1. Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gasses, or dust. Power tools create sparks which may ignite the dust of fumes
3. Keep bystanders, children, and visitors away while operating a power tools. Distractions can cause you to lose control.

Personal Safety

1. Stay alert, watch what you are doing, and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Dress properly. Do not wear loose clothing or jewelry, contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
3. Avoid accidental starting. Be sure switch is in the locked or off position before inserting battery pack. Carrying tools with your finger on the switch or in serting the battery pack into a tool with the switch on invites accidents.

Tool Use and Care

1. Use clamos or other practical way to secure and support the workplace to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.
2. Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
3. Do not use tool if switch does not turn it on or off. A tool that cannot be controlled with the switch is dangerous and must be repaired.
4. Disconnect battery pack from tool or place the switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
5. Store idle tools away from children and other untrained persons. Tools are dangerous in the hands of untrained users.

Electrical Safety

 
4. A battery operated tool with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
5. Battery operated tool only can be used with specifically designated battery pack. Using any other batteries may create a risk of fire.
4. Remove adjusting keys or wrenches before turning the tool on. A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enable better control of the tool in unexpected situations.
6. Use safety equipment. Wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.
6. When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.
7. Maintain tools carefully, keep cutting tools sharp and clean. Properly maintained tools with sharp cutting edge are less likely to deviate and are easier to control.
8. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, ensure the tool is serviced before using. Many accidents are caused by poorly maintained tools.
9. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk for injury when used on another tool.

Scope of Application


Cutting trees in orchards, pruning branches in municipal gardens, cutting bamboo, chopping firewood at home, necessary for outdoor leisure and personal protective equipment

Installation Instructions


1. Charge the battery, the red light is on when charging, and the green light is on when the battery is fully charged.
2. Install the chain according to the operation drawing. Note: remove the battery pack during the installation and removal of the guide plate.
3. After installation, start the machine with no load and observe that the machine runs normally.
4. Should not be too used for cutting, according to the actual cutting situation, first small and then large.

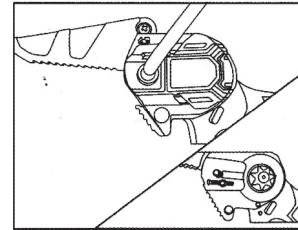

 
1. Remove the sprocket cover.

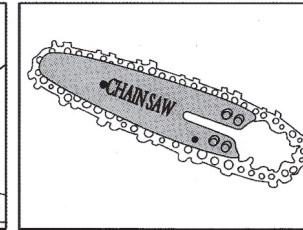

 
2. Assemble the saw chain along the guide bar.

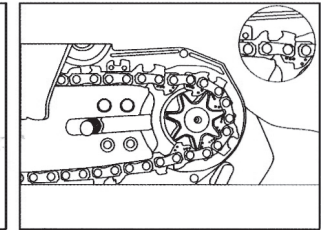

 
3. Place the chain around the sprocket and ensure guide bar line up the pin. Please note!!! The chain saw must be installed in the correct direction.

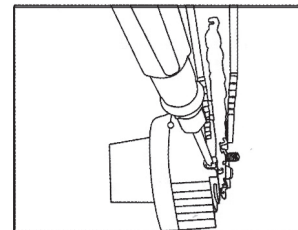

 4. Adjust the tension of chain. (If the chain saw is loose during use and cannot be tightly attached to the guide bar, you can also adjust here to tighten the chain.)

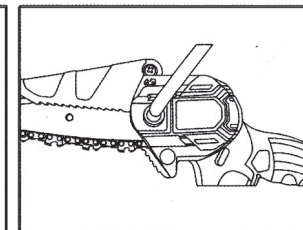

 5. Tighten the nut with the wrench.

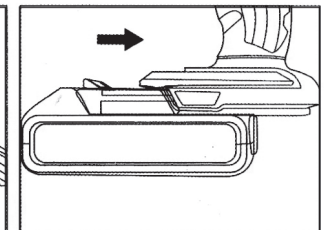

6. Insert the battery pack into the slot of bottom.